

Positioning Controller for  
3-phase Stepping Motors

# **WDP3-01X**

Edition: g156 08.03

Ident. no.: 00441109760

Software version: 02.0XX

## Safety requirements

Please read the following safety requirements prior to installation, operation, maintenance and repair of the device.

- The intended use of the device is described under “Purpose” and must be observed.
- Installation, maintenance and repair of the device shall be performed by a qualified electrician. National regulations concerning
  - accident prevention
  - installation of electrical and mechanical systems
  - radio interference suppressionshall be observed.
- The technical data of the device, particularly the ambient conditions, shall be observed.
- The device shall only be operated by trained personnel.
- The warranty is invalidated in case of unauthorized modification or opening of the device.
- Please ask your technical consultant prior to installing accessories not listed in the chapter “Description of accessories”.
- The safety symbols and notes on the device and in the manual shall be observed.

## Explanation of symbols



### **ATTENTION**

*Reference to a danger for the device or components, possibly resulting in the endangering of human life.*

### **DANGER**

*Reference to a direct endangering of human life.*



### **DANGER**

*High voltage at component, do not touch.*



### **DANGER**

*High temperature at component, do not touch.*



### **ATTENTION**

*Warning against electrostatic discharge (ESD).*

*Only touch the PC board or component in an electrostatically protected environment.*



### **NOTE**

*Important or additional information concerning the device or the manual.*

**Berger Lahr GmbH & Co. KG**

Breslauer Str. 7  
Postfach 1180

D-77901 Lahr

**Proposals  
Improvements**

**WDP3-01X**

Edition: g156 08.03  
Ident. no.: 00441109760

**Sender:**

Name:

Company/department:

Address:

Telephone no.:

Please inform us, using this form, if  
you have discovered any errors  
when reading this document.

We should also appreciate any new  
ideas and proposals.

**Proposal and/or improvements:**



## **Table of contents**

|                                              | <b>Page</b> |
|----------------------------------------------|-------------|
| <b>1 General description</b>                 | <b>1-1</b>  |
| <b>1.1 Structure and characteristics</b>     | <b>1-1</b>  |
| <b>1.2 Function</b>                          | <b>1-2</b>  |
| 1.2.1 Hardware components                    | 1-2         |
| 1.2.2 Operating modes and system environment | 1-6         |
| 1.2.3 Principle of a reference movement      | 1-11        |
| <b>1.3 Technical data</b>                    | <b>1-12</b> |
| 1.3.1 Electrical data                        | 1-12        |
| 1.3.2 Mechanical data                        | 1-16        |
| 1.3.3 Ambient conditions                     | 1-16        |
| <br>                                         |             |
| <b>2 Installation</b>                        | <b>2-1</b>  |
| <b>2.1 Scope of supply</b>                   | <b>2-1</b>  |
| <b>2.2 Accessories</b>                       | <b>2-2</b>  |
| <b>2.3 Mounting</b>                          | <b>2-3</b>  |
| <b>2.4 Wiring</b>                            | <b>2-5</b>  |
| 2.4.1 Mains connection                       | 2-7         |
| 2.4.2 Motor connection                       | 2-8         |
| 2.4.3 Signal interface                       | 2-9         |
| 2.4.4 Analog interface (OPT.1)               | 2-14        |
| 2.4.5 RS 232 serial interface (OPT.1)        | 2-16        |
| 2.4.6 RS 485 serial interface (OPT.1)        | 2-18        |
| 2.4.7 Field bus interface (OPT.1)            | 2-20        |
| 2.4.8 Encoder interface (OPT.2)              | 2-21        |
| <b>2.5 First start-up</b>                    | <b>2-24</b> |

## **Table of contents**

---

|          |                                                                     |                           |
|----------|---------------------------------------------------------------------|---------------------------|
| <b>3</b> | <b>Operation</b>                                                    | <b>Page</b><br><b>3-1</b> |
| 3.1      | <b>Functions</b>                                                    | <b>3-1</b>                |
| 3.2      | <b>Switching ON/OFF</b>                                             | <b>3-2</b>                |
| 3.2.1    | Switching on                                                        | 3-2                       |
| 3.2.2    | Operation with brake                                                | 3-3                       |
| 3.2.3    | Switching off                                                       | 3-3                       |
| 3.3      | <b>Front panel operation</b>                                        | <b>3-4</b>                |
| 3.3.1    | Parameter setting                                                   | 3-7                       |
| 3.3.2    | Position set input via front panel                                  | 3-10                      |
| 3.3.3    | Teach-in via front panel                                            | 3-11                      |
| 3.3.4    | Value display on front panel                                        | 3-12                      |
| 3.3.5    | Starting positioning and other operations                           | 3-13                      |
| 3.3.6    | Manual movement via front panel                                     | 3-14                      |
| 3.4      | <b>Manual mode via inputs/outputs</b>                               | <b>3-15</b>               |
| 3.5      | <b>Teach-in mode via inputs/outputs</b>                             | <b>3-17</b>               |
| 3.6      | <b>Position processing via inputs/outputs</b>                       | <b>3-19</b>               |
| 3.7      | <b>Upload/download via serial interface</b>                         | <b>3-22</b>               |
| 3.8      | <b>On-line command processing via serial or field bus interface</b> | <b>3-23</b>               |
| 3.9      | <b>Electronic gear</b>                                              | <b>3-26</b>               |
| 3.10     | <b>Oscillator mode via inputs/outputs</b>                           | <b>3-28</b>               |
| 3.11     | <b>Oscillator mode via analog interface</b>                         | <b>3-30</b>               |
| 3.12     | <b>Rotation monitoring</b>                                          | <b>3-32</b>               |

|            |                                   |                           |
|------------|-----------------------------------|---------------------------|
| <b>4</b>   | <b>Malfunctions</b>               | <b>Page</b><br><b>4-1</b> |
| 4.1        | Status indicators                 | 4-1                       |
| 4.2        | Troubleshooting tables            | 4-3                       |
| 4.3        | Repair work                       | 4-6                       |
| 4.4        | Storage, shipment                 | 4-6                       |
| <b>5</b>   | <b>Customer service</b>           | <b>5-1</b>                |
| <b>6</b>   | <b>Appendix</b>                   | <b>6-1</b>                |
| 6.1        | Device variants                   | 6-1                       |
| <b>6.2</b> | <b>Description of accessories</b> | <b>6-2</b>                |
| 6.2.1      | Fan                               | 6-4                       |
| 6.2.2      | Mains filter                      | 6-5                       |
| 6.2.3      | MP 923 interface converter        | 6-6                       |
| 6.2.3.1    | General description               | 6-6                       |
| 6.2.3.2    | Technical data                    | 6-6                       |
| 6.2.3.3    | Setup                             | 6-7                       |
| 6.2.3.4    | Status indicators                 | 6-7                       |
| 6.2.4      | MP 924 interface distributor      | 6-9                       |
| 6.2.4.1    | General description               | 6-9                       |
| 6.2.4.2    | Technical data                    | 6-9                       |
| 6.2.4.3    | Setup                             | 6-10                      |
| 6.2.5      | Additional bleed resistor         | 6-11                      |
| <b>6.3</b> | <b>Glossary</b>                   | <b>6-12</b>               |
| <b>6.4</b> | <b>Abbreviations</b>              | <b>6-15</b>               |

## ***Table of contents***

---

|          |                                  |                     |
|----------|----------------------------------|---------------------|
| <b>7</b> | <b>Index</b>                     | <b>Page<br/>7-1</b> |
| <b>8</b> | <b>Corrections and additions</b> | <b>8-1</b>          |



# 1 General description

## 1.1 Structure and characteristics

*Purpose* The WDP3-01X positioning controller (fig. 1-1) can be used for controlling the following BERGER LAHR 3-phase stepping motors with a rated motor voltage of 325 V:

- WDP3-014 motors of type size 90, (VRDM 39xx/50 LWB)
- WDP3-018 motors of type size 110, (VRDM 311xx/50 LWB)


One unit is used for controlling one axis. The difference between the positioning controllers WDP3-014 and WDP3-018 consists in their power ratings.

*Interface options and device functions*

Additional interface options allow you to implement various device functions. The controller detects the interfaces installed and configures itself automatically for the appropriate device functions.

*Documentation*

This documentation describes installation and operation via the front panel keys and the inputs/outputs of the signal interface as well as via the analog and encoder interfaces. Setup and operation of the unit via the serial interface or the field bus interface (e.g. Interbus-S or Profibus-DP) are described in separate documentations on the appropriate interface.

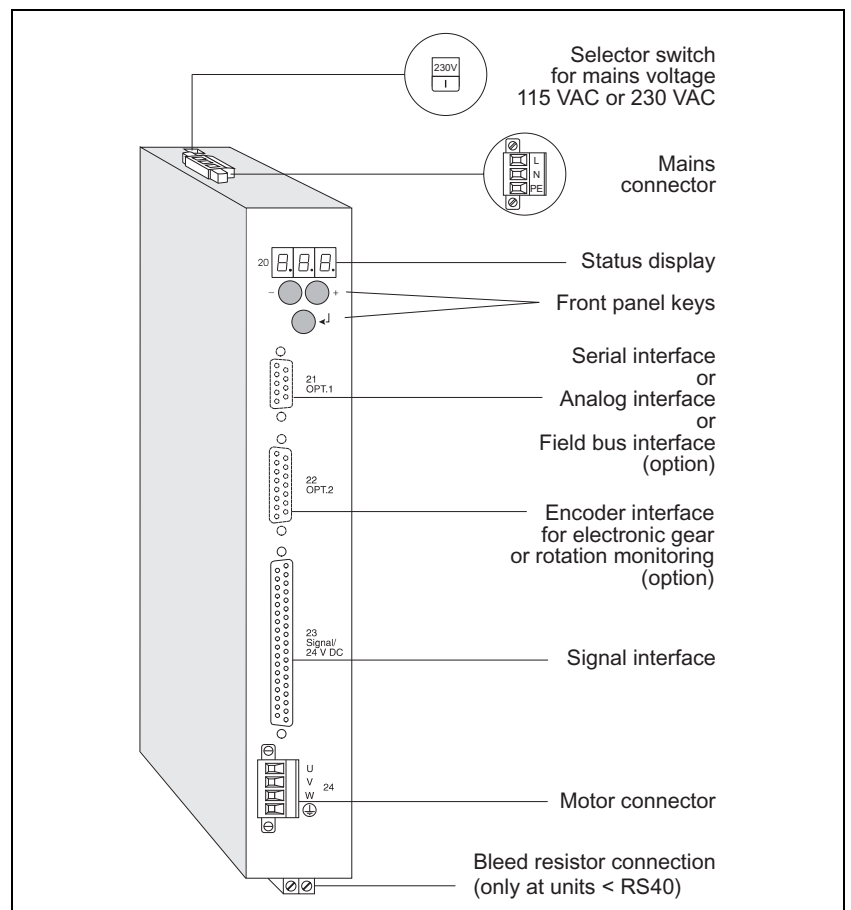

*Fig. 1-1 WDP3-01X positioning controller*

# General description


## 1.2 Function

### 1.2.1 Hardware components


The actual function of the controller depends on the configuration of the interface adapter slots OPT.1 and OPT.2.

*Interface configuration for OPT.1 and OPT.2*

The following configuration options are available:

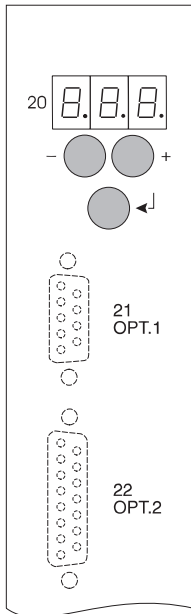

| Interface adapter slot |               | Device functions                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|------------------------|---------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| OPT.1                  | OPT.2         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Not installed          | Not installed | <b>Oscillator mode or position processing via inputs/outputs</b> <ul style="list-style-type: none"> <li>Position processing via inputs/outputs or front panel, or oscillator mode via inputs/outputs (can be set with front panel parameter P00)</li> <li>Manual mode via inputs/outputs or front panel</li> <li>Teach-in mode via inputs/outputs or front panel</li> <li>Position and parameter input via front panel</li> </ul>                                                                                                                                                                                       |
|                        | RS 422        | <ul style="list-style-type: none"> <li>Rotation monitoring, if parameter P20 = 2 and P00 ≠ 3</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| RS 232 or RS 485       | Not installed | <b>Position processing via inputs/outputs or on-line command processing via serial interface</b> <p>Position processing or on-line command processing (can be set with front panel parameter P00):</p> <ul style="list-style-type: none"> <li>In position processing mode, the unit has the same scope of functions as the basic unit, except oscillator mode via inputs/outputs. In addition, positions and parameters can be uploaded and downloaded via the serial interface.</li> <li>In on-line command processing mode, the unit has the same scope of functions as the unit with field bus interface.</li> </ul> |
|                        | RS 422        | <ul style="list-style-type: none"> <li>Rotation monitoring, if parameter P20 = 2 and P00 ≠ 3</li> <li>Electronic gear, If P00 = 3, the gear parameters are input via the front panel or a download via the serial interface. If P00 = 2, the gear parameters are input using on-line command processing via serial interface.</li> </ul>                                                                                                                                                                                                                                                                                |

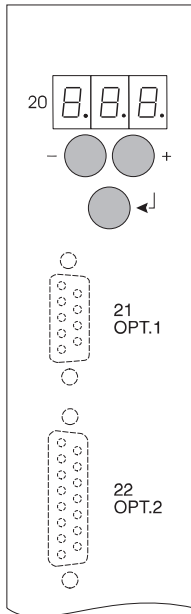

| Interface adapter slot                                              |                  | Device functions                                                                                                                                                                                                                                                                                                                            |
|---------------------------------------------------------------------|------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| OPT.1                                                               | OPT.2            |                                                                                                                                                                                                                                                                                                                                             |
| Field bus<br>(e.g. IBS<br>or<br>PBDP)                               | Not<br>installed | <b>On-line command processing via field bus interface</b> <ul style="list-style-type: none"> <li>– Manual mode via inputs/outputs or front panel</li> <li>– On-line command processing<br/>The controller (slave) receives commands from a master unit and executes them immediately.</li> <li>– Parameter input via front panel</li> </ul> |
|                                                                     | RS 422           |                                                                                                                                                                                                                                                                                                                                             |
| Analog<br>(ANOZ)                                                    | Not<br>installed | <b>Oscillator mode via analog interface</b> <ul style="list-style-type: none"> <li>– Oscillator mode via analog<br/>±10 V input</li> <li>– Manual mode via inputs/outputs or front panel</li> <li>– Parameter input via front panel</li> </ul>                                                                                              |
|                                                                     | RS 422           |                                                                                                                                                                                                                                                                                                                                             |
| Not<br>installed<br>or<br>RS 232<br>or<br>RS 485<br>or<br>field bus | RS 422           | <b>Electronic gear via encoder interface</b> <ul style="list-style-type: none"> <li>– Electronic gear,<br/>via encoder interface</li> <li>– Manual mode via inputs/outputs or front panel</li> <li>– Parameter input via front panel or serial interface or field bus</li> </ul>                                                            |



**NOTE**

The interfaces installed in the unit are indicated on the type plate. The following abbreviations are used:

- |            |                                     |
|------------|-------------------------------------|
| ANOZ       | Analog interface                    |
| CAN        | CAN-Bus interface                   |
| IBS        | Interbus-S interface                |
| PBDP       | Profibus-DP interface               |
| RS 232     | Serial interface RS 232             |
| LRS 422-IN | Encoder interface RS 422            |
| RS 485 LS  | Serial interface RS 485             |
| RS 485 HS  | Serial interface RS 485 for SUCONET |

## General description

A built-in PC board in Eurocard format type size 6 HU accommodates the processor unit, the power controller and the power supply unit. The most important function blocks of the unit are evident in the block diagram (fig. 1-2).

### Power supply unit

The power supply unit is a high-performance AC/DC converter which can be connected to 115 VAC or 230 VAC mains supplies. The energy recovered by a motor during braking can be temporarily stored up to a certain extent. To dissipate a higher amount of braking energy, an external bleed resistor must be connected.

### External bleed resistor

### DC/DC power supply unit

A DC/DC power supply unit generates various voltage levels for supplying the internal electronic circuits of the processor unit from the 24 VDC voltage supply.



### NOTE

The electronic circuitry of the processor unit consists of PELV circuits as defined in the DIN standard VDE 0160.

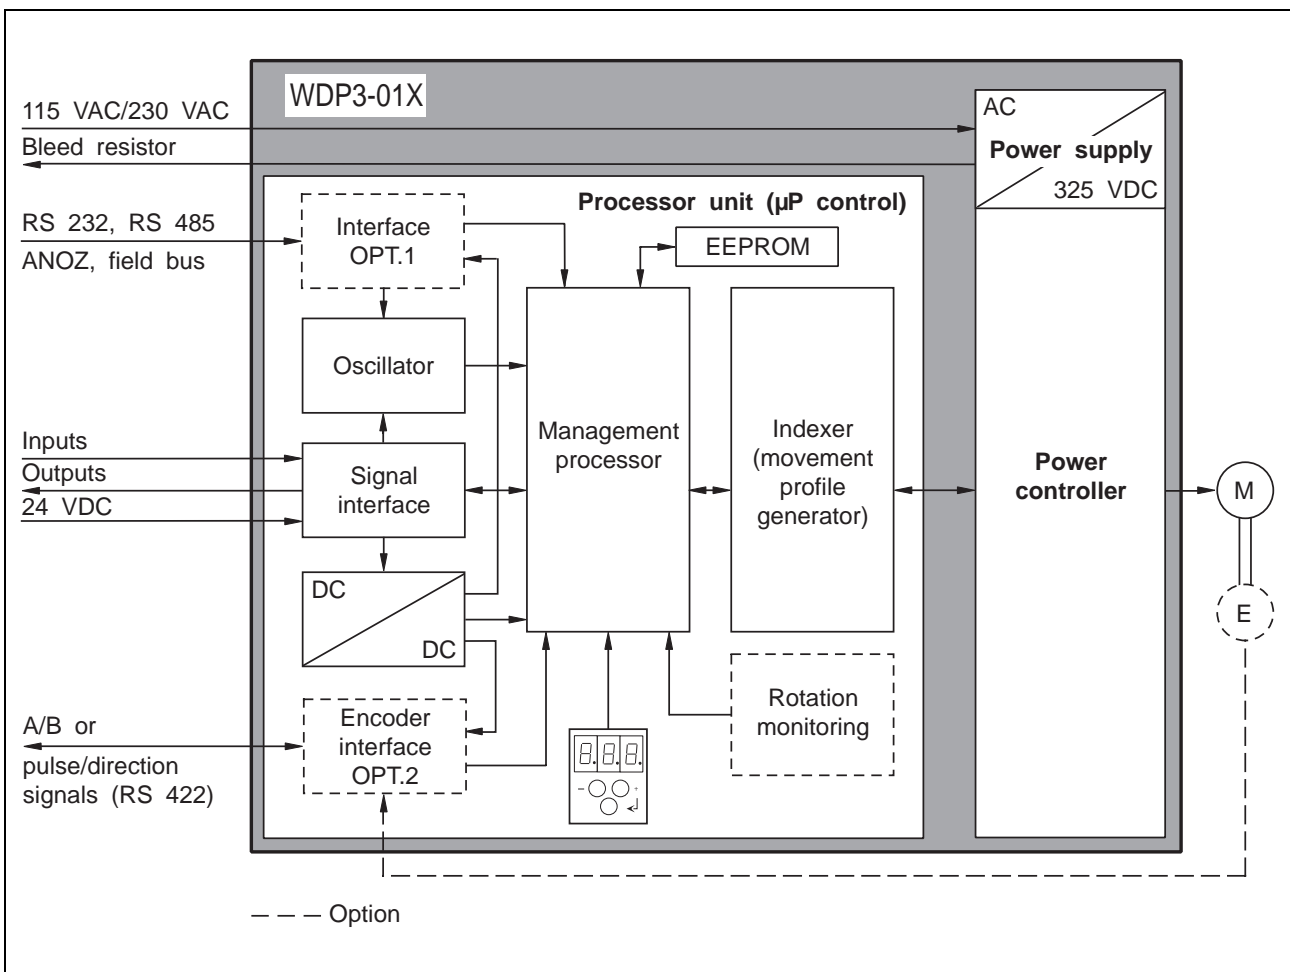


Fig. 1-2 Block diagram

|                             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|-----------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>Signal interface</i>     | The signal interface carries the input and output signals as well as the 24 VDC signal voltage.                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <i>Field bus interface</i>  | The controller can be provided with a standardized field bus interface (e.g. Interbus-S or Profibus-DP). This enables the controller to receive and execute commands from a master unit.                                                                                                                                                                                                                                                                                                                                        |
| <i>Encoder interface</i>    | The encoder interface RS 422 (OPT.2) can be used for implementing an electronic gear or for rotation monitoring. This depends on the setting of the parameters P00 and P20.                                                                                                                                                                                                                                                                                                                                                     |
| <i>Oscillator</i>           | The oscillator generates the movement frequency for controlling the stepping motor. The oscillator may be controlled either by an analog signal (in the range of $\pm 10$ V) if the controller has an analog interface (ANOZ), or by the digital signal FH/ $\overline{\text{FL}}$ of the signal interface, if the controller does not feature an additional interface in the OPT.1 adapter slot. The two speeds $f_H$ and $f_L$ for oscillator mode via the inputs/outputs of the signal interface are set on the front panel. |
| <i>Management processor</i> | The microprocessor controls all interfaces. The movement profile generator is activated by the microprocessor.                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <i>Status display</i>       | Three seven-segment displays indicate positions, parameters, operating states and any malfunctions.                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <i>Keys</i>                 | Three keys are provided on the front panel for operation and error acknowledgement.                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <i>Indexer</i>              | The indexer (movement profile generator) generates a pulse sequence from the current movement parameters (travel, speed and acceleration). This pulse sequence is passed on to the power controller.                                                                                                                                                                                                                                                                                                                            |
| <i>Power controller</i>     | The power controller converts the pulse sequence received from the indexer into a current pattern for controlling the 3-phase stepping motor. The motor phase current can be set with a front panel parameter.                                                                                                                                                                                                                                                                                                                  |

## General description

### 1.2.2 Operating modes and system environment

The controller can be operated in different system environments, depending on the OPT.1 and OPT.2 interface configuration.

The following operating modes are available:

*Manual mode* In manual mode, positions are approached using the inputs and outputs or the front panel keys. Acceleration and manual speeds of the 3-phase stepping motor can be adjusted.

*Teach-in mode* In teach-in mode, positions are approached and stored using the inputs and outputs or the front panel keys by manual control. A maximum of ten positions can be stored.

*Position processing* In this mode (fig. 1-3), up to ten stored positions can be selected and approached via inputs or front panel control. The positions can be input via teach-in, via the front panel or via download through the serial interface and are stored in the same locations in the controller. Positioning can be effected with absolute values (relative to a reference point) or with incremental values (relative to the current position). The system of either absolute or incremental dimensions is selected on the front panel (P21 parameter). Before executing a positioning operation in the system of absolute dimensions, a reference movement must be executed towards a limit switch or a reference switch (see chapter 1.2.3). Alternatively, the current position can be set as the reference position (current position = 0).

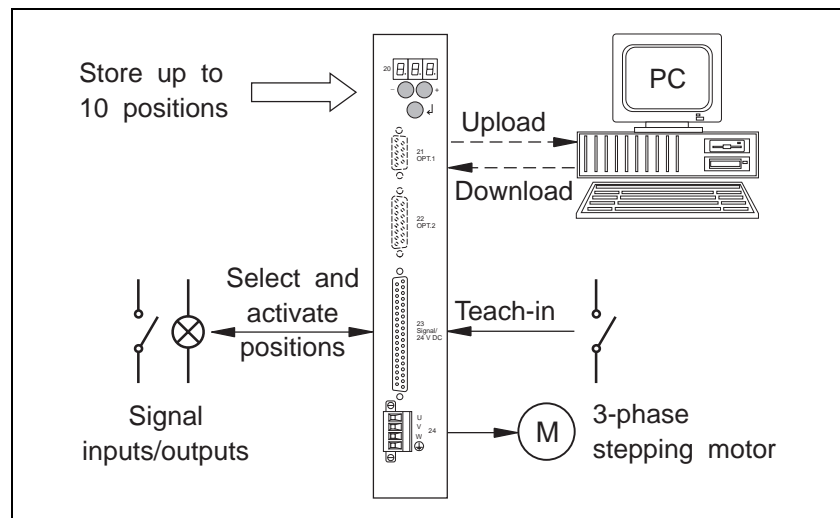


Fig. 1-3 Position processing

#### Upload/download via serial interface

If the controller is provided with a serial interface and position processing mode has been selected (parameter P00 = 0), positions and parameters can be read (upload) or input (download) through the serial interface. Uploading and downloading is described in the separate On-line Command Processing and Upload/Download via Serial Interface documentation.

## On-line command processing

The on-line command processing mode is active if the controller is provided with a serial interface and the parameter P00 = 2 has been set or if the controller is provided with a field bus interface. In this mode, single movement commands and other commands are transmitted to the controller and executed immediately. A comprehensive command set for programming is available for on-line command processing. The signal inputs and outputs of the controller can be freely used in this mode. This operating mode is described in a separate documentation for each appropriate interface.

## Communication via the serial interface

If the controller is provided with a serial interface (RS 232 or RS 485), either position processing mode or on-line command processing mode can be selected via the front panel (parameter P00).

### RS 485 network

Several controllers with RS 485 interfaces can be addressed from a master control unit or a PC. The network address of the controller is set on the front panel with the P60 parameter. The master controller must use a polling command to specify the unit with which it wants to communicate (see separate documentation).

## Communication via field bus network

A standardized field bus interface, e.g. Interbus-S (fig. 1-4) or Profibus-DP, can be used for transmitting movement and other commands from a master unit to the controller for execution; see on-line command processing.

Communication via a field bus interface is described in a separate documentation for each appropriate interface.

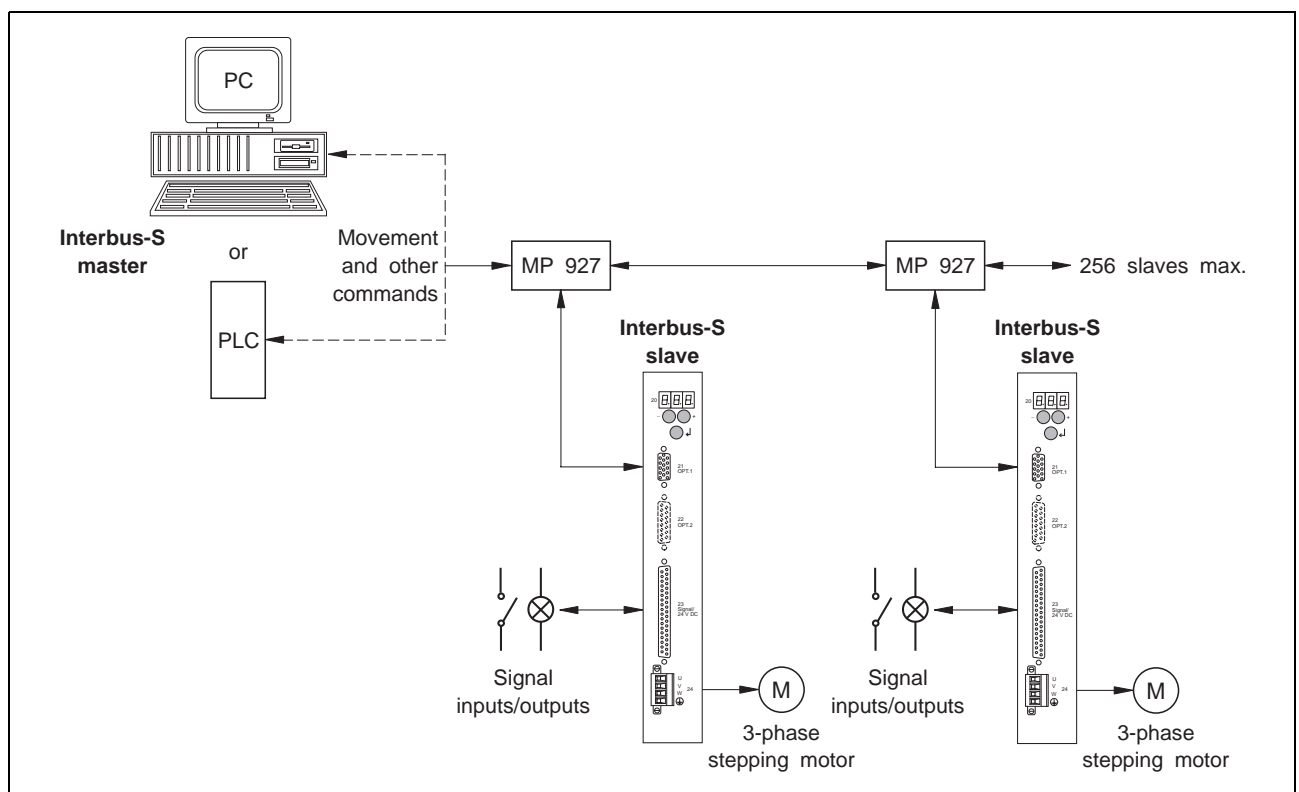


Fig. 1-4 Interbus-S network configuration

## General description

### Oscillator mode via inputs/outputs

When using a basic unit without any additional interfaces, oscillator mode via inputs/outputs (fig. 1-5) is available. In this mode, the movement frequencies  $f_H$  and  $f_L$  are set via the front panel and activated via the FH/FL and START inputs. This mode is set with the parameter P00.

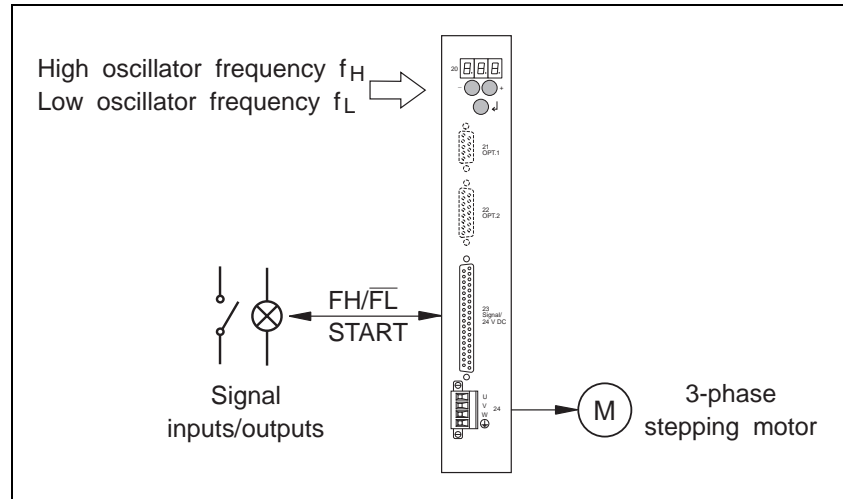


Fig. 1-5 Oscillator mode via inputs/outputs

### Oscillator mode via analog interface

In this operating mode (fig. 1-6), an external voltage is fed in via input ANA\_IN and converted to a voltage-proportional pulse frequency for controlling the stepping motor. The standard voltage range is -10 V to +10 V, however, it can also be freely selected.

Maximum speed and maximum acceleration as well as the voltage at maximum speed, the voltage range, the zero window parameter and the braking ramp are set as parameters via the front panel.

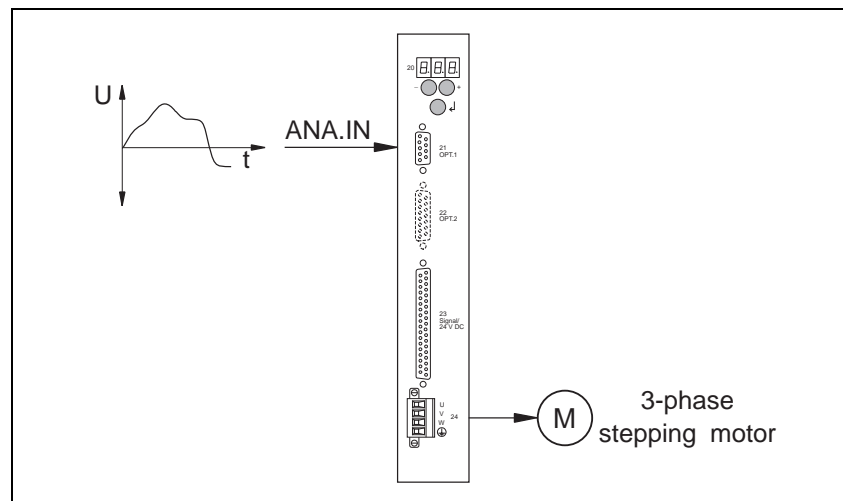


Fig. 1-6 Oscillator mode via analog interface



*Electronic gear* If an RS 422 interface (OPT.2) is installed in the controller, an electronic gear can be implemented. For this purpose, the parameter P00 = 3 must be set on the front panel.

In electronic gear mode (fig. 1-7), an external signal and a gear ratio combine to determine the shaft movement.

The externally supplied pulses are counted as A/B encoder signals or pulse/direction signals and multiplied with a gear ratio (parameters P51 and P52). These pulses are used as the reference variable for the stepping motor position.

The pulse memory is cleared whenever an error occurs or when resetting input AUTOM from 1 to 0.

The maximum acceleration, the gear ratios and the encoder signal type are set via front panel parameters.

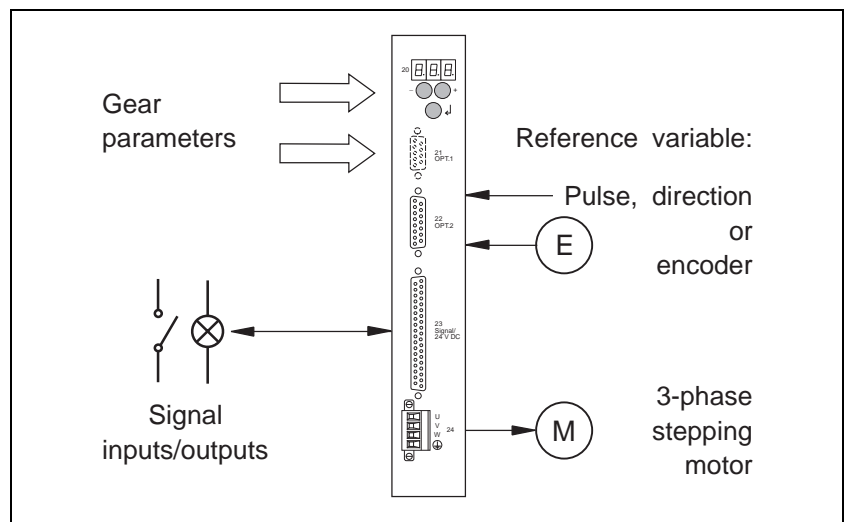


Fig. 1-7 Operation with electronic gear



**NOTE**  
 If the controller features a field bus or serial interface in addition, the electronic gear parameters can be set using on-line command processing.

## General description

### Rotation monitoring

If an RS 422 interface (OPT.2) is installed in the controller, motor rotation monitoring can be implemented (fig. 1-8). For this purpose, the parameter P20 = 2 must be set on the front panel and a type 1000 encoder must be installed on the stepping motor.

The rotation monitoring feature compares the set and actual positions of the motor and reports a rotation monitoring error if the difference between set and actual position exceeds a certain limit value (18 steps).



#### NOTE

Rotation monitoring is possible in all modes except electronic gear mode (P00 = 3).

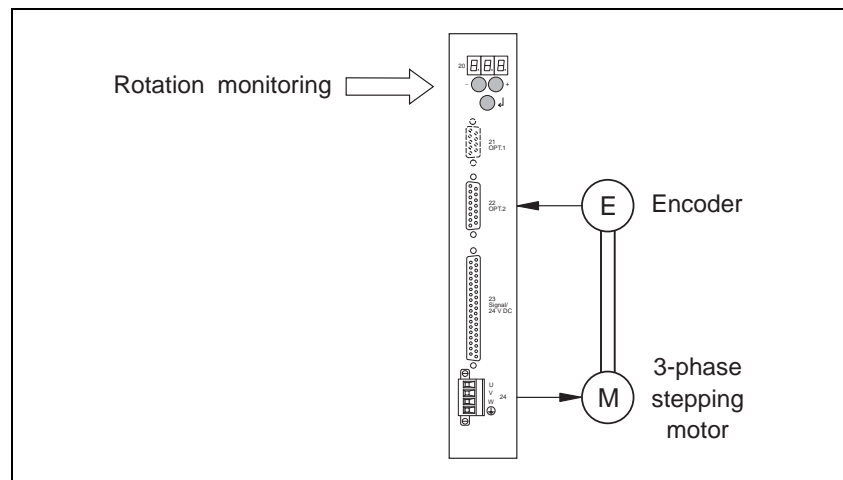


Fig. 1-8 Rotation monitoring

### Manual and automatic mode

The input AUTOM can be used (depending on the interface configuration) for selecting one of the following modes:

#### Input AUTOM = 0

- Parameter and data input via front panel or
- Manual mode or
- Teach-in mode or
- Upload/download (only with serial interface, if parameter P00 = 0)

#### Input AUTOM = 1

- Oscillator mode via inputs/outputs or
- Oscillator mode via analog interface or
- Position processing mode via inputs/outputs or
- Electronic gear (only with encoder interface, if parameter P00 = 3)



#### NOTE

In on-line command processing mode, mode selection via the AUTOM input is only possible if parameter P69 = 1.


**1.2.3 Principle of a reference movement**

When executing a reference movement, a reference point is approached which is defined as the zero point for the system of dimensions. All subsequent absolute positioning operations refer to this zero point.


Reference movements can be made towards the CCW limit switch, CW limit switch and the reference switch.

The reference movement is executed at reference speed REF\_IN (parameter P06). The shaft moves away from the limit or reference switch at reference speed REF\_OUT (parameter P07).

Figures 1-9 and 1-10 illustrate the principles of various reference movements.

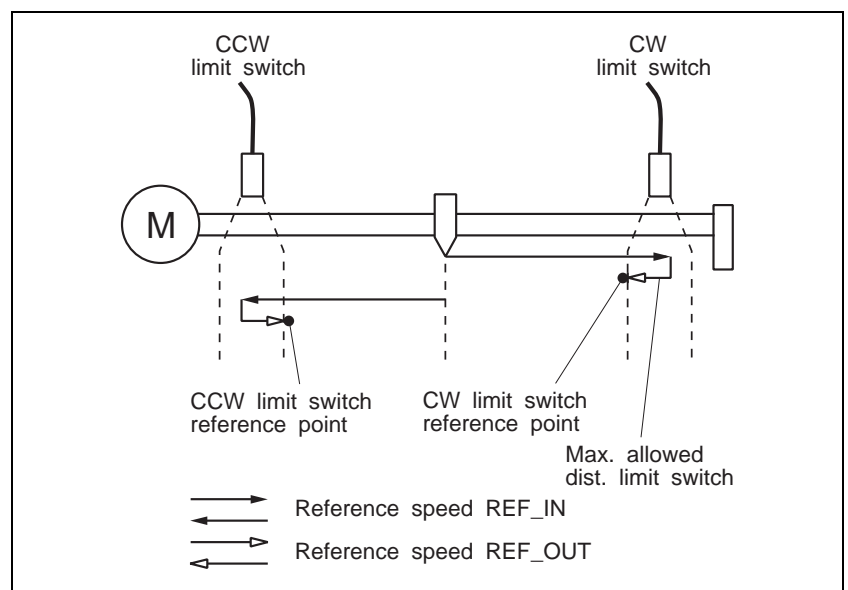

*Fig. 1-9 Principle of reference movement to limit switch*

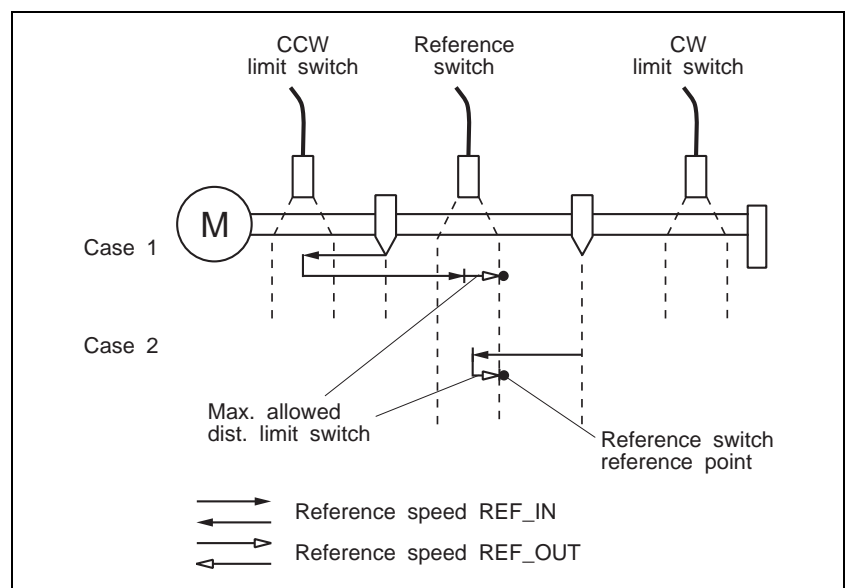

*Fig. 1-10 Principle of reference movement to reference switch*

## General description

---

### 1.3 Technical data

|       |                        |                            |                                                           |
|-------|------------------------|----------------------------|-----------------------------------------------------------|
| 1.3.1 | <b>Electrical data</b> | Supply voltage, selectable | 115 VAC<br>230 VAC to 240 VAC                             |
|       |                        | <i>Mains connection</i>    |                                                           |
|       |                        | Power loss                 |                                                           |
|       |                        | WDP3-014                   | 60 W max.                                                 |
|       |                        | WDP3-018                   | 110 W max.                                                |
|       |                        | Mains frequency            | 50 to 60 Hz                                               |
|       |                        | Mains error protection     | one period                                                |
|       |                        | Nominal power consumption  |                                                           |
|       |                        | WDP3-014                   | 3.6 A at 115 VAC<br>2.0 A at 230 VAC                      |
|       |                        | WDP3-018                   | 6.5 A at 115 VAC<br>3.5 A at 230 VAC                      |
|       |                        | Starting current           | maximum 70 A                                              |
|       |                        | Leakage current (IEC60990) | Motor cable <5m : <10mA<br>Motor cable 5-50m : <50mA      |
|       |                        | External fuse              | 6 A at 230 VAC<br>10 A at 115 VAC<br>("K" characteristic) |



#### NOTE

The devices may only be operated with fuse protection as specified above.

If necessary, use r.c.c.b. protection according to DIN VDE 0664 part 1/10.85.

|                                               |                   |                     |
|-----------------------------------------------|-------------------|---------------------|
| <i>System supply<br/>via signal interface</i> | Supply voltage    | 20 VDC to 30 VDC    |
|                                               | Power consumption | 1 A max.            |
|                                               | Ripple voltage    | < 2 V <sub>pp</sub> |



#### NOTE

The 24 V voltage supply must meet the specifications of the DIN standard VDE 0160 on safety extra-low voltage.

|                         |                                         |                                                                                               |
|-------------------------|-----------------------------------------|-----------------------------------------------------------------------------------------------|
| <i>Motor connection</i> | Phase current                           |                                                                                               |
|                         | WDP3-014                                | 0.1 A to 2.5 A                                                                                |
|                         | WDP3-018                                | 0.1 A to 6.8 A                                                                                |
|                         | No. of steps                            | 1000 steps per revolution                                                                     |
|                         | Pulse rate                              | maximum 40 kHz                                                                                |
|                         | Motor voltage                           | 3 x 325 VDC (connected to mains)                                                              |
|                         | Motor cable (observe EN 60204 standard) |                                                                                               |
|                         | Length                                  | maximum 50 m                                                                                  |
|                         | Cross-section                           | ≥ 0.75 mm <sup>2</sup> at cable length ≤ 30 m<br>≥ 1.5 mm <sup>2</sup> at cable length > 30 m |
|                         | Shield connection                       | On both ends                                                                                  |

### Signal interface

#### Electrical characteristics of the inputs

Polarity reversal protection, hardware debounce (settling time 1.0 ms to 1.5 ms)

Signal voltage  $U_{\text{high}}$  15 VDC to 30 VDC

Signal voltage  $U_{\text{low}}$  < 5 VDC

Input current at 24 VDC 7 mA

#### Electrical characteristics of the outputs

Short-circuit protected, inductive loadability

Maximum output voltage 30 VDC

Maximum switching current 50 mA

Voltage drop at 50 mA < 2 VDC



#### **DANGER**

**The signal inputs and the 24 VDC supply voltages at the signal connection must be definitely isolated from mains. The maximum voltage towards ground must not exceed 60 VDC or 25 VAC.**

### Serial interfaces

#### RS 232 interface (option)

Internal leakage resistance towards ground 1 Mohm

#### RS 485 four-wire interface (option)

Short-circuit protected 150 mA max. at short-circuit

Internal leakage resistance towards ground 1 Mohm

Supply voltage output 12 VDC  
for MP 923 (10 VDC min., 18 VDC max.)

## General description

---

*Field bus interfaces* All field bus interfaces are opto-isolated and have an internal leakage resistance towards ground of 1 Mohm.

### **Interbus-S slave interface (IBS option)**

Two-line remote bus

4 data words

Transmission rate 500 kbauds

Distance to adjacent station 400 m max.

### **Profibus-DP slave interface (PBDP option)**

The transmission rate is set by the master (12 Mbauds max.).

Line length see Profibus-DP specifications

### **CAN-Bus interface (CAN option)**

Transmission rate 10 kbauds to 500 kbauds

Line length

at 10 kbauds 7000 m max.

at 125 kbauds 570 m max.

at 500 kbauds 80 m max.

### **SUCONET slave interface (RS 485 HS option)**

Bus interface RS 485 HS

Bus cable Shielded twisted-pair cable

Transmission speed 187.5 kbauds and 375 kbauds



#### **NOTE**

*The BERGER LAHR controller automatically adjusts to the baud rate of the master; it is therefore not necessary to set it on the unit.*

*Analog interface*

### **ANOZ (option)**

Internal leakage resistance towards ground 1 Mohm

#### **Electrical characteristics of the analog input**

1 signal input, opto-isolated  $\pm 10$  V

Precision  $\pm 0.25\%$ ,  $\pm 25$  mV

A/D converter resolution 3700 steps min.

Input resistance  $> 10$  kohms

#### **Electrical characteristics of the analog output**

1 signal output, opto-isolated, short-circuit protected 10 V (30 mA max.)

Precision  $\pm 0.5\%$ ,  $\pm 50$  mV

D/A converter resolution 200 steps min.

|                          |                                                                                                      |
|--------------------------|------------------------------------------------------------------------------------------------------|
| <i>Encoder interface</i> | <b>RS 422 IN signal level (option)</b>                                                               |
|                          | Short-circuit protected                                                                              |
|                          | Internal leakage resistance towards ground 1 Mohm                                                    |
|                          | Maximum cable length 100 m                                                                           |
|                          | Wire cross-section 2 x 0.5 mm <sup>2</sup> and 10 x 0.25 mm <sup>2</sup>                             |
|                          | Shield connection On both ends                                                                       |
|                          | Supply voltage output 5 VDC ±5% (300 mA max.)<br>or<br>12 VDC, 10 VDC min./18 VDC max. (200 mA max.) |

|                          |                                                                                                                                                                   |
|--------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <i>Device protection</i> | Protection and monitoring circuits: Power amplifier overtemperature, short-circuit between motor leads (no ground fault protection), undervoltage and overvoltage |
|                          | Type of protection IP 20 acc. to EN 60529: 1991                                                                                                                   |

### Regulations

*Machinery directive* Insofar as the machinery corresponds to the machinery directive 89/392/EEC and the configuration meets the EMC test conditions specified by BERGER LAHR, conformity with the machinery directive is hereby certified.

*EMC directive* In a configuration which meets the EMC test conditions specified by BERGER LAHR, conformity with the following standards can be certified in accordance with the EMC directive 89/336/EEC:

|                                |                                                                            |
|--------------------------------|----------------------------------------------------------------------------|
| Radio interference suppression | according to EN 50081-2: 1993 (when using a mains filter, see Accessories) |
| Static discharge               | according to EN 60801-2: 1993, class 4                                     |
| Burst                          | according to IEC 801-4: 1988, class 4                                      |

- BERGER LAHR EMC test requirements*
- Use a BERGER LAHR motor lead. Length of motor lead is 10 m.
  - Insert a BERGER LAHR mains filter into the mains supply line.
  - Install the device into the control cabinet.
  - Use BERGER LAHR signal cables and wire them according to the documentation.
  - Run signal, mains and motor cables separately (non-parallel) and ensure a large surface area contact between the cable shield and ground on both ends.
  - Install the mains filter directly at the device. If this is not possible, use a shielded connection line (1 m max.) between filter and device.
  - Ensure a large surface area contact between filter, device and ground (mount on a grounded metal plate or on control cabinet rear panel, or use a ground strap).

|                                        |                                                                                                                         |
|----------------------------------------|-------------------------------------------------------------------------------------------------------------------------|
| <i>Low-voltage equipment directive</i> | Pursuant to the low-voltage equipment directive 73/23/EEC, the products are in conformity with the following standards: |
|                                        | Protection class 1 acc. to prEN 50178: 1994                                                                             |
|                                        | Overvoltage Category III acc. to prEN 50178: 1994                                                                       |
|                                        | Contamination Grade 2 acc. to prEN 50178: 1994                                                                          |

## General description

### Approvals

prEN 50178 classification VDE 0160/11.94

EN 60950 classification VDE 0805: 1993 + A2: 1994

UL 508 file no. 153 659

|              |                           |                        |                                |
|--------------|---------------------------|------------------------|--------------------------------|
| <b>1.3.2</b> | <b>Mechanical data</b>    | Dimensions (fig. 1-11) | 249 x 240 x 52 mm              |
|              |                           | Weight                 | approx. 3200 g                 |
| <b>1.3.3</b> | <b>Ambient conditions</b> | Ambient temperature    | 0°C to +50°C                   |
|              |                           | Storage temperature    | -25°C to +70°C                 |
|              |                           | Relative humidity      | 15% to 85%<br>(non-condensing) |

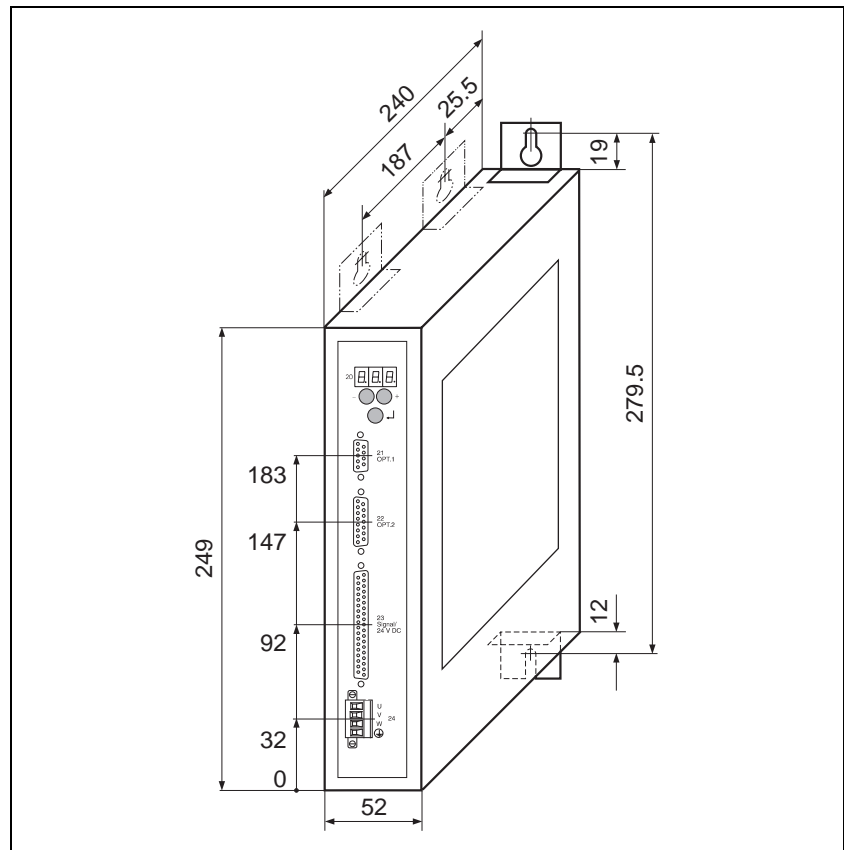


Fig. 1-11 Dimensions of WDP3-014 and WDP3-018



## 2 Installation

### 2.1 Scope of supply

The delivery must be checked for completeness.

The scope of supply (fig. 2-1) comprises:

| Qty. | Designation                                                                                                                                      |
|------|--------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | WDP3-014 positioning controller<br>or<br>WDP3-018 positioning controller                                                                         |
| 1    | Product insert                                                                                                                                   |
| 1    | Ground strap                                                                                                                                     |
| 4    | Mounting bracket                                                                                                                                 |
| 1    | Fan for WDP3-018                                                                                                                                 |
| 1*   | Diskette with PC program for upload/download via serial interface<br>or<br>diskette with device master file for setup with Profibus-DP interface |

\* If the appropriate interface is installed.

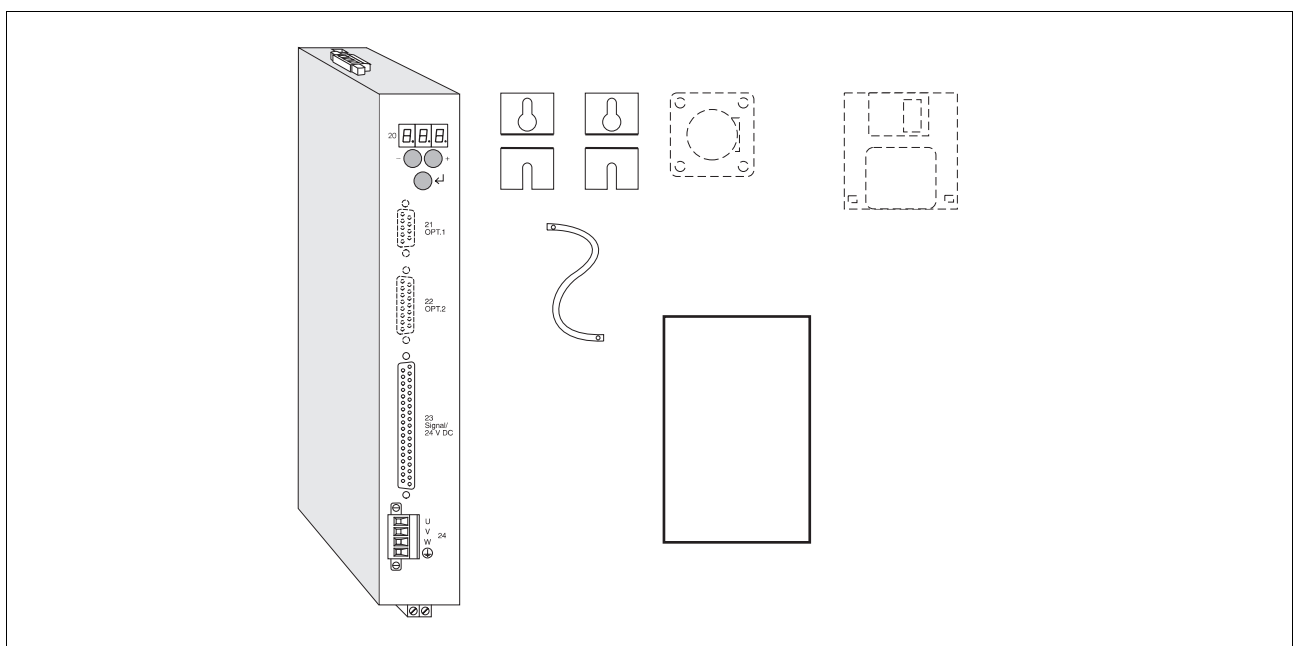


Fig. 2-1 Scope of supply

## 2.2 Accessories

The following accessories are available and must be ordered separately (for a description of accessories, see chapter 6.2):

- 3-phase stepping motor
- ANOZ/customer signal cable
- MP 927 Interbus-S interface adapter
- Interbus-S/MP 927 signal cable
- Cable for encoder
- Fan for WDP3-014
- Motor cable 3 x 1.5 mm and 2 x 1.0 mm
- Motor cable 3 x 2.5 mm and 2 x 1.5 mm
- Mains filter
- Profibus-DP bus terminal or adapter
- MP 923 interface converter RS 232/RS 485
- RS 232/PC signal cable
- RS 422 IN/customer signal cable
- MP 924 interface distributor RS 485
- RS 485 LS/MP 923 signal cable
- RS 485 LS/MP 924 signal cable
- Signal connection/customer signal cable
- Signal connection signal cable
- Signal cable for adapter slot OPT.1
- Signal cable (encoder) for adapter slot OPT.2
- Signal cable (pulse, direction) for adapter slot OPT.2
- Set of connectors (all sub-D connectors)



**NOTE**

*Refer to the sales documentation of the WDP3-01X positioning controller for the accessory order numbers.*

## 2.3 Mounting



**DANGER**

*The supply voltage must be disconnected whenever assembly work is carried out.*



**NOTE**

*When installing the unit, a minimum clearance of 10 cm must be ensured above and below the unit or to the adjacent unit. Leave 15 cm free in front of the unit to give room for fitting the cable connections.*

The unit should be installed vertically in a control cabinet and may have to be ventilated externally (see fig. 2-3).

You can use the mounting brackets to install the unit on the rear or on the left (fig. 2-2).

Fasten the ground strap supplied at the bottom front of the unit with screws and connect it to a grounded part of the control cabinet.



**ATTENTION**

*Clean air supply must be ensured in the control cabinet.*

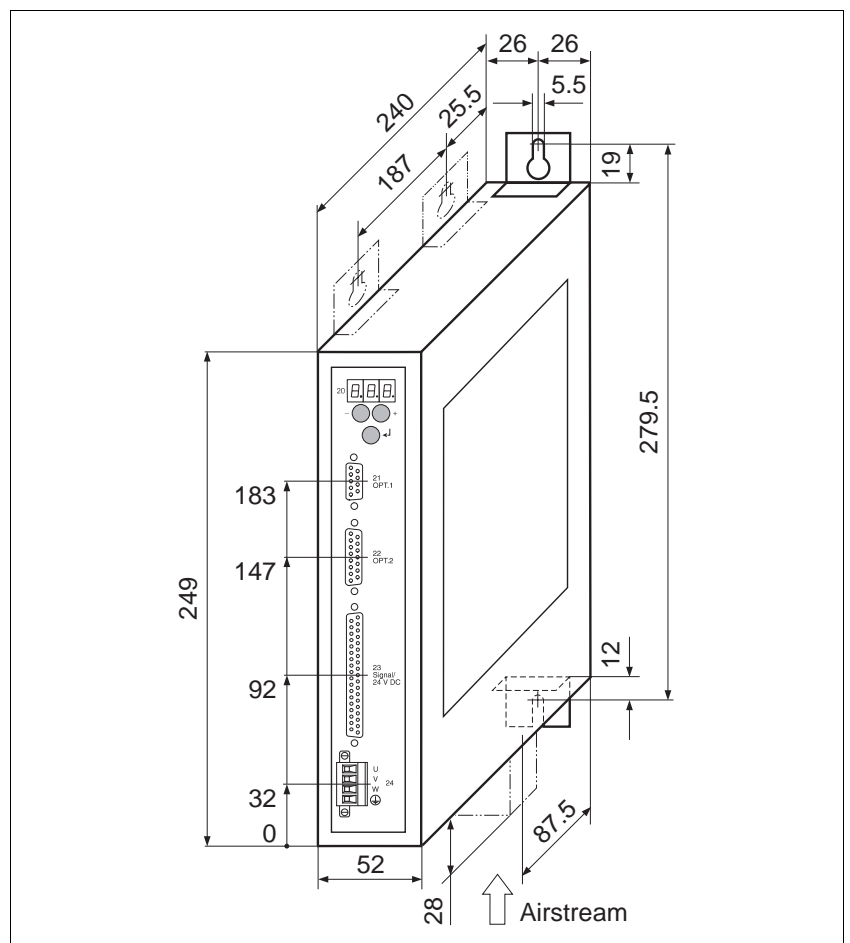


Fig. 2-2 Installation

**Ventilation** The WDP3-014 positioning controller can be operated without ventilation, if the minimum clearances (10 cm) are observed.


The WDP3-018 positioning controller can be operated without ventilation up to a phase current of 3.7 A and an ambient temperature of 50°C. If these values are exceeded or if the status display "07" repeatedly indicates overtemperature, the unit must be ventilated externally (fig. 2-3).

**Accessory fan** The fan on the WDP3-018 unit must be mounted at the bottom. The airstream must pass through the unit from bottom up (see fig. 2-2). The arrow on the fan indicates the direction of the airstream if the fan is connected correctly (red = 24 VDC, black = 24 VGND). Fasten the fan with four screws at the bottom of the unit after having cut out the grille (see chapter 6.2.1). Connect the fan to the external 24 VDC voltage supply.



**NOTE**

*Ensure that the airstream in and around the unit is unobstructed.*

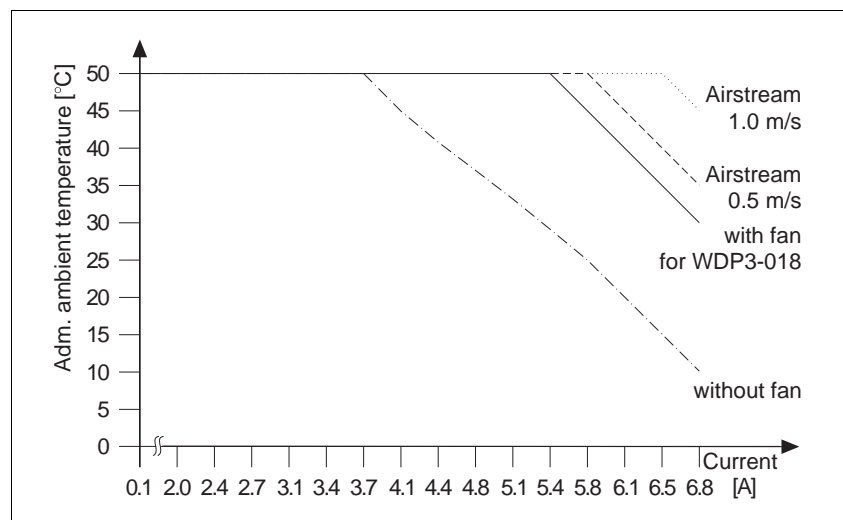

*Fig. 2-3 Temperature – phase current – ventilation*

2.4 Wiring



**DANGER**

*The supply voltage must be disconnected whenever wiring work is carried out.*



**DANGER**

*The motor connection is internally linked to the supply connection (325 V).*



**ATTENTION**

*Wiring work may only be carried out in accordance with the DIN standard VDE 0105 by trained personnel.*



**ATTENTION**

*Run and shield power, motor and signal cables separately.*



**ATTENTION**

*Free, unassigned pins must not be wired.*



**ATTENTION**

*The unit must have external fuse protection (see chapter 1.3).*



**ATTENTION**

*Good heat dissipation must be ensured when installing a bleed resistor (accessory).*



**NOTE**

*See chapter 1.3 for the technical data of the individual connections and interfaces.*



**NOTE**

*The interfaces installed in the unit are indicated on the type plate.*



**NOTE**

*The ground connections of the interfaces in adapter slots 21 and 22 are internally interconnected.*



**NOTE**

*Shield connection on both ends ensures optimum protection against interference for digital systems. However, it must be noted that differential potentials (in particular in case of supply from different sources) may cause inadmissible currents in the shields. Such interfering currents can be avoided by using suitable bonding conductors. The following cross-sections should be used for bonding lines:*

*16 mm<sup>2</sup> Cu for bonding lines up to 200 m*

*25 mm<sup>2</sup> Cu for bonding lines longer than 200 m*

# Installation

## Wiring layout

Figure 2-4 illustrates the wiring layout of the positioning controller with the available interfaces.

Communication between PC and positioning controller is effected either through the RS 232 or RS 485 serial interface or the field bus interface (e.g. Interbus-S), depending on the actual interface configuration.



### NOTE

If the controller is provided with an RS 485 interface and the PC with an RS 232 interface, an interface converter (e.g. MP 923, see chapter 6.2.3) must be used.



### NOTE

With an RS 485 interface, the MP 924 interface distributor can be used for implementing a network (see chapter 6.2.4).



### NOTE

With an RS 232 interface, networking is not possible.



### NOTE

With an Interbus-S interface, the MP 927 Interbus-S interface adapter must be used (see separate documentation).



### NOTE

With a Profibus-DP interface, e.g. a bus terminal must be used.

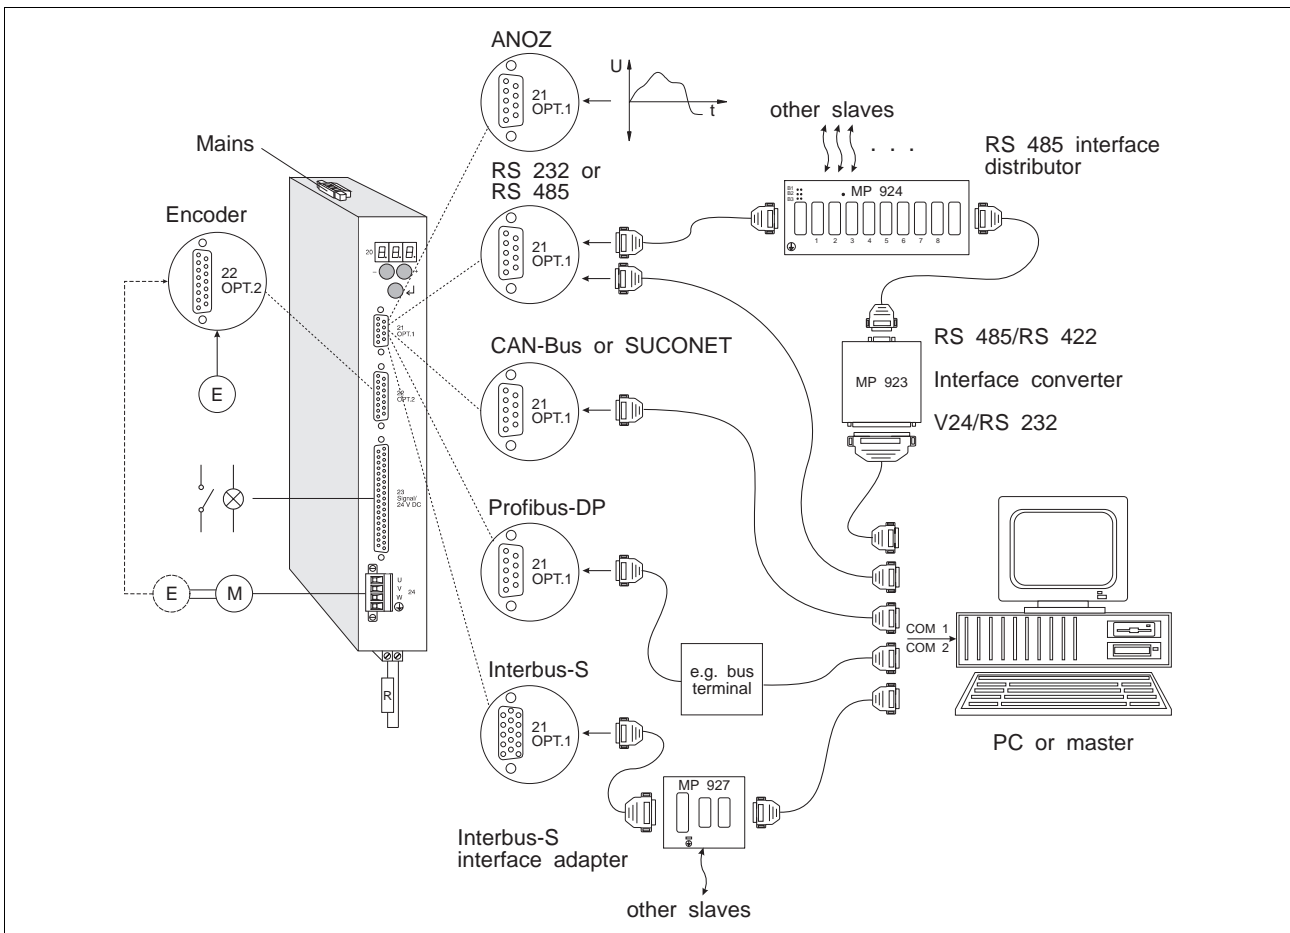


Fig. 2-4 Wiring diagram

## 2.4.1 Mains connection



1. Set the 115 V or 230 V mains voltage on the selector switch at the unit top.



### **ATTENTION**

**The setting must correspond to the actual mains voltage available.**

2. Mount wire end ferrules on the device end of the mains power cable.
3. Fasten three litz wires (fig. 2-5) with screws:

|    |                            |
|----|----------------------------|
| L  | Phase (115 VAC or 230 VAC) |
| N  | Neutral                    |
| PE | Protective conductor       |



### **NOTE**

*A mains filter can be inserted in order to shield the unit against interference (see chapter 6.2.2).*

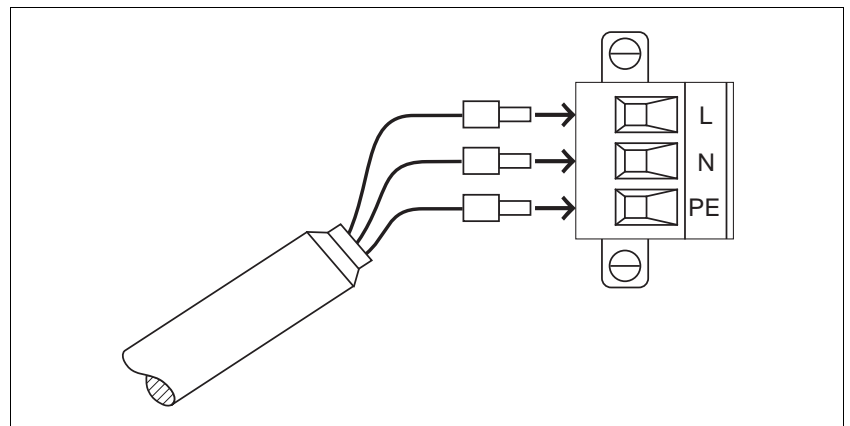


Fig. 2-5 Mains connection – device end

# Installation

## 2.4.2 Motor connection

1. Release the two screws and remove the connector (fig. 2-7) from the unit.
2. Preparation the motor cable (fig. 2-6), an mount wire end ferrules on the device end of the motor cable..
3. Fasten the litz wires with screws.
4. Fasten the connector to the front panel (item 24).

Preparation the motor cable

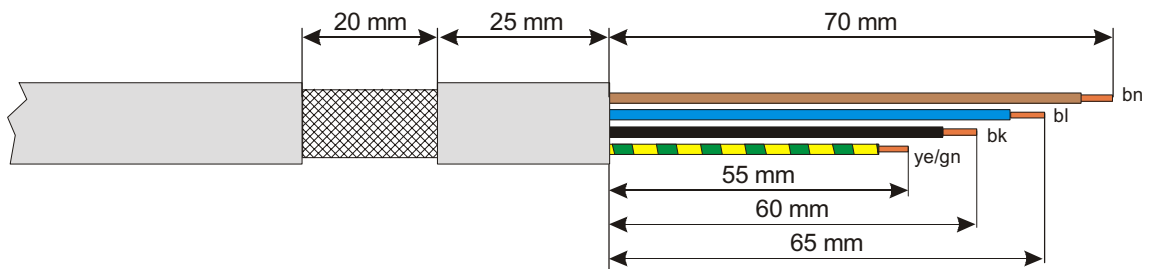


Fig. 2-6 Preparing the motor cable

Motor connection

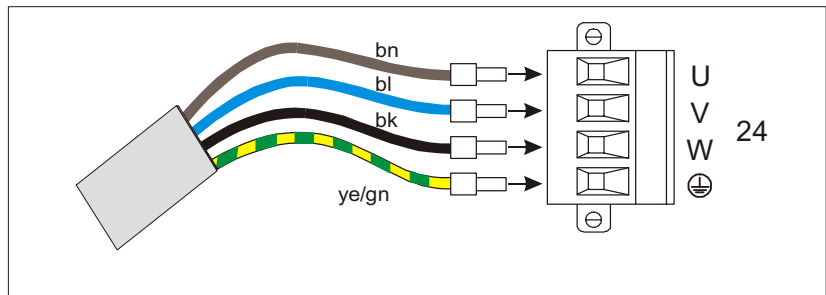


Fig. 2-7 Motor connection



### NOTE

An additional bleed resistor can be used for dissipating a higher amount of braking energy (see chapter 6.2.5).



### NOTE

The sense of rotation of the motor can be inverted by interchanging two motor leads. In this case, also the limit switch inputs LIMP and LIMN as well as the A and  $\bar{A}$  signals of any rotation monitoring encoder connected must be interchanged.





**ATTENTION**

**Connect the shield of the motor cable after the following assembly instruction!**

*Installing the motor cable*

The following items required for installing the motor cable on the side of the device are included in the accessory bag:

| Qty. | Designation                       |
|------|-----------------------------------|
| 1    | Terminal angle                    |
| 1    | Shield terminal                   |
| 1    | Screw M4 x 8                      |
| 2    | Screw M3 x 8 with serrated Washer |
| 1    | Serrated washer M4                |

*Installing the terminal angle*




**DANGER**

**Electric shock from high voltage!**

**If longer screws are used, they may contact live parts. This may result in fatal injury.**

The terminal angle is fastened to the bottom of the device with the screws and serrated washers supplied with the device. Correct installation of the terminal angle is extremely important for grounding the motor cable shield and for strain relief.

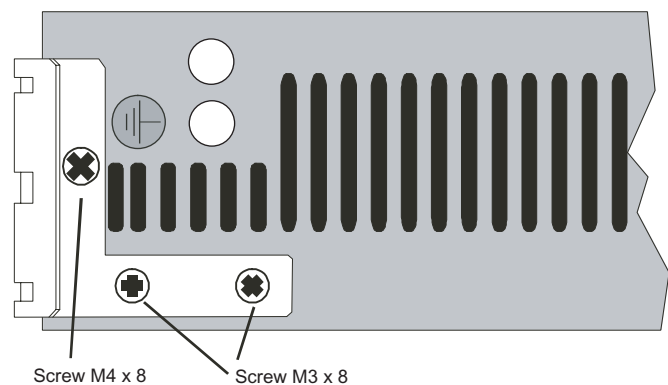

(connection of second protective conductor)

Fig. 2-8 Installing the terminal angle



**DANGER**


**Electrical device with higher deflection current > 3,5mA.**

**Connection of a second protective conductor absolutely necessary. Please note minimum cross-section according to IEC 60364-5-54.**

## Installation


---

*Fastening the shield terminal* The left position is provided for fastening the cable to the fastening bracket.

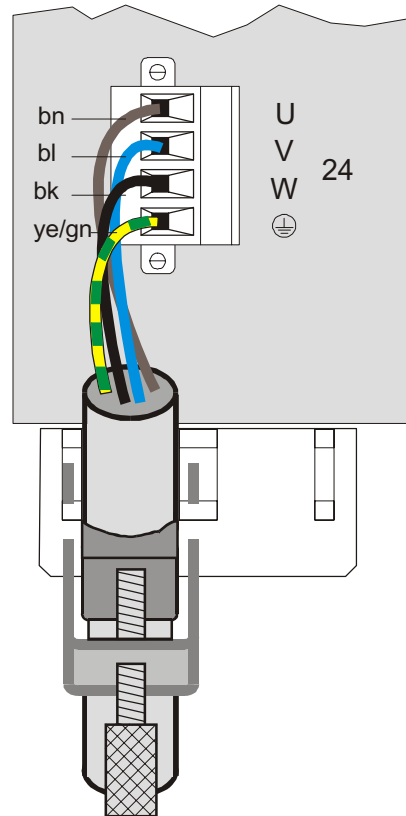

*Fig. 2-9 Fastening the shield terminal*

The shield angle is suspended on the bracket from below. The motor cable is not subject to strain and securely grounds shield when installed in this way.

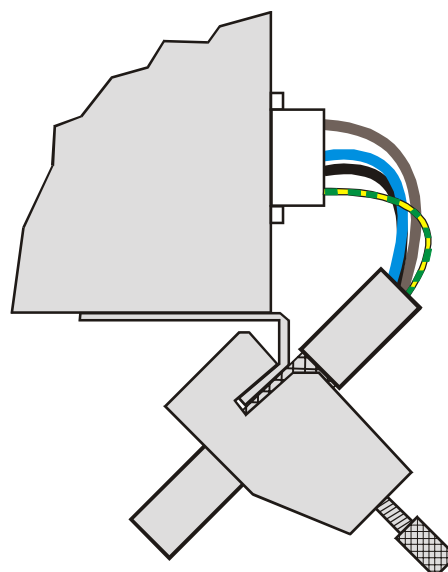

*Fig. 2-10 Installed motor cable*

2.4.3 Signal interface

1. Solder the litz wires to the connector as required for the desired operating mode. The available operating modes depend on the device variant; see chapter 3.



**ATTENTION**  
*Free, unassigned pins must not be wired.*



**NOTE**  
*Connect system supply voltage ground to protective ground.*

2. Push the shield back and fix with a cable tie.
3. Insert two threaded bolts (fig. 2-7) into the connector shell.
4. Place the connector into the connector shell.
5. Fasten the cable and the shield to the connector shell with screws, providing for strain relief.



**ATTENTION**  
*Ensure good electrical contact between the shield and the connector shell.  
Connect the shield on both ends.*

6. Assemble the two parts of the connector shell with two screws.
7. Fasten the connector to the front panel (item 23) with screws.



**DANGER**  
*All signal connections must be definitely isolated from mains. The voltage towards ground must not exceed 60 VDC or 25 VAC. All signal circuits are internally grounded via a 1 Mohm bleed resistor.*

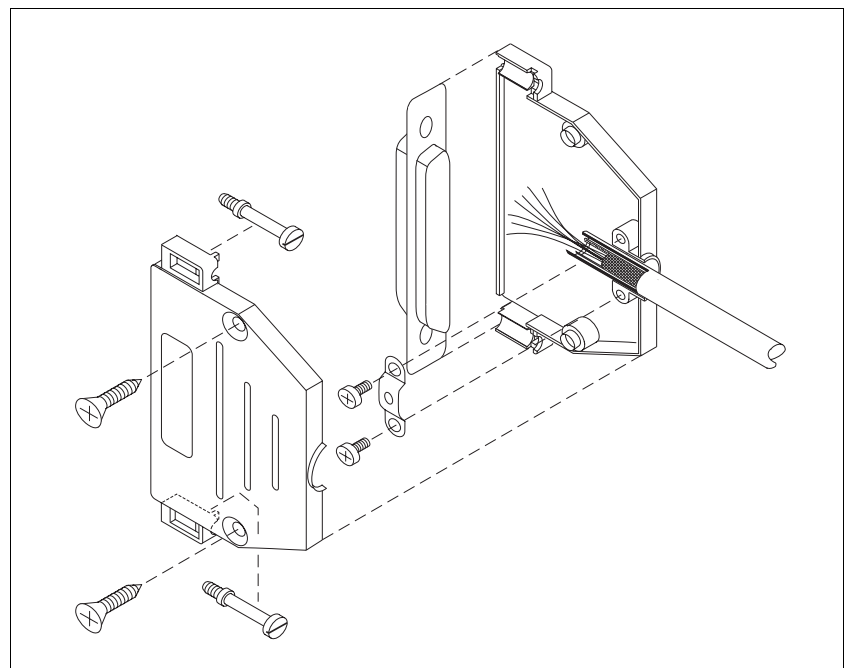


Fig. 2-7 Signal connector assembly – device end

## Installation

| Pin | Assignment for      |                            |                 | Function                                  |
|-----|---------------------|----------------------------|-----------------|-------------------------------------------|
|     | Position processing | On-line command processing | Electronic gear |                                           |
| 1*  | LIMN                | I 13: LIMN                 | IO24VDC         | CCW limit switch<br>I/O supply voltage ←  |
| 2   | –                   | –                          | –               | –                                         |
| 3   | –                   | –                          | –               | –                                         |
| 4   | START               | I 11                       | –               | Start ←                                   |
| 5   | TEACH_IN            | I 10                       | –               | Teach-in ←                                |
| 6*  | REF                 | I 14: REF                  | REF             | Reference switch ←                        |
| 7   | MAN_N               | I 7 (MAN_N)                | MAN_N           | Manual movement, CCW rotation ←           |
| 8   | ERR_RESET           | I 5                        | ERR_RESET       | Reset error ←                             |
| 9   | DATA4               | I 3                        | –               | Position no. selection ←                  |
| 10  | DATA1               | I 1                        | –               | Position no. selection ←                  |
| 11  | –                   | –                          | –               | –                                         |
| 12  | –                   | –                          | –               | –                                         |
| 13  | –                   | –                          | –               | –                                         |
| 14  | NO_ERROR            | Q 3 (NO_ERROR)             | NO_ERROR        | No error →                                |
| 15  | ACTIVE              | Q 1 (ACTIVE)               | ACTIVE          | Ready for operation, brake signal →       |
| 16* | 24VDC               | 24VDC                      | 24VDC           | System supply voltage ←                   |
| 17* | 24VDC               | 24VDC                      | 24VDC           | System supply voltage ←                   |
| 18* | IO24VDC             | IO24VDC                    | IO24VDC         | I/O supply voltage ←                      |
| 19* | IO24VDC             | IO24VDC                    | IO24VDC         | I/O supply voltage ←                      |
| 20* | LIMP                | I 12: LIMP                 | IO24VDC         | CW limit switch<br>I/O supply voltage ←   |
| 21  | –                   | –                          | –               | –                                         |
| 22  | –                   | –                          | –               | –                                         |
| 23* | STOP                | I 15: STOP                 | STOP            | Stop ←                                    |
| 24  | –                   | –                          | –               | –                                         |
| 25  | AUTOM               | I 8 (AUTOM)                | AUTOM           | Automatic ←                               |
| 26  | MAN_P               | I 6 (MAN_P)                | MAN_P           | Manual movement, CW rotation ←            |
| 27  | –                   | I 4                        | –               | – ←                                       |
| 28  | DATA8               | I 2                        | –               | Position no. selection ←                  |
| 29  | DATA2               | I 0                        | –               | Position no. selection ←                  |
| 30  | –                   | –                          | –               | –                                         |
| 31  | –                   | –                          | –               | –                                         |
| 32  | –                   | –                          | –               | –                                         |
| 33  | FUNCTION1           | Q 2 (FUNCTION1)            | FUNCTION1       | Status output (see chapter 4.1) →         |
| 34  | FUNCTION2           | Q 0 (FUNCTION2)            | FUNCTION2       | Status output (see chapter 4.1) →         |
| 35* | GND                 | GND                        | GND             | System and I/O supply<br>voltage ground ← |
| 36* | GND                 | GND                        | GND             | System and I/O supply<br>voltage ground ← |
| 37  | –                   | –                          | –               | –                                         |

\* Minimum wiring requirement for starting up via front panel (e.g. manual movement mode).

(Signals in parentheses) = Input/output assignment if parameter P69 = 1, see chapter 3.3.1.

Signal = active low    ← Input    → Output

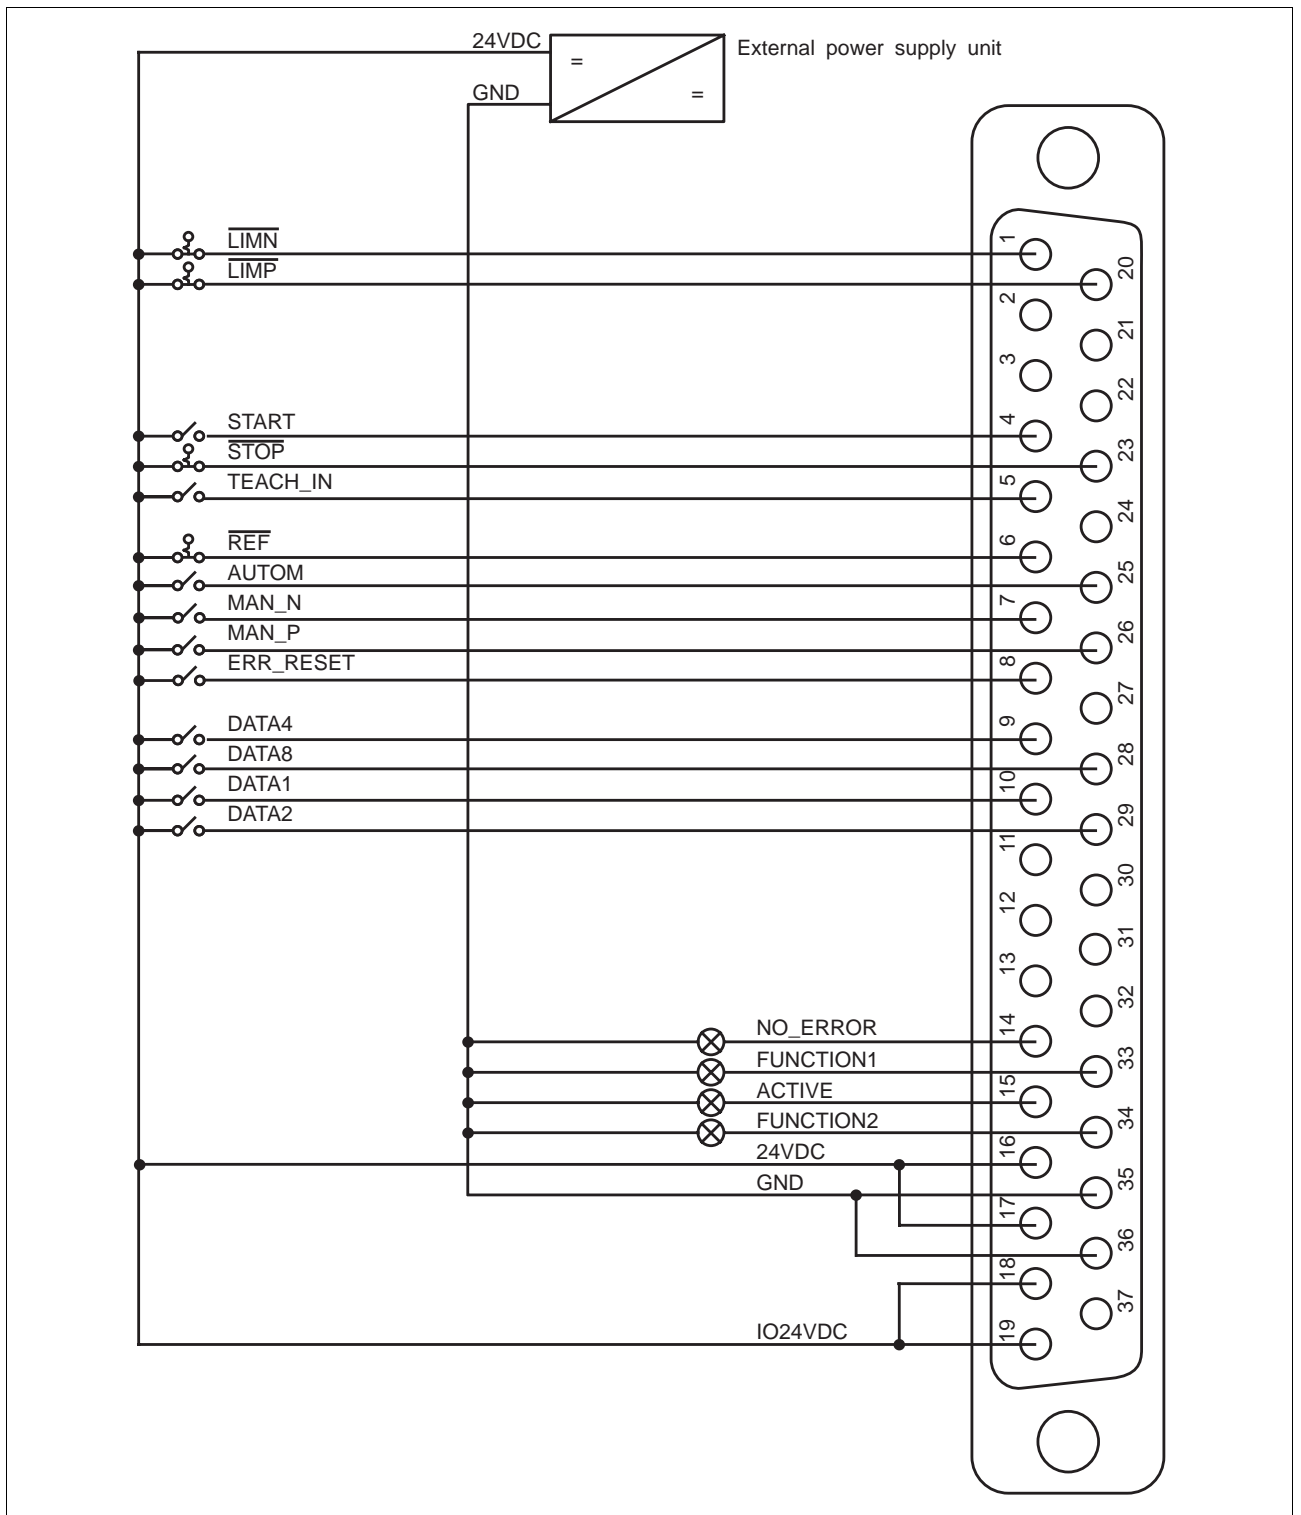


Fig. 2-8 Wiring example for position processing

## Installation

| Pin | Assignment for                     |                          | Function                               |
|-----|------------------------------------|--------------------------|----------------------------------------|
|     | Oscillator mode via inputs/outputs | Oscillator mode via ANOZ |                                        |
| 1*  | IO24VDC                            | IO24VDC                  | I/O supply voltage ←                   |
| 2   | –                                  | –                        | –                                      |
| 3   | –                                  | –                        | –                                      |
| 4   | START                              | –                        | Start ←                                |
| 5   | INV_DIR                            | INV_DIR                  | Direction reversal ←                   |
| 6   | –                                  | –                        | –                                      |
| 7   | MAN_N                              | MAN_N                    | Manual movement, CCW rotation ←        |
| 8   | ERR_RESET                          | ERR_RESET                | Reset error ←                          |
| 9   | –                                  | –                        | –                                      |
| 10  | FH/FL                              | –                        | High and low oscillator frequency ←    |
| 11  | –                                  | –                        | –                                      |
| 12  | –                                  | –                        | –                                      |
| 13  | –                                  | –                        | –                                      |
| 14  | NO_ERROR                           | NO_ERROR                 | No error →                             |
| 15  | ACTIVE                             | ACTIVE                   | Ready for operation, brake signal →    |
| 16* | 24VDC                              | 24VDC                    | System supply voltage ←                |
| 17* | 24VDC                              | 24VDC                    | System supply voltage ←                |
| 18* | IO24VDC                            | IO24VDC                  | I/O supply voltage ←                   |
| 19* | IO24VDC                            | IO24VDC                  | I/O supply voltage ←                   |
| 20* | IO24VDC                            | IO24VDC                  | I/O supply voltage ←                   |
| 21  | –                                  | –                        | –                                      |
| 22  | –                                  | –                        | –                                      |
| 23* | $\overline{\text{STOP}}$           | $\overline{\text{STOP}}$ | Stop ←                                 |
| 24  | –                                  | –                        | –                                      |
| 25  | AUTOM                              | AUTOM                    | Automatic ←                            |
| 26  | MAN_P                              | MAN_P                    | Manual movement, CW rotation ←         |
| 27  | –                                  | –                        | –                                      |
| 28  | –                                  | –                        | –                                      |
| 29  | CURRENT_OFF                        | CURRENT_OFF              | Zero current ←                         |
| 30  | –                                  | –                        | –                                      |
| 31  | –                                  | –                        | –                                      |
| 32  | –                                  | –                        | –                                      |
| 33  | FUNCTION1                          | FUNCTION1                | Status output (see chapter 4.1) →      |
| 34  | FUNCTION2                          | FUNCTION2                | Status output (see chapter 4.1) →      |
| 35* | GND                                | GND                      | System and I/O supply voltage ground ← |
| 36* | GND                                | GND                      | System and I/O supply voltage ground ← |
| 37  | –                                  | –                        | –                                      |

\* Minimum wiring requirement for starting up via front panel (e.g. manual movement mode).

Signal = active low    ← Input    → Output

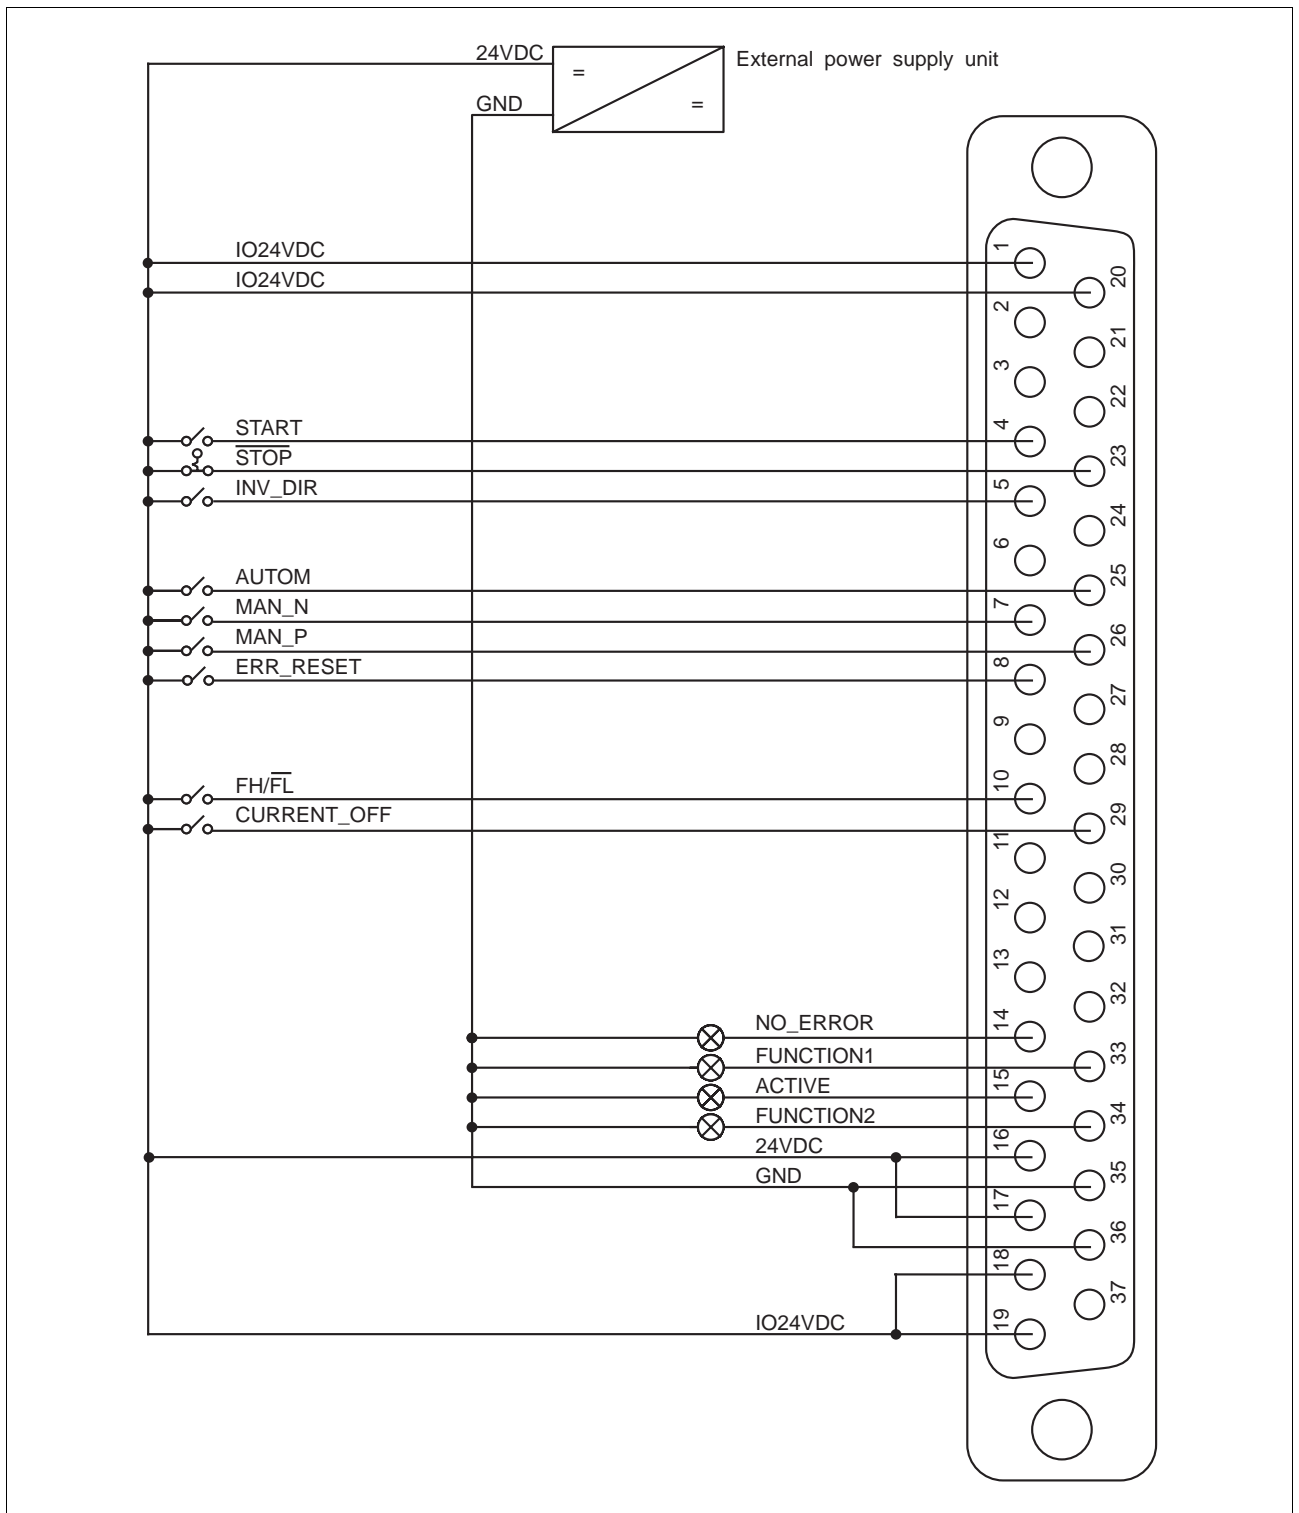


Fig. 2-9 Wiring example for oscillator mode via inputs/outputs


## 2.4.4 Analog interface (OPT.1)



### NOTE

The analog interface ANOZ is installed in adapter slot 21; see type plate.

1. Solder the litz wires to the connector as illustrated in fig. 2-10.

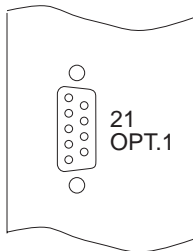

| Pin | Signal      | Meaning                            |
|-----|-------------|------------------------------------|
| 1   | ANA_OUT     | Voltage output 10 V (30 mA max.) → |
| 2   | ANA_OUT GND | Voltage output ground →            |
| 3   | –           | –                                  |
| 4   | –           | –                                  |
| 5   | –           | –                                  |
| 6   | –           | –                                  |
| 7   | ANA_IN GND  | Ground for analog input ←          |
| 8   | –           | –                                  |
| 9   | ANA_IN      | Analog input -10 V to +10 V ←      |

← Input      → Output



### NOTE

ANA\_OUT GND is the ground for the internal voltage supply. The reference potential of the ANA\_IN GND input must not deviate from the reference potential of ANA\_OUT GND by more than  $\pm 0.5$  V.

2. Push the shield back and fix with a cable tie.
3. Insert two threaded bolts (fig. 2-11) into the connector shell.
4. Place the connector into the connector shell.
5. Fasten the cable and the shield to the connector shell with screws, providing for strain relief.



### ATTENTION

**Ensure good electrical contact between the shield and the connector shell.**

**Connect the shield on both ends.**


6. Assemble the two parts of the connector shell with two screws.
7. Fasten the connector to the front panel (item 21) with screws.




### ATTENTION

**The ground connections of the interfaces in adapter slots 21 and 22 are internally interconnected. In the case of multiple ground connections, this may cause ground loops with resulting interference at the analog inputs. Such interference can be reduced by means of bonding lines.**



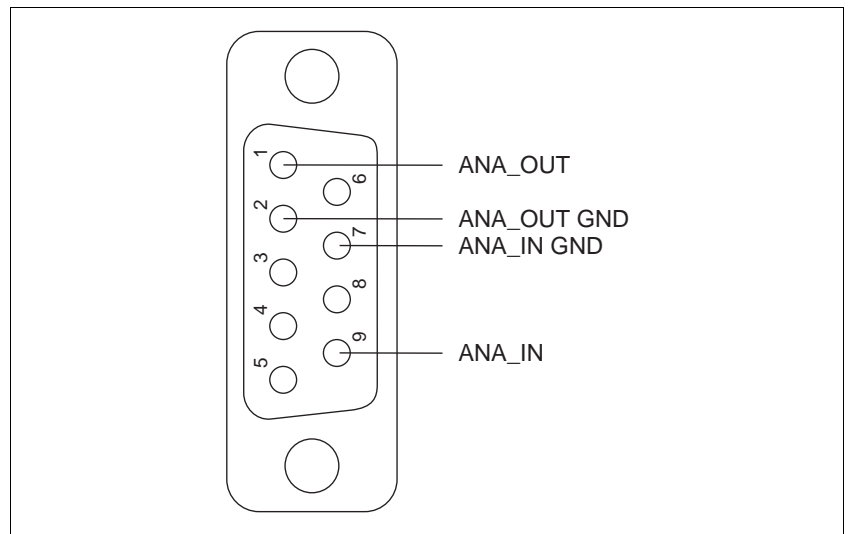

*Fig. 2-10 Interface connection – device end*

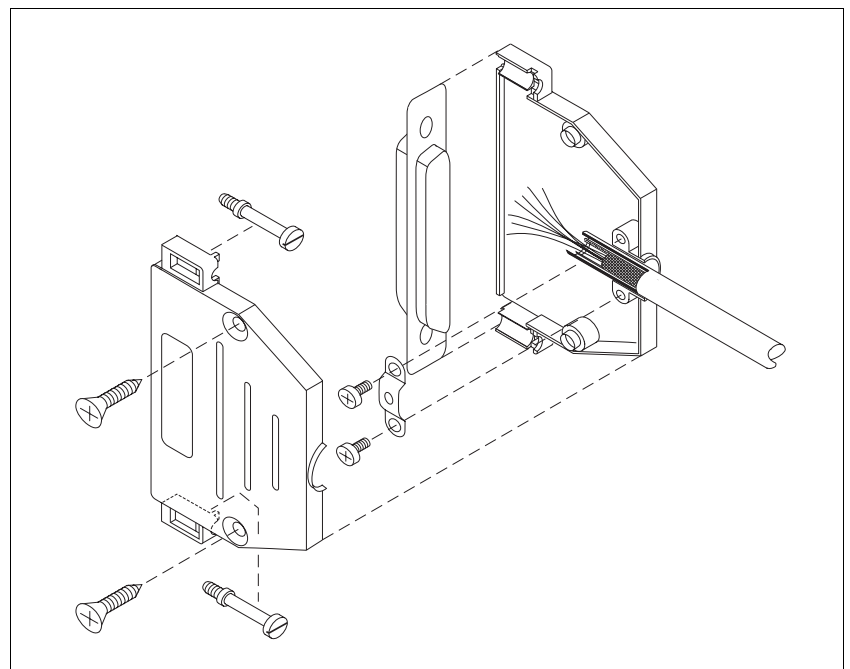

*Fig. 2-11 Interface connector assembly – device end*

# Installation


## 2.4.5 RS 232 serial interface (OPT.1)



### NOTE

The RS 232 serial interface is installed in adapter slot 21; see type plate.

1. Solder the litz wires to the connector in accordance with fig. 2-12 and fig. 2-13.

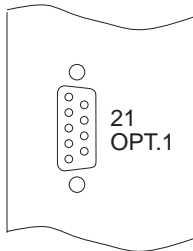

| Pin | Signal | Meaning            |
|-----|--------|--------------------|
| 1   | –      | –                  |
| 2   | RXD    | Received data ←    |
| 3   | TXD    | Transmitted data → |
| 4   | –      | –                  |
| 5   | GND    | Ground             |
| 6   | –      | –                  |
| 7   | –      | –                  |
| 8   | –      | –                  |
| 9   | –      | –                  |

← Input      → Output

2. Push the shield back and fix with a cable tie.
3. Insert two threaded bolts (fig. 2-14) into the connector shell.
4. Place the connector into the connector shell.
5. Fasten the cable and the shield to the connector shell with screws, providing for strain relief.



### ATTENTION

**Ensure good electrical contact between the shield and the connector shell.**

**Connect the shield on both ends.**

6. Assemble the two parts of the connector shell with two screws.
7. Fasten the connector to the front panel (item 21) with screws.



### ATTENTION

**For reasons of noise immunity, the RS 232 cable should be as short as possible (15 m max.)!**




### NOTE

The attachment screws of the connector shells must have M3 thread on the device end and UNC thread on the PC end.




### NOTE


With an RS 232 interface, networking is not possible.

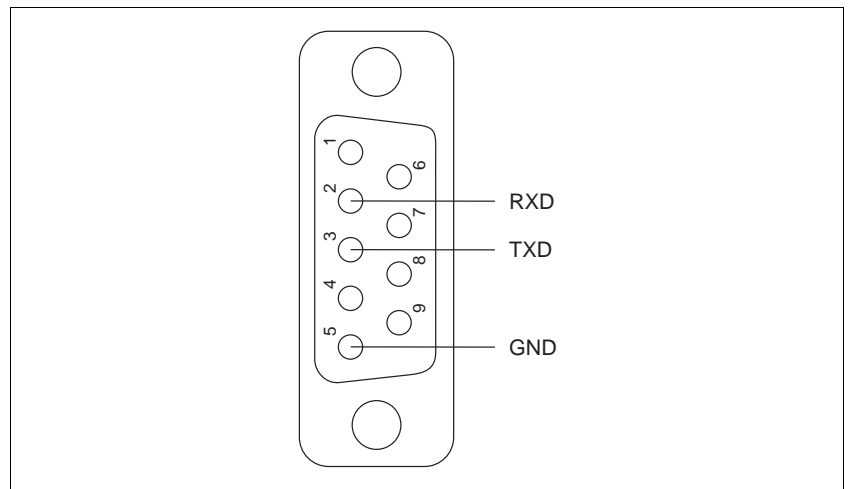

*Fig. 2-12 Interface connection – device end*

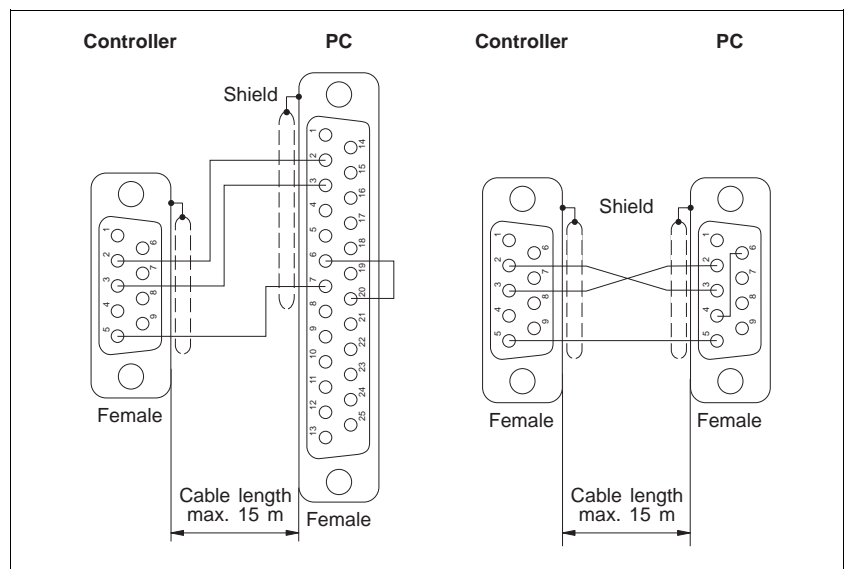

*Fig. 2-13 Controller/PC wiring*

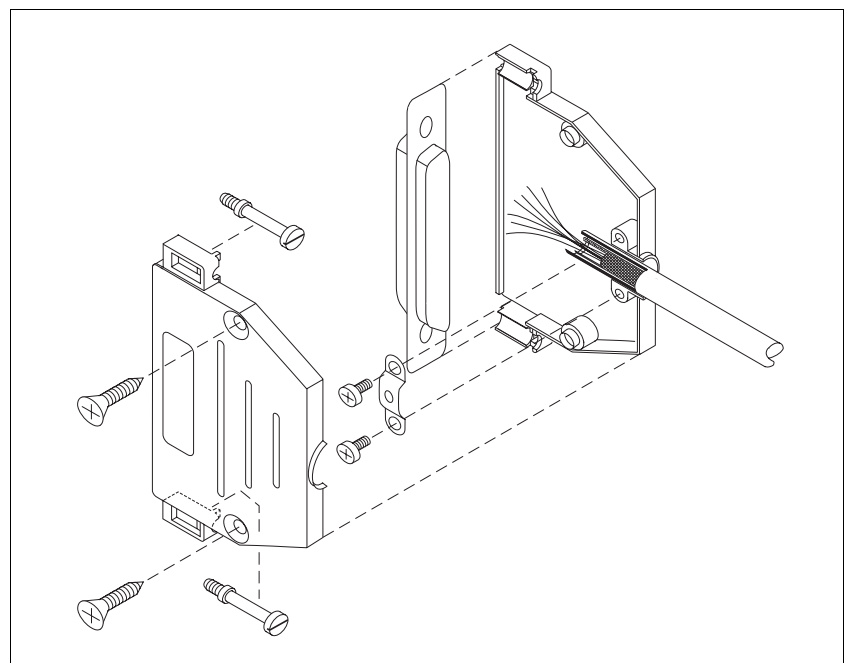

*Fig. 2-14 Interface connector assembly – device end*

# Installation

## 2.4.6 RS 485 serial interface (OPT.1)




**NOTE**

The RS 485 serial interface is installed in adapter slot 21; see type plate.



**NOTE**

The serial interface is a four-wire interface.

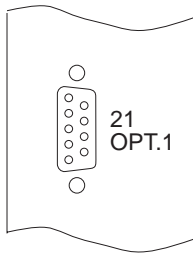

1. Solder the litz wires to the connector as illustrated in fig. 2-15.

| Pin  | Signal                  | Meaning                        |
|------|-------------------------|--------------------------------|
| 1, 6 | 12VDC                   | MP 923 supply voltage →        |
| 2, 7 | GND                     | MP 923 supply voltage ground → |
| 3    | $\overline{\text{TXD}}$ | Inverted transmitted data →    |
| 4    | $\overline{\text{RXD}}$ | Inverted received data ←       |
| 5    | SGND                    | Signal ground                  |
| 8    | TXD                     | Transmitted data →             |
| 9    | RXD                     | Received data ←                |

← Input      → Output

2. Push the shield back and fix with a cable tie.
3. Insert two threaded bolts (fig. 2-16) into the connector shell.
4. Place the connector into the connector shell.
5. Fasten the cable and the shield to the connector shell with screws, providing for strain relief.



**ATTENTION**

**Ensure good electrical contact between the shield and the connector shell.**

**Connect the shield on both ends.**

6. Assemble the two parts of the connector shell with two screws.
7. Fasten the connector to the front panel (item 21) with screws.




**NOTE**

For a PC with RS 232 interface, the MP 923 interface converter can be used (see chapter 6.2.3).




**NOTE**

The MP 924 interface distributor can be used for controlling eight units (see chapter 6.2.4).

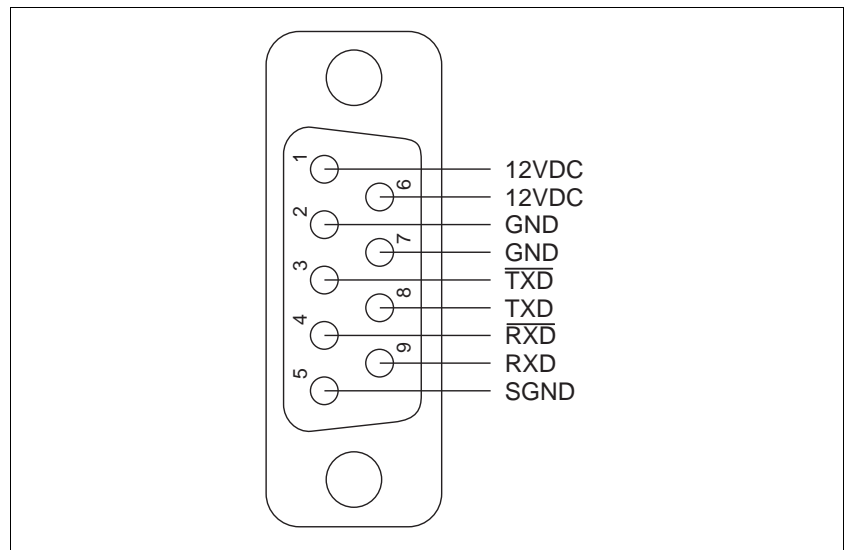


*Fig. 2-15 Interface connection – device end*

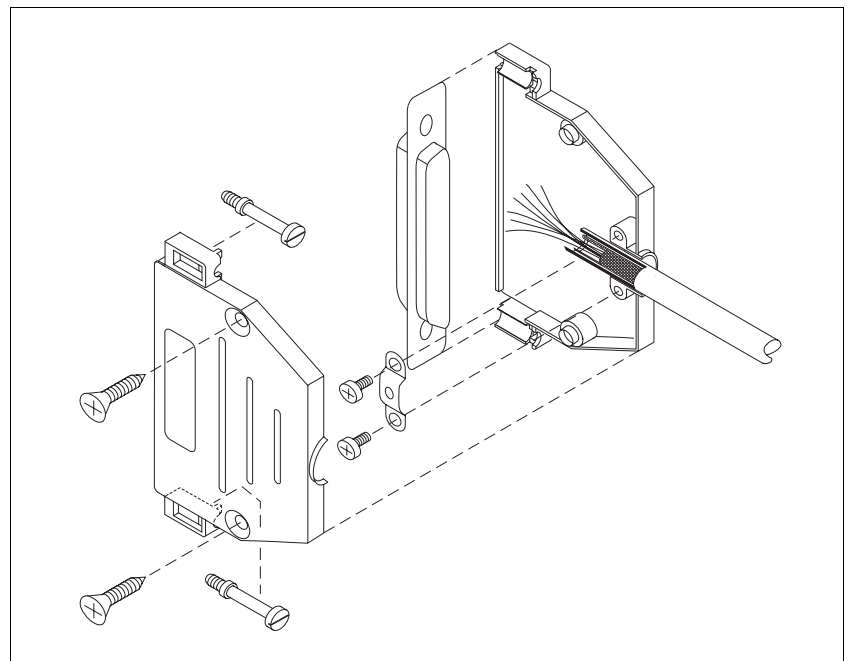

*Fig. 2-16 Interface connector assembly – device end*

## 2.4.7 Field bus interface (OPT.1)

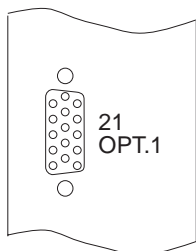

**NOTE**


The field bus interface (e.g. Interbus-S or Profibus-DP) is located in adapter slot 21; see type plate.



**NOTE**

Setup of the field bus interface is described in a separate documentation for each type of interface.

2.4.8 Encoder interface (OPT.2)

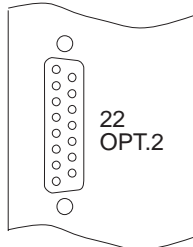

**NOTE**

The encoder interface is installed in adapter slot 22; see type plate. Power is supplied independently of the power controller.

1. Solder the litz wires to the connector as described below.
2. Push the shield back and fix with a cable tie.
3. Insert two threaded bolts (fig. 2-17) into the connector shell.
4. Place the connector into the connector shell.
5. Fasten the cable and the shield to the connector shell with screws, providing for strain relief.



**ATTENTION**

Ensure good electrical contact between the shield and the connector shell.

Connect the shield on both ends.

6. Assemble the two parts of the connector shell with two screws.
7. Fasten the connector to the front panel (item 22) with screws.
8. Twist the encoder cable wires in pairs.
9. Establish the connection on the motor end.



**ATTENTION**

When using 5 V encoders, **-SENSE** must be connected to 5VGND and **+SENSE** to 5VDC on the encoder end of the cable.



**NOTE**

The encoder signal type (pulse/direction or A/B signals) and the internal evaluation (single, double or quadruple) must be selected for an electronic gear with the P50 parameter; see chapter 3.3.1.


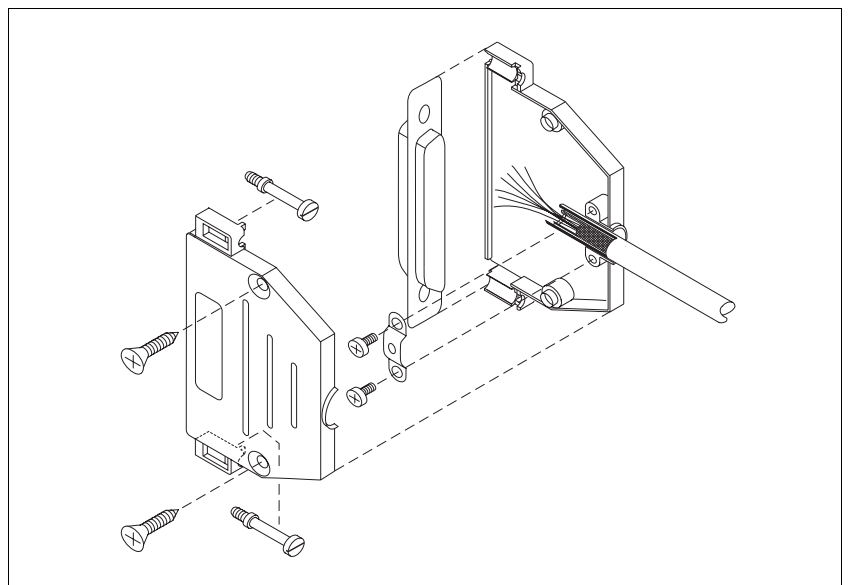


Fig. 2-17 Encoder connector assembly – device end

# Installation

## Encoder interface: Encoder signal type A/B

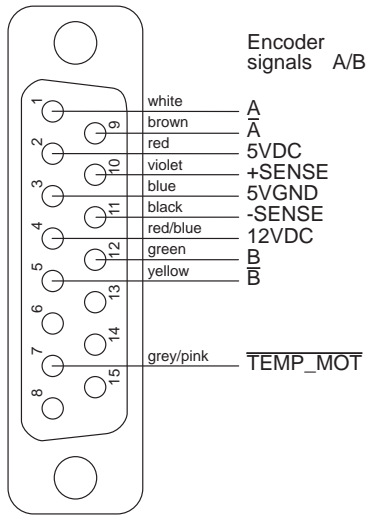

| Pin | Signal                        | Meaning                        |
|-----|-------------------------------|--------------------------------|
| 1   | A                             | Encoder signal A ←             |
| 2   | 5VDC                          | Sensor supply voltage →        |
| 3   | 5VGND                         | Sensor supply voltage ground → |
| 4   | 12VDC                         | Sensor supply voltage →        |
| 5   | $\bar{B}$                     | Encoder signal $\bar{B}$ ←     |
| 6   | –                             | –                              |
| 7   | $\overline{\text{TEMP\_MOT}}$ | Line interruption ←            |
| 8   | –                             | –                              |
| 9   | $\bar{A}$                     | Encoder signal $\bar{A}$ ←     |
| 10  | +SENSE                        | Sense regulator 5VDC ←         |
| 11  | -SENSE                        | Sense regulator 5VGND ←        |
| 12  | B                             | Encoder signal B ←             |
| 13  | –                             | –                              |
| 14  | –                             | –                              |
| 15  | –                             | –                              |

Signal = active low    ← Input    → Output

The encoder can be supplied with 12 V or from a 5 V sense regulator.



### ATTENTION

When using 5 V encoders, **-SENSE** must be connected to 5VGND and **+SENSE** to 5VDC on the encoder end of the cable.



### ATTENTION

The  $\overline{\text{TEMP\_MOT}}$  input is used for detecting a line interruption. For this purpose,  $\overline{\text{TEMP\_MOT}}$  must be connected to 5VDC on the encoder.


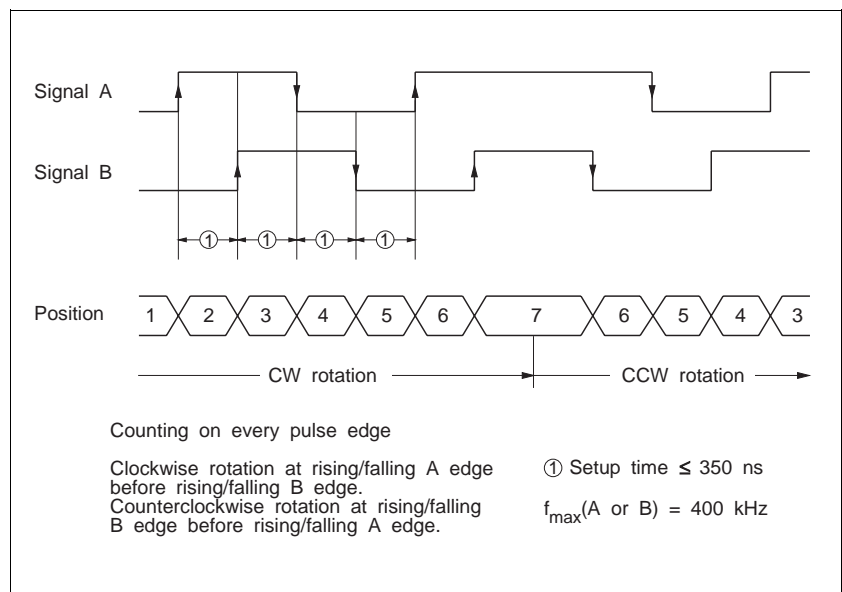


Fig. 2-18 Encoder signals A/B timing diagram with quadruple evaluation



Encoder interface: Pulse/direction signal type

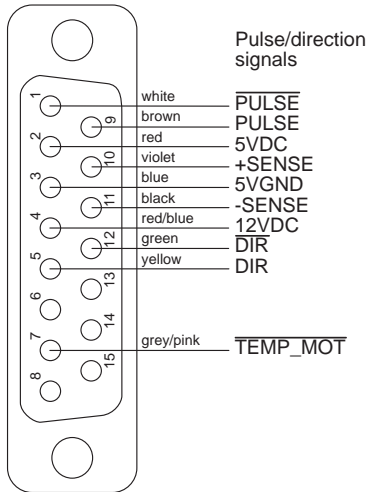

| Pin | Signal                        | Meaning                        |
|-----|-------------------------------|--------------------------------|
| 1   | $\overline{\text{PULSE}}$     | Pulse ←                        |
| 2   | 5VDC                          | Sensor supply voltage →        |
| 3   | 5VGND                         | Sensor supply voltage ground → |
| 4   | 12VDC                         | Sensor supply voltage →        |
| 5   | DIR                           | Direction ←                    |
| 6   | –                             | –                              |
| 7   | $\overline{\text{TEMP\_MOT}}$ | Line interruption ←            |
| 8   | –                             | –                              |
| 9   | PULSE                         | Pulse ←                        |
| 10  | +SENSE                        | Sense regulator 5VDC ←         |
| 11  | -SENSE                        | Sense regulator 5VGND ←        |
| 12  | $\overline{\text{DIR}}$       | Direction ←                    |
| 13  | –                             | –                              |
| 14  | –                             | –                              |
| 15  | –                             | –                              |

Signal = active low      ← Input      → Output

The encoder can be supplied with 12 V or from a 5 V sense regulator.



**ATTENTION**

When using 5 V encoders, *-SENSE* must be connected to 5VGND and *+SENSE* to 5VDC on the encoder end of the cable.



**ATTENTION**

The  $\overline{\text{TEMP\_MOT}}$  input is used for detecting a line interruption. For this purpose,  $\overline{\text{TEMP\_MOT}}$  must be connected to 5VDC on the encoder.


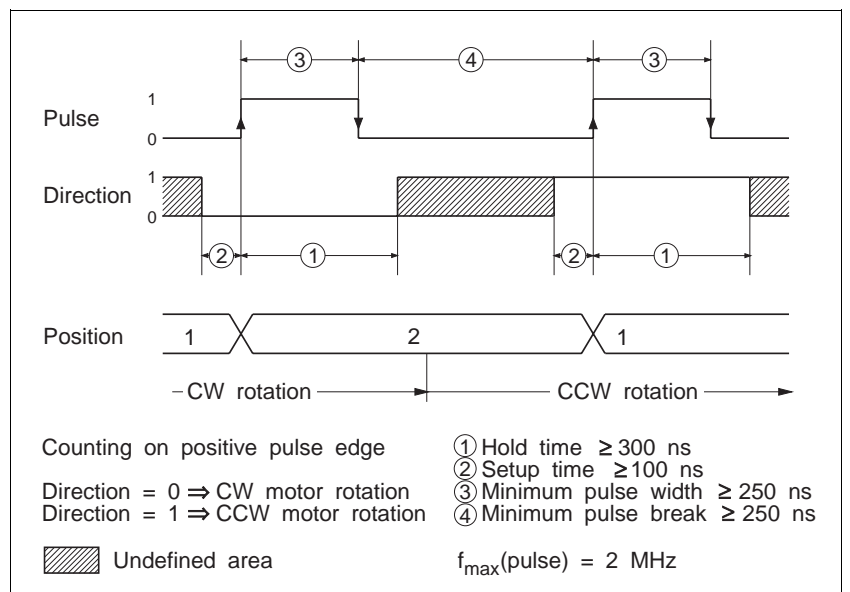


Fig. 2-19 Pulse/direction timing diagram

## 2.5 First start-up

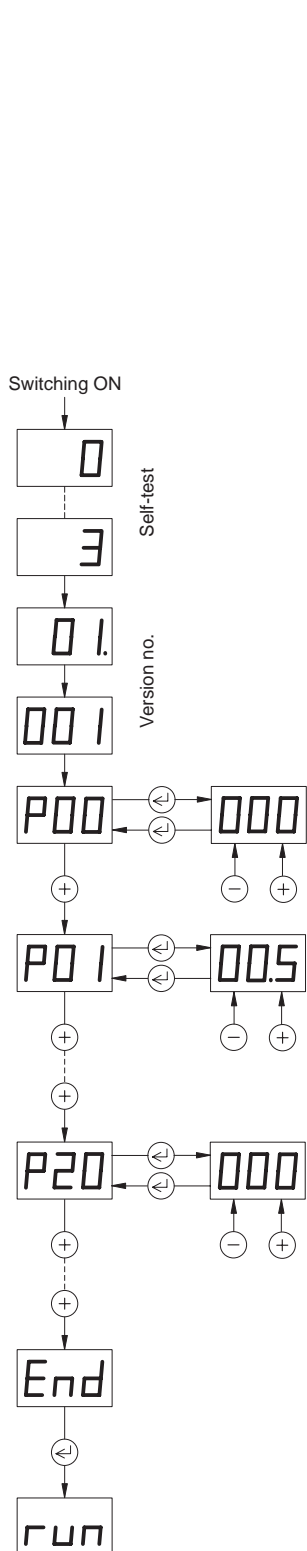

### NOTE

Before starting up the unit for the first time, check that the connected motor is suitable for the respective device variant (see chapter 6.1) and that the controller has been wired correctly (see chapter 2.4). For starting up via the front panel, the minimum wiring requirements for the signal interface must be observed (see chapter 2.4.3).



### ATTENTION

The mains power supply and the 24 V supply voltage of the unit must be switched off.



1. Set the mains voltage to 115 V or 230 V with the selector switch on the unit top.



### ATTENTION

The setting must correspond to the actual mains voltage available.

2. Switch on the power supply for the power controller.
3. Switch on the 24 V supply voltage for the processor unit. (Mains voltage and 24 V supply voltage may also be switched on simultaneously.)
  - The controller executes a self-test during which the numbers 0, 1, 2, 3 appear in the status display, followed by the software version number.
  - Subsequently, the parameter "P00" is displayed.



### NOTE

The P00 parameter can be used for setting the operating mode for the controller (see chapter 3.3.1).

4. Use the keys to set the following motor parameters:

P01 = Motor phase current (in A) according to the motor type plate



### ATTENTION

The set phase current must be equal to or less than the nominal phase current specified on the motor type plate (the lower the set phase current, the lower the motor torque).


P20 = 2 Activate rotation monitoring if an encoder is installed on the motor.



### NOTE

Operation via front panel and setting of other parameters is described in chapter 3.3.

5. Completing the parameter setting process:
  - Select the "End" option and confirm by pressing .
  - The "run" message is displayed.

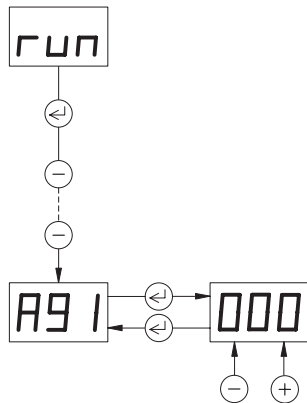

6. A manual movement should be executed in order to check the motor wiring and the basic settings:
- Deactivate the AUTOM input.
  - Select manual movement A91 by pressing the  $\ominus$  key and move the motor by pressing the  $\oplus$  or  $\ominus$  key.

$\oplus$  key      CW rotation  
 $\ominus$  key      CCW rotation  
 (as seen from front towards the motor shaft)

**Single step:**

If the key is pressed for  $\leq 0.5$  s, the motor performs a single step in slow manual speed.

**Continuous operation:**

If the key is pressed for  $> 0.5$  s, the motor starts running at slow manual speed (parameter P90). While the key is kept pressed, the speed increases every 5 seconds (in 10 stages) up to fast manual speed (parameter P91).

→ The current position digits representing ones appear in the status display.



**NOTE**

*The sense of rotation of the motor can be inverted by interchanging two motor leads. In this case, also the limit switch inputs  $\overline{LIMP}$  and  $\overline{LIMN}$  as well as the  $A$  and  $\overline{A}$  signals of any rotation monitoring encoder connected must be interchanged.*



### 3 Operation

#### 3.1 Functions

The functions of the WDP3-01X positioning controller depend on the interface configuration of the OPT.1 and OPT.2 adapter slots (device variants) and on the P00 parameter setting. In the following table, the functions of the various device variants are marked "X".

| Function                               | OPT.1                        |                   |                              |                                          |                   |                                                 | OPT.2                           |                              | See chapter  |
|----------------------------------------|------------------------------|-------------------|------------------------------|------------------------------------------|-------------------|-------------------------------------------------|---------------------------------|------------------------------|--------------|
|                                        | without additional interface |                   | with analog interface (ANOZ) | with serial interface (RS 232 or RS 485) |                   | with field bus interface (CAN/IBS/PBDP/SUCONET) | with encoder interface (RS 422) |                              |              |
|                                        | Parameter P00 = 0            | Parameter P00 = 1 |                              | Parameter P00 = 0                        | Parameter P00 = 2 |                                                 | Parameter P00 = 3               | Parameter P00 ≠ 3<br>P20 = 2 |              |
| Front panel operation                  |                              |                   |                              |                                          |                   |                                                 |                                 |                              | <b>3.3.</b>  |
| – Parameter setting                    | X                            | X                 | X                            | X                                        | X                 | X                                               | X                               |                              | <b>3.3.1</b> |
| – Position value input                 | X                            |                   |                              | X                                        |                   |                                                 |                                 |                              | <b>3.3.2</b> |
| – Teach-in                             | X                            |                   |                              | X                                        |                   |                                                 |                                 |                              | <b>3.3.3</b> |
| – Value display                        | X                            | X                 | X                            | X                                        | X                 | X                                               | X                               |                              | <b>3.3.4</b> |
| – Start positioning and actions        | X                            |                   |                              | X                                        |                   |                                                 |                                 |                              | <b>3.3.5</b> |
| – Manual movement                      | X                            | X                 | X                            | X                                        | X                 | X                                               | X                               |                              | <b>3.3.6</b> |
| Manual mode via inputs/outputs         | X                            | X                 | X                            | X                                        | X                 | X                                               | X                               |                              | <b>3.4</b>   |
| Teach-in via inputs/outputs            | X                            |                   |                              | X                                        |                   |                                                 |                                 |                              | <b>3.5</b>   |
| Position processing via inputs/outputs | X                            |                   |                              | X                                        |                   |                                                 |                                 |                              | <b>3.6</b>   |
| Upload/download via serial interface   |                              |                   |                              | X                                        |                   |                                                 | X <sup>1)</sup>                 |                              | <b>3.7</b>   |
| On-line command processing             |                              |                   |                              |                                          | X                 | X                                               |                                 |                              | <b>3.8</b>   |
| Electronic gear                        |                              |                   |                              |                                          |                   |                                                 | X                               |                              | <b>3.9</b>   |
| Oscillator mode via inputs/outputs     |                              | X                 |                              |                                          |                   |                                                 |                                 |                              | <b>3.10</b>  |
| Oscillator mode via analog interface   |                              |                   | X                            |                                          |                   |                                                 |                                 |                              | <b>3.11</b>  |
| Rotation monitoring <sup>2)</sup>      |                              |                   |                              |                                          |                   |                                                 | X                               |                              | <b>3.12</b>  |

1) Only available if a serial interface is installed.

2) Rotation monitoring is possible with all OPT.1 adapter slot configurations.

## 3.2 Switching ON/OFF



### ATTENTION

The mains voltage set on the selector switch must correspond to the required supply voltage (see type plate).



### DANGER

Live parts of the device or system may never be touched by persons or with electrically conductive objects.



### DANGER

The movement range of the system must be kept clear of persons and objects.



### ATTENTION

The unit must be grounded with a protective conductor.




### ATTENTION

The basic settings of the unit must conform to the actual requirements; see chapter 2.5.

The following requirements must be fulfilled before switching on the unit:

| Requirement                                                                                                          | Reference       |
|----------------------------------------------------------------------------------------------------------------------|-----------------|
| Ambient conditions in line with the technical data?                                                                  | See chapter 1.3 |
| Sufficient space for ventilation available?                                                                          | See chapter 1.3 |
| Wiring of the unit (in particular signal inputs for limit switches, reference switch and stop) carried out properly? | See chapter 2.4 |
| Mains voltage set correctly on the selector switch?                                                                  | See chapter 2.5 |

### 3.2.1 Switching on

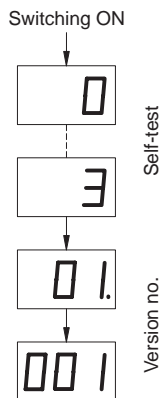

P00

run

1. Switch on the power supply for the power controller.
2. Switch on the 24 V supply voltage for the processor unit.
3. The controller executes a self-test.  
→ In the status display, the digits “0” to “3” and the controller software version number are displayed.
4. Two basic modes are available, depending on the parameter P99 setting (see fig. 3-2):
  - If the parameter menu is enabled (P99 = 1), “P00” appears in the status display. The entire parameter menu is then enabled for setting (see chapter 3.3.1).
  - If the parameter menu is disabled (P99 = 0), “run” appears in the status display. The controller is then ready for operation, i.e. the individual functions can be selected (see chapter 3.1).

## 3.2.2 Operation with brake

1. After applying the 24 VDC supply voltage and the system booting process, the controller signals readiness on the ACTIVE signal output after approx. 2 seconds (fig. 3-1). This signal can be used with a suitable relay for releasing the brake. The stepping motor is energized just before the ACTIVE output is set.
2. After the brake-specific time for opening, the brake is released.
3. Activate automatic mode with input AUTOM = 1 or manual mode with input AUTOM = 0.

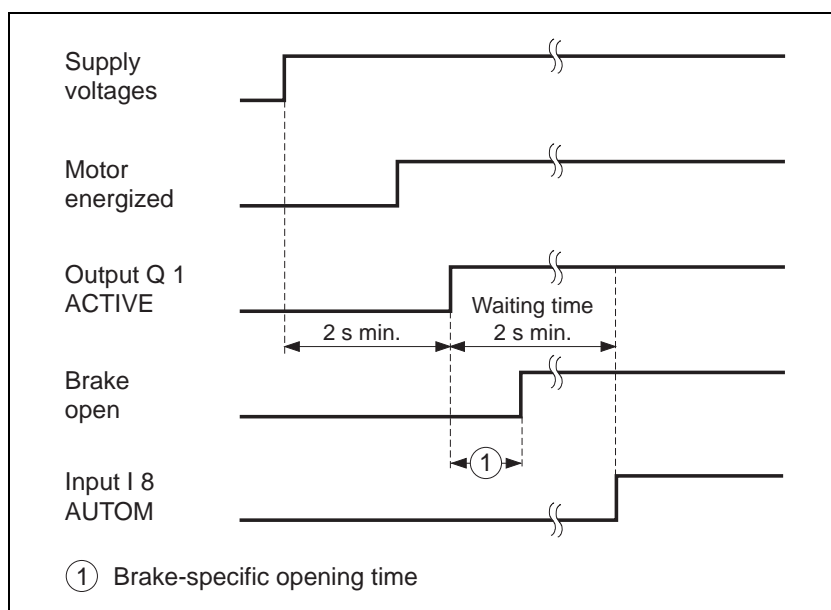


Fig. 3-1 Timing diagram for operation with brake



### NOTE

If the parameter P69 is set to 0 in on-line command processing mode, the BRAKE command can be used for defining any output (e.g. Q1) for controlling a brake; see the documentation on the serial interface or the field bus interface (e.g. Interbus-S or Profibus-DP).

If the parameter P69 is set to 1 in on-line command processing mode, the output Q1 can be used for controlling a brake.

## 3.2.3 Switching off

1. The connected motor is deenergized after disconnecting the mains or 24 V supply voltage, i.e. it does not have any holding torque.




### ATTENTION

**Before switching off the mains and 24 V supply voltage ensure that any vertical loads are secured against falling down (e.g. use motor with brake).**


2. Switch off the mains power supply to the power controller and the 24 V supply voltage for the processor unit.

## 3.3 Front panel operation

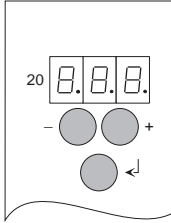

The following functions are executed via the front panel, depending on the device variant:

| Display | Meaning                                    |
|---------|--------------------------------------------|
| Pxx     | Parameter setting                          |
| Exx     | Position set input                         |
| Lxx     | Teach-in                                   |
| dxx     | Value display                              |
| Axx     | Positioning activation and manual movement |

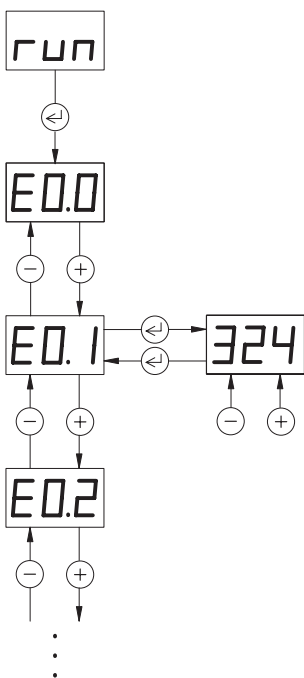

Operation is effected using the three keys  $\oplus$ ,  $\ominus$  and  $\leftarrow$ , which have the following functions:

- $\oplus$  Scroll display down  
or  
Increment input value
- $\ominus$  Scroll display up  
or  
Decrement input value
- $\leftarrow$  Start editing  
Select menu option  
Save input value  
Stop editing  
Acknowledge error













**NOTE**

*Any previous values are overwritten and the current values are retained also after switching off.*

The three seven-segment displays reflect parameters, input values, operating states and error codes.



Meanings of runtime messages:

| Display                                                                                                                                                                    | Meaning                                                                                                                                                                                                                                        |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                                                           | Controller ready. The power controller has been switched on (with the INITDRIVE command in on-line command processing mode).<br>The individual functions can be activated.                                                                     |
|                                                                                           | Exit the selection menu for front panel operation.<br>Pressing  changes to "run" mode.                                                                        |
|                                                                                           | Flashing error code; see chapter 4.2.<br>Acknowledge with  key after eliminating the cause of the error. It is possible that another error is then displayed. |
|                                                                                           | See chapter 4.2 for troubleshooting.<br>Clearing the display, or the error memory, is only possible by activating the ERR_RESET input.                                                                                                         |
|                                                                                           | See chapter 4.2 for troubleshooting.<br>Clearing the display, or the error memory, is only possible by switching the 24 V power supply to the processor unit off and on again.                                                                 |
| <br> | Negative values<br>for two-digit values with a minus sign;<br>for values with more digits with three flashing points.<br>Only the last few digits are displayed, e.g. -251.0.0.                                                                |
|                                                                                         | Interbus-S diagnostics<br>for testing the Interbus-S interface.                                                                                                                                                                                |

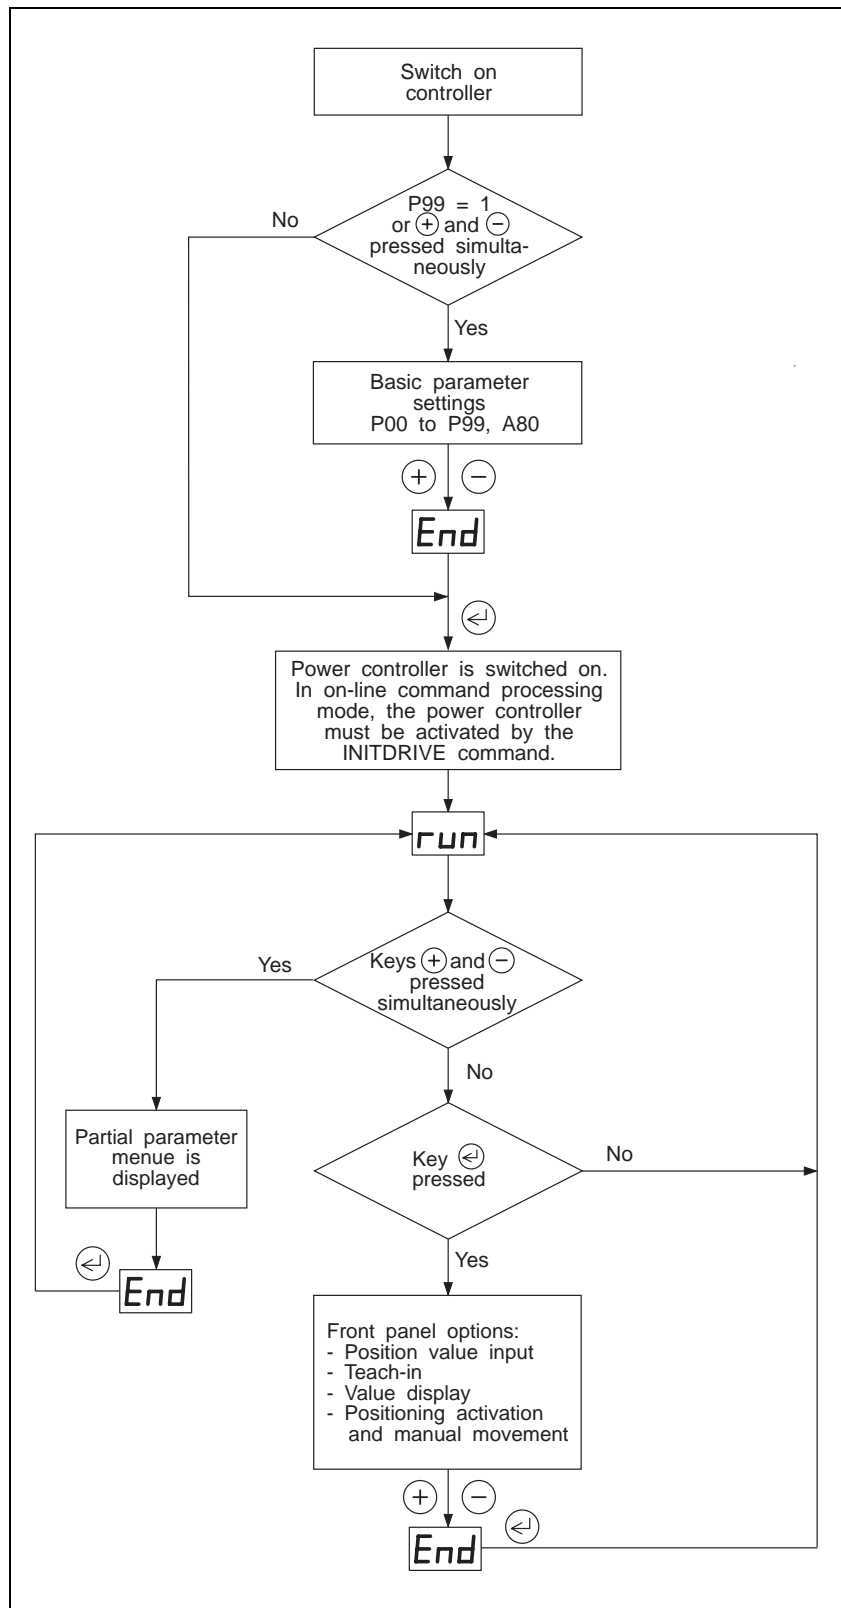


Fig. 3-2 Front panel operation

3.3.1 Parameter setting

*Setting functions depend on device variant and parameter menu activation*

After switching on the controller, the entire parameter menu is displayed with the status display "P00" if P99 = 1 is set or if P99 = 0 and both keys ⊕ and ⊖ are pressed simultaneously at power on.


If parameter P99 = 0 is set, "run" appears in the status display after power-on, and the parameters are not accessible. Pressing both keys ⊕ and ⊖ simultaneously invokes a restricted parameter menu, i.e. only some parameters are accessible.

**Entire parameter menu**

Prerequisites: P99 = 1 or P99 = 0 and keys ⊕ and ⊖ pressed simultaneously

**Restricted parameter menu**

Prerequisites: P99 = 0 and no on-line command processing

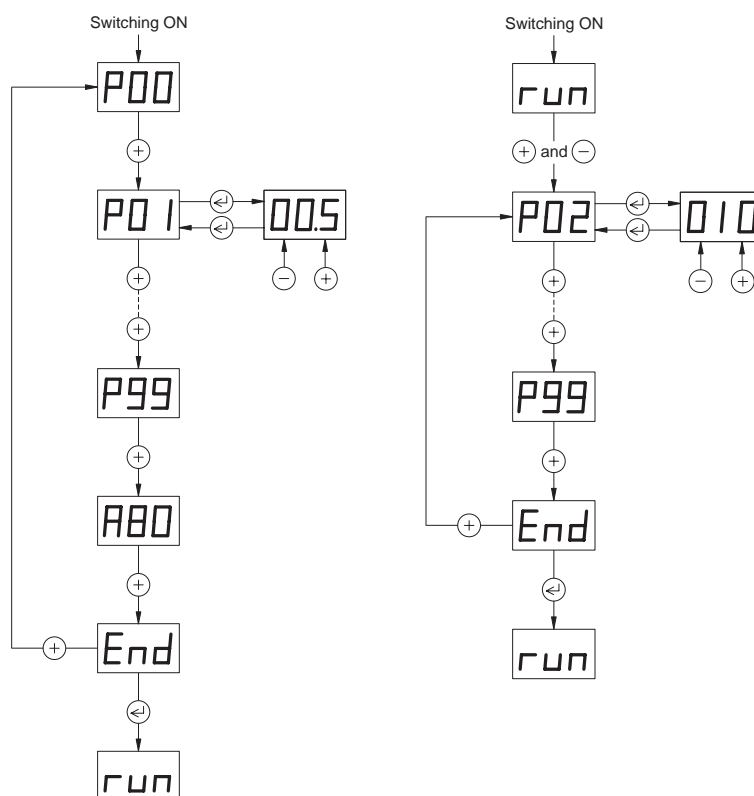

**NOTE**

The parameter P99 = 0 can be used for disabling the parameter menu. This means that the parameters are not automatically displayed when the controller is switched on the next time. In this case, only a restricted parameter menu can be displayed.



**NOTE**

After displaying the entire parameter menu, the function A80 = 1 can be used for resetting the parameters to their default values. All position values are then zeroed.

## Operation

The following table lists the possible parameter displays. These depend on the OPT.1 and OPT.2 interface configurations and the settings of the parameters P00 and P99.

| Parameter display | Meaning                                                                                                                      | Setting range                                                                                                                                                               | Factory default | Selected setting | Restricted parameter menu, if P99 = 0 | Accessible by upload/download via serial interface |
|-------------------|------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|------------------|---------------------------------------|----------------------------------------------------|
| P00               | Operating mode                                                                                                               | 0 = Position processing<br>1 = Oscillator mode via I/O<br>2 = On-line command processing<br>3 = Electronic gear                                                             | 0               |                  |                                       |                                                    |
| P01               | Motor phase current                                                                                                          | WDP3-014: 0.1 A to 2.5 A<br>WDP3-018: 0.1 A to 6.8 A                                                                                                                        | 0.5<br>1.0      |                  |                                       | X                                                  |
| P02               | Acceleration                                                                                                                 | 1 Hz/ms to 999 Hz/ms                                                                                                                                                        | 10              |                  | X                                     | X                                                  |
| P04               | Maximum speed, higher oscillator frequency $f_H$                                                                             | 0.1 kHz to 40.0 kHz                                                                                                                                                         | 1.0             |                  | X                                     | X                                                  |
| P06               | Reference speed REF_IN                                                                                                       | 0.1 kHz to 40.0 kHz                                                                                                                                                         | 1.0             |                  | X                                     | X                                                  |
| P07               | Reference speed REF_OUT                                                                                                      | 0.1 kHz to 5.0 kHz                                                                                                                                                          | 0.1             |                  | X                                     | X                                                  |
| P8.0              | Maximum allowed distance from limit switch or reference switch during a reference movement. One's digits of the travel.      | 10 to 999 steps<br>Enter in the same way as position sets; see chapter 3.3.2                                                                                                | 0               |                  |                                       | X                                                  |
| P8.1              | Maximum allowed distance from limit switch or reference switch during a reference movement. Thousand's digits of the travel. | 0 to 999 x 10 <sup>3</sup> steps<br>Enter in the same way as position sets; see chapter 3.3.2                                                                               | 10              |                  |                                       | X                                                  |
| P8.2              | Maximum allowed distance from limit switch or reference switch during a reference movement. Million's digits of the travel.  | 0 to 55 x 10 <sup>6</sup> steps, max. 55924053<br>Enter in the same way as position sets; see chapter 3.3.2                                                                 | 0               |                  |                                       | X                                                  |
| P20               | Rotation monitoring                                                                                                          | 0 = OFF; 2 = ON; 1 = Reserved                                                                                                                                               | 0               |                  |                                       | X                                                  |
| P21               | System of dimensions for position processing                                                                                 | 0 = Absolute system<br>1 = Incremental system                                                                                                                               | 0               |                  |                                       | X                                                  |
| P22               | Standstill current as a percentage of the set motor phase current                                                            | 1 % to 100 %                                                                                                                                                                | 75              |                  |                                       | X                                                  |
| P50               | Encoder signal type for electronic gear                                                                                      | 1 = Pulse/direction<br>2 = A/B signals single<br>3 = A/B double<br>4 = A/B quadruple                                                                                        | 2               |                  |                                       | X                                                  |
| P51               | Gear ratio numerator                                                                                                         | -999 to +999                                                                                                                                                                | 1               |                  | X                                     | X                                                  |
| P52               | Gear ratio denominator                                                                                                       | 1 to 999                                                                                                                                                                    | 1               |                  | X                                     | X                                                  |
| P60               | Network address: RS 232/RS 485<br>Profibus-DP/CAN-Bus<br>SUCONET                                                             | 1 to 31<br>0 to 126<br>2 to 126                                                                                                                                             | 1<br>126<br>126 |                  |                                       |                                                    |
| P61               | Baud rate<br>RS 232/RS 485<br>Interbus-S<br>CAN-Bus                                                                          | 1.2; 9.6; 19.2; 38.4 kbauds<br>500 kbauds<br>01 = 500 kbauds    05 = 50 kbauds<br>02 = 250 kbauds    06 = 20 kbauds<br>03 = 125 kbauds    07 = 10 kbauds<br>04 = 100 kbauds | 9.6<br>500<br>3 |                  |                                       |                                                    |

| <b>Parameter display</b> | <b>Meaning</b>                                                                                                   | <b>Setting range</b>                            | <b>Factory default</b> | <b>Selected setting</b> | <b>Restricted parameter menu, if P99 = 0</b> | <b>Accessible by upload/download via serial interface</b> |
|--------------------------|------------------------------------------------------------------------------------------------------------------|-------------------------------------------------|------------------------|-------------------------|----------------------------------------------|-----------------------------------------------------------|
| P62                      | CAN-Bus operating mode                                                                                           | 1 = Simple CAN-Bus protocol<br>2 = CAL protocol | 1                      |                         |                                              |                                                           |
| P69                      | Manual mode via inputs/outputs and indication of operating states via outputs in on-line command processing mode | 0 = OFF; 1 = ON                                 | 0                      |                         |                                              |                                                           |
| P70                      | Voltage at maximum speed with CW rotation                                                                        | -10.0 V to +10.0 V                              | 10.0                   |                         | X                                            |                                                           |
| P71                      | Voltage at maximum speed with CCW rotation                                                                       | -10.0 V to +10.0 V                              | -10.0                  |                         | X                                            |                                                           |
| P72                      | Zero window                                                                                                      | 0.01 V to 1.0 V                                 | 0.01                   |                         | X                                            |                                                           |
| P73                      | Lower oscillator frequency $f_L$                                                                                 | 0.1 kHz to 5.0 kHz                              | 0.1                    |                         | X                                            |                                                           |
| P74                      | Braking ramp with ANOZ                                                                                           | 0 Hz/ms to 999 Hz/ms                            | 0                      |                         | X                                            |                                                           |
| P90                      | Slow manual speed                                                                                                | 0.1 kHz to 40.0 kHz                             | 0.1                    |                         | X                                            | X                                                         |
| P91                      | Fast manual speed                                                                                                | 1.0 kHz to 40.0 kHz                             | 1.0                    |                         | X                                            | X                                                         |
| P99                      | Parameter menu                                                                                                   | 0 = OFF; 1 = ON                                 | 1                      |                         | X                                            | X                                                         |

# Operation

## 3.3.2 Position set input via front panel


Only available for some unit variants; see chapter 3.1

This function can be used for storing ten position sets. A position set consists of a position value and a speed value. Each position value is structured according to digits representing millions, thousands and ones. The position sets can be overwritten by teach-in or by download via the serial interface.

Prerequisites:

- Manual mode, teach-in or oscillator mode via inputs/outputs not activated.

1. Deactivate the AUTOM input.
2. Select the position set:

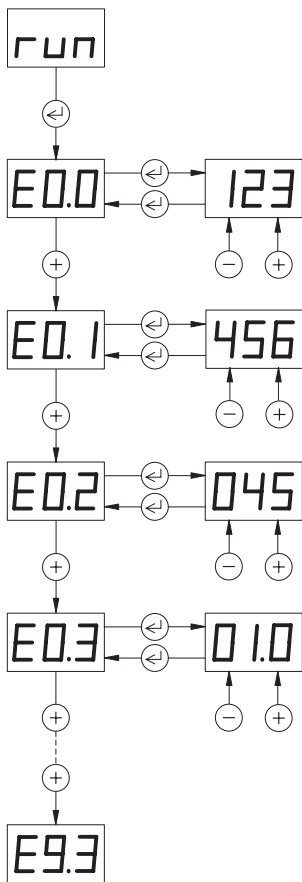

| Display      | Meaning                                                                  | Setting range                                                                              |
|--------------|--------------------------------------------------------------------------|--------------------------------------------------------------------------------------------|
| E0.0 to E9.0 | Position for sets 0 to 9<br>Position value digits representing ones      | 0 to 999 increments                                                                        |
| E0.1 to E9.1 | Position for sets 0 to 9<br>Position value digits representing thousands | 0 to 999 x 10 <sup>3</sup> increments                                                      |
| E0.2 to E9.2 | Position for sets 0 to 9<br>Position value digits representing millions  | -55 to +55 x 10 <sup>6</sup> steps;<br>±55924053 steps max.                                |
| E0.3 to E9.3 | Speed for sets 0 to 9                                                    | 0.0 to 40.0 kHz<br>If 0.0 is set, the speed is determined by the parameter P04 by default. |

Example for position input:

| E0.2     | E0.1      | E0.0     |       |
|----------|-----------|----------|-------|
| 0 4 5    | 4 5 6     | 1 2 3    | steps |
| - 2 0    | 0. 2. 1.  | 9. 6. 0. | steps |
| Millions | Thousands | Ones     |       |



**NOTE**  
1000 steps are equivalent to one motor revolution.



**NOTE**  
Three flashing points or a minus sign represent negative position values.

3. Edit the values using the  $\oplus$  and  $\ominus$  keys.
4. Save the values by pressing  $\leftarrow$ .



**NOTE**  
Stored positions can be approached via front panel or input/output control; see chapter 3.3.5.


### 3.3.3 Teach-in via front panel

Only available for some unit variants; see chapter 3.1



**NOTE**

The ten position sets can be stored in the controller memory. This memory area can be accessed directly by  
 Position sets via front panel,  
 Upload/download via serial interface,  
 Teach-in via front panel or  
 Teach-in via inputs/outputs.

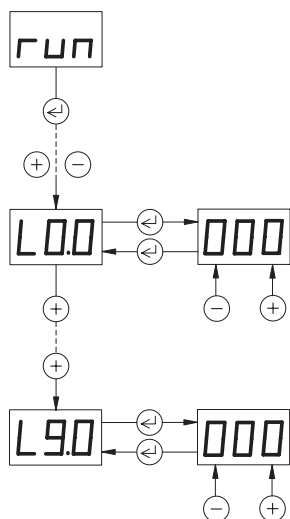

Prerequisites:

- Manual mode, teach-in or oscillator mode via inputs/outputs not activated.
- Reference point previously defined by reference movement or setting dimensions (see chapter 3.3.5).

1. Deactivate the AUTOM input.
2. Select position number L0.0 to L9.0:  
 → The digits representing ones appear in the status display.


| Display            | Meaning                                                                            |
|--------------------|------------------------------------------------------------------------------------|
| L0.0<br>to<br>L9.0 | Position number 0 to 9<br>Teach-in position digits representing ones are displayed |

3. Use the ⊕ and ⊖ keys to move to the desired position.
4. Store the actual position by pressing the ← key.  
 → The positions are stored as absolute positions.

# Operation

## 3.3.4 Value display on front panel

Available for all device variants

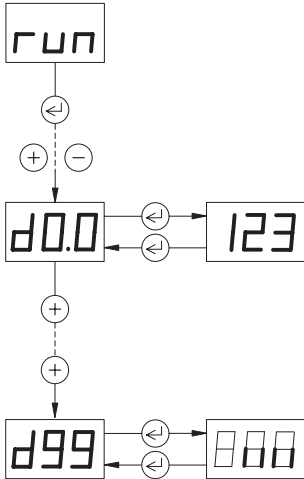


The actual position and the software version can be displayed.

With an Interbus-S interface, d99 can be used for activating the diagnostic function.

1. Set AUTOM input inactive unless on-line command processing is active.
2. Select the value to be displayed:

| Display | Meaning                                       |
|---------|-----------------------------------------------|
| d0.0    | Actual position digits representing ones      |
| d0.1    | Actual position digits representing thousands |
| d0.2    | Actual position digits representing millions  |
| d10     | Software version                              |
| d99     | Interbus-S diagnostic function                |

The Interbus-S diagnostics is activated with the d99 function and indicates the following four states:

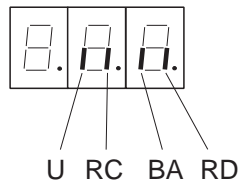

- U Operating voltage
- RC Interbus-S link o.k.
- BA Interbus-S transmission active
- RD No other Interbus-S slave available



### 3.3.5 Starting positioning and other operations

*Only available for some unit variants; see chapter 3.1*


This function can be used for starting the following operations:

- Move to stored positions
- Continue an interrupted positioning operation
- Perform reference movements
- Activate setting of dimensions
- Read voltage on analog input

Prerequisites:

- Manual mode, teach-in or oscillator mode via inputs/outputs not activated.
- If positioning is to be performed in a system of absolute dimensions (P21 = 0), a reference point must be defined. For this purpose, perform a reference movement or set dimensions.

1. Deactivate the AUTOM input.
2. Select the desired action:

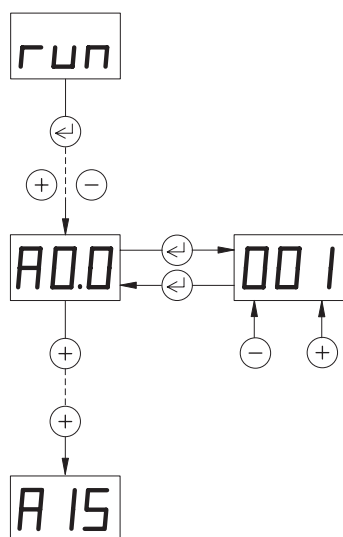

| Display      | Meaning                                                              | Setting range            |
|--------------|----------------------------------------------------------------------|--------------------------|
| A0.0 to A9.0 | Activate positioning to stored positions 0 to 9                      | 0 = Inactive; 1 = Active |
| A10          | Continue an interrupted positioning operation                        | 0 = Inactive; 1 = Active |
| A11          | Reserved                                                             |                          |
| A12          | Reference movement to CW limit switch                                | 0 = Inactive; 1 = Active |
| A13          | Reference movement to CCW limit switch                               | 0 = Inactive; 1 = Active |
| A14          | Setting dimensions to position value 0                               | 0 = Inactive; 1 = Active |
| A15          | Reference movement to reference switch                               | 0 = Inactive; 1 = Active |
| A70*         | Voltage on analog input corresponds to maximum speed in CW rotation  | 0 = Inactive; 1 = Active |
| A71*         | Voltage on analog input corresponds to maximum speed in CCW rotation | 0 = Inactive; 1 = Active |

\* Only in oscillator mode via analog interface; see chapter 3.11.

3. Enable the function by setting it to 1 = active with the  $\oplus$  key.
4. Activate the function by pressing  $\leftarrow$ .  
→ The function is executed.




#### NOTE

*Positioning operations and reference movements are performed using the set speed and acceleration parameters; see chapter 3.3.1.*

## 3.3.6 Manual movement via front panel

Available for all device variants

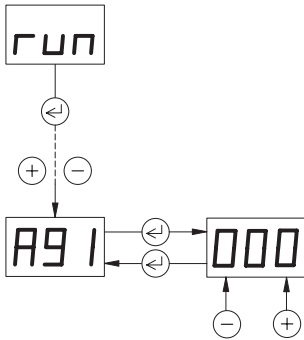

This function can be used for manually moving the motor using the keys on the front panel.

Prerequisites:

- Manual mode, teach-in or oscillator mode via inputs/outputs not activated.

1. Set AUTOM input inactive.
2. Select the function A91 for manual movement.
3. Select the sense of rotation:

- ⊕ key CW rotation
- ⊖ key CCW rotation (as seen from front towards motor shaft)

### NOTE

The sense of rotation of the motor can be changed by inverting two motor phase leads; see chapter 2.4.

### 4. Single step:

If the key is pressed for  $\leq 0.5$  s, the motor performs a single step in slow manual speed.

### Continuous operation:

If the key is pressed for  $> 0.5$  s, the motor starts running at slow manual speed (parameter P90). While the key is kept pressed, the speed increases every 5 seconds (in 10 stages) up to fast manual speed (parameter P91).

→ The current position digits representing ones appear in the status display.



### NOTE

Three flashing points represent negative position values. The movement characteristics for manual mode are illustrated in fig. 3-3.

If an error occurs during activation, an error message is displayed and the position indication goes out.

5. Stop the manual movement by pressing ⊙.

### 3.4 Manual mode via inputs/outputs

*Available for all device variants*

In manual mode, positions are approached using the inputs and outputs. Acceleration and manual speeds of the motor can be set.

Prerequisites:

- Teach-in or oscillator mode via inputs/outputs not activated.
- Front panel operation inactive.
- The parameter P69 must be set to 1 in on-line command processing mode.

1. Deactivate the AUTOM input.

2. Select the sense of rotation:

|             |                                          |
|-------------|------------------------------------------|
| Input MAN_P | CW rotation                              |
| Input MAN_N | CCW rotation                             |
|             | (as seen from front towards motor shaft) |

3. Activate MAN\_P or MAN\_N input.

**Single step:**

If the input is activated for  $\leq 0.5$  s, the motor performs a single step in slow manual speed.

**Continuous operation:**

If the input is activated for  $> 0.5$  s, the motor starts running at slow manual speed (parameter P90). While the input is active, the speed increases every 5 seconds (in 10 stages) up to fast manual speed (parameter P91).

If an error occurs during activation, an error message is displayed and the position indication goes out. The error indication is cleared upon restarting if the cause of the error has been eliminated.



**NOTE**

*The output states are described in chapter 4.*



**ATTENTION**

***Due to varying signal transmission times on the individual outputs, an output state is only valid if it remains stable for at least 0.5 ms. In addition, the signal transmission times of the master controller must be taken into account for signal evaluation.***

# Operation

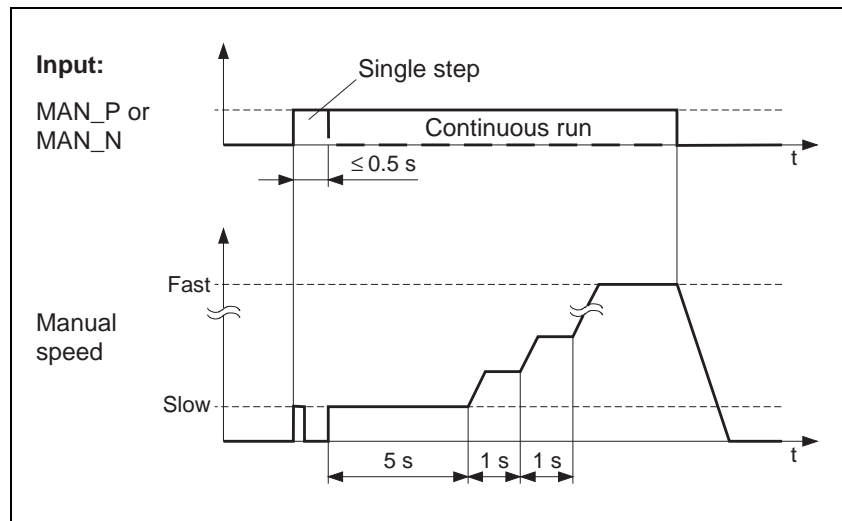


Fig. 3-3 Movement characteristics in manual mode

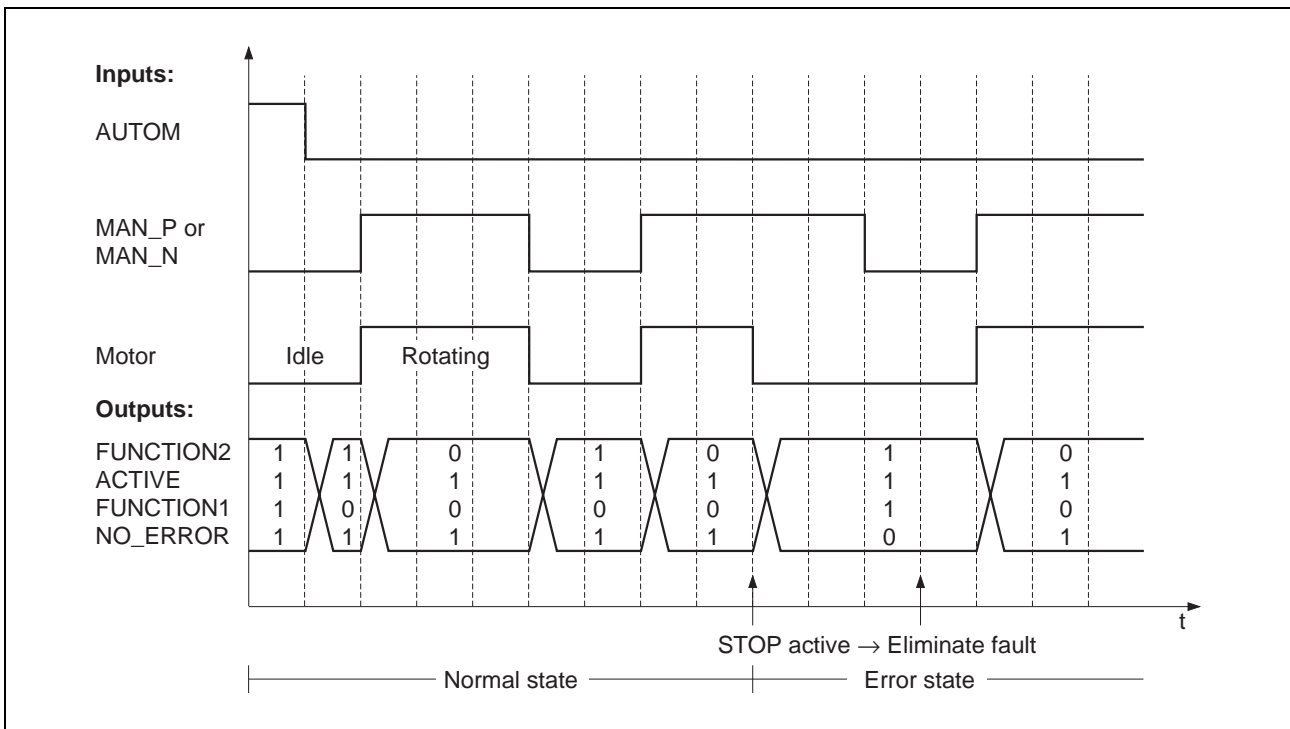


Fig. 3-4 Manual mode timing diagram

### 3.5 Teach-in mode via inputs/outputs

Only available for some unit variants; see chapter 3.1



In teach-in mode, positions are approached using the inputs and outputs and stored as absolute positions. A maximum of ten positions can be stored. The stored positions can be displayed and changed via the front panel menu Exx, see chapter 3.3.2.

**NOTE**

The ten position sets can be stored in the controller memory. This memory area can be accessed directly by  
 Position sets via front panel,  
 Upload/download via serial interface,  
 Teach-in via front panel or  
 Teach-in via inputs/outputs.


Prerequisites:

- Front panel operation inactive.
  - Reference movement or dimension setting performed; see chapter 3.6.
1. Deactivate the AUTOM input.
  2. Approach the desired position using input MAN\_P with CW (positive) rotation or input MAN\_N with CCW (negative) rotation.
  3. Select the position number the position should be assigned. For this purpose, activate or deactivate the inputs DATA1 to DATA8 as follows:



| DATA8 | DATA4 | DATA2 | DATA1 | Position number |
|-------|-------|-------|-------|-----------------|
| 0     | 0     | 0     | 0     | 0               |
| 0     | 0     | 0     | 1     | 1               |
| 0     | 0     | 1     | 0     | 2               |
| 0     | 0     | 1     | 1     | 3               |
| 0     | 1     | 0     | 0     | 4               |
| 0     | 1     | 0     | 1     | 5               |
| 0     | 1     | 1     | 0     | 6               |
| 0     | 1     | 1     | 1     | 7               |
| 1     | 0     | 0     | 0     | 8               |
| 1     | 0     | 0     | 1     | 9               |

0 = Input inactive; 1 = Input active



4. Activate the TEACH\_IN input.
  - The position is stored as an absolute position.
  - The status display reflects L\_0 to L\_9 for the selected position number.

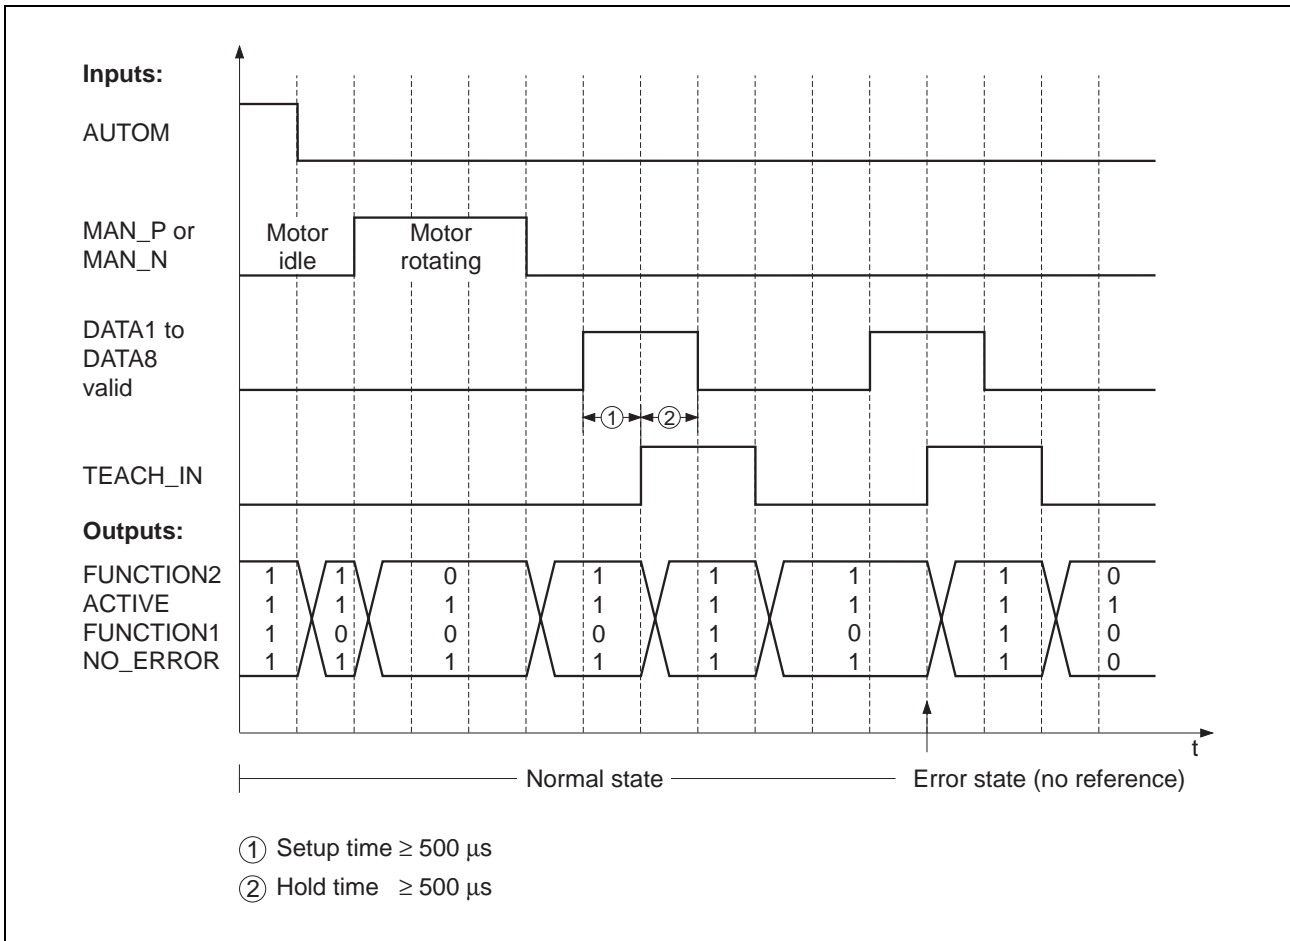


Fig. 3-5 Teach-in mode timing diagram



**NOTE**  
 The output states are described in chapter 4.



**ATTENTION**  
 Due to varying signal transmission times on the individual outputs, an output state is only valid if it remains stable for at least 0.5 ms. In addition, the signal transmission times of the master controller must be taken into account for signal evaluation.

### 3.6 Position processing via inputs/outputs

Only available for some unit variants; see chapter 3.1.

In this mode, up to ten positions can be selected and approached via inputs. The positions can be defined by teach-in, by position input via front panel or, if operated with a serial interface, via download. Positioning is effected in the system of absolute or incremental dimensions (parameter P21).

Prerequisites:

- Manual mode, teach-in or oscillator mode via inputs/outputs not activated.
- Front panel operation inactive.
- For absolute positioning, define a reference point (perform reference movement or dimension setting).

1. Activate the AUTOM input.
2. Select a position number or perform another activity.  
For this purpose, activate or deactivate the inputs DATA1 to DATA8 as follows:

r00  
.  
.  
.  
r09

r10  
.  
.  
.  
r15

rXX

| DATA8 | DATA4 | DATA2 | DATA1 | Position number                               |
|-------|-------|-------|-------|-----------------------------------------------|
| 0     | 0     | 0     | 0     | 0                                             |
| 0     | 0     | 0     | 1     | 1                                             |
| 0     | 0     | 1     | 0     | 2                                             |
| 0     | 0     | 1     | 1     | 3                                             |
| 0     | 1     | 0     | 0     | 4                                             |
| 0     | 1     | 0     | 1     | 5                                             |
| 0     | 1     | 1     | 0     | 6                                             |
| 0     | 1     | 1     | 1     | 7                                             |
| 1     | 0     | 0     | 0     | 8                                             |
| 1     | 0     | 0     | 1     | 9                                             |
|       |       |       |       | <b>Action</b>                                 |
| 1     | 0     | 1     | 0     | Continue an interrupted positioning operation |
| 1     | 0     | 1     | 1     | Reserved                                      |
| 1     | 1     | 0     | 0     | Reference movement towards CW limit switch    |
| 1     | 1     | 0     | 1     | Reference movement towards CCW limit switch   |
| 1     | 1     | 1     | 0     | Set dimensions to position value 0            |
| 1     | 1     | 1     | 1     | Reference movement towards reference switch   |

0 = Input inactive; 1 = Input active

3. Activate the START input.  
→ During positioning, the position or action number is displayed in the status display.

# Operation

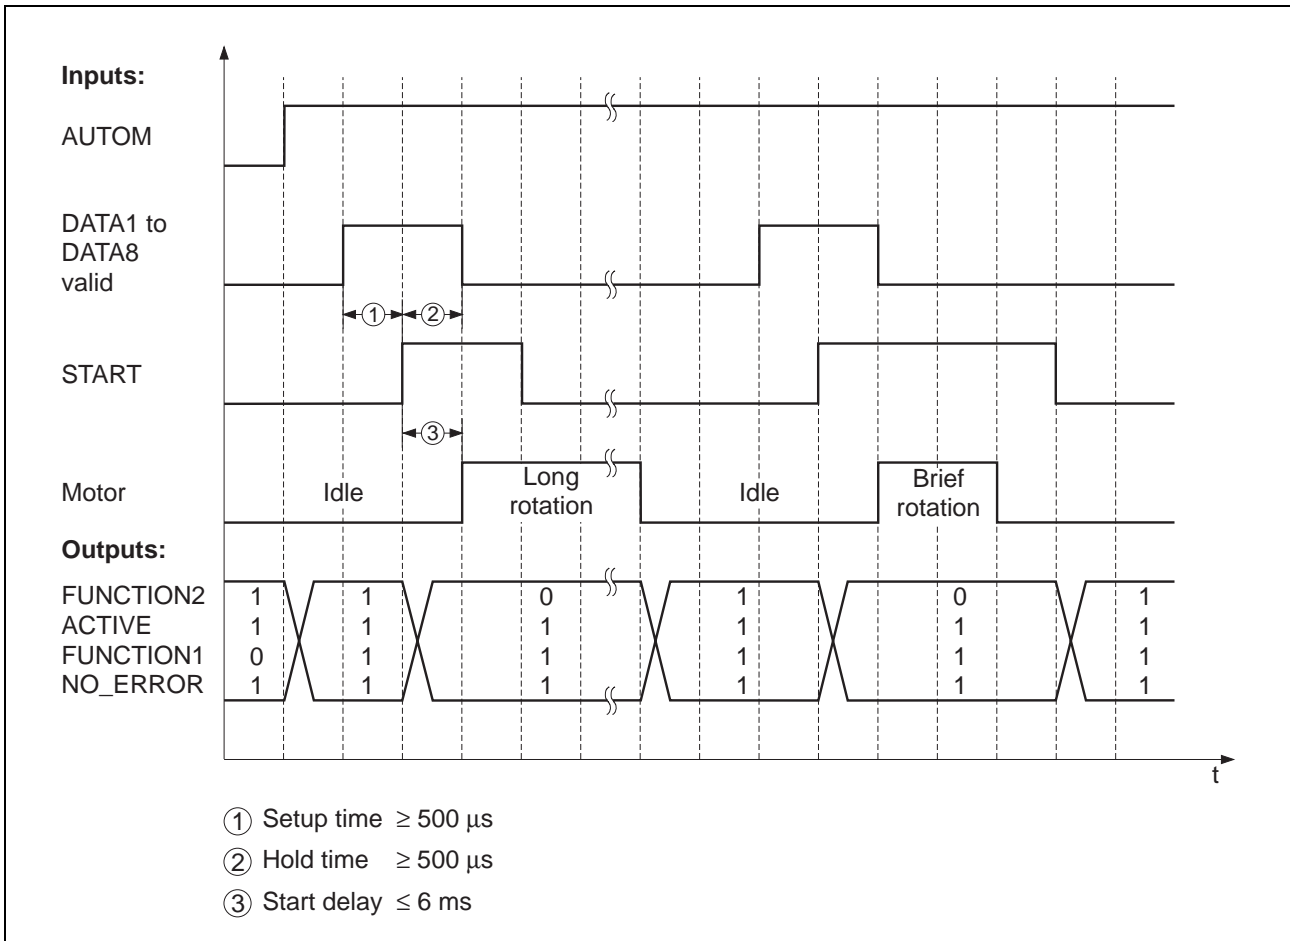


Fig. 3-6 Position processing mode timing diagram



**NOTE**  
 The output states are described in chapter 4.



**ATTENTION**  
 Due to varying signal transmission times on the individual outputs, an output state is only valid if it remains stable for at least 0.5 ms. In addition, the signal transmission times of the master controller must be taken into account for signal evaluation.



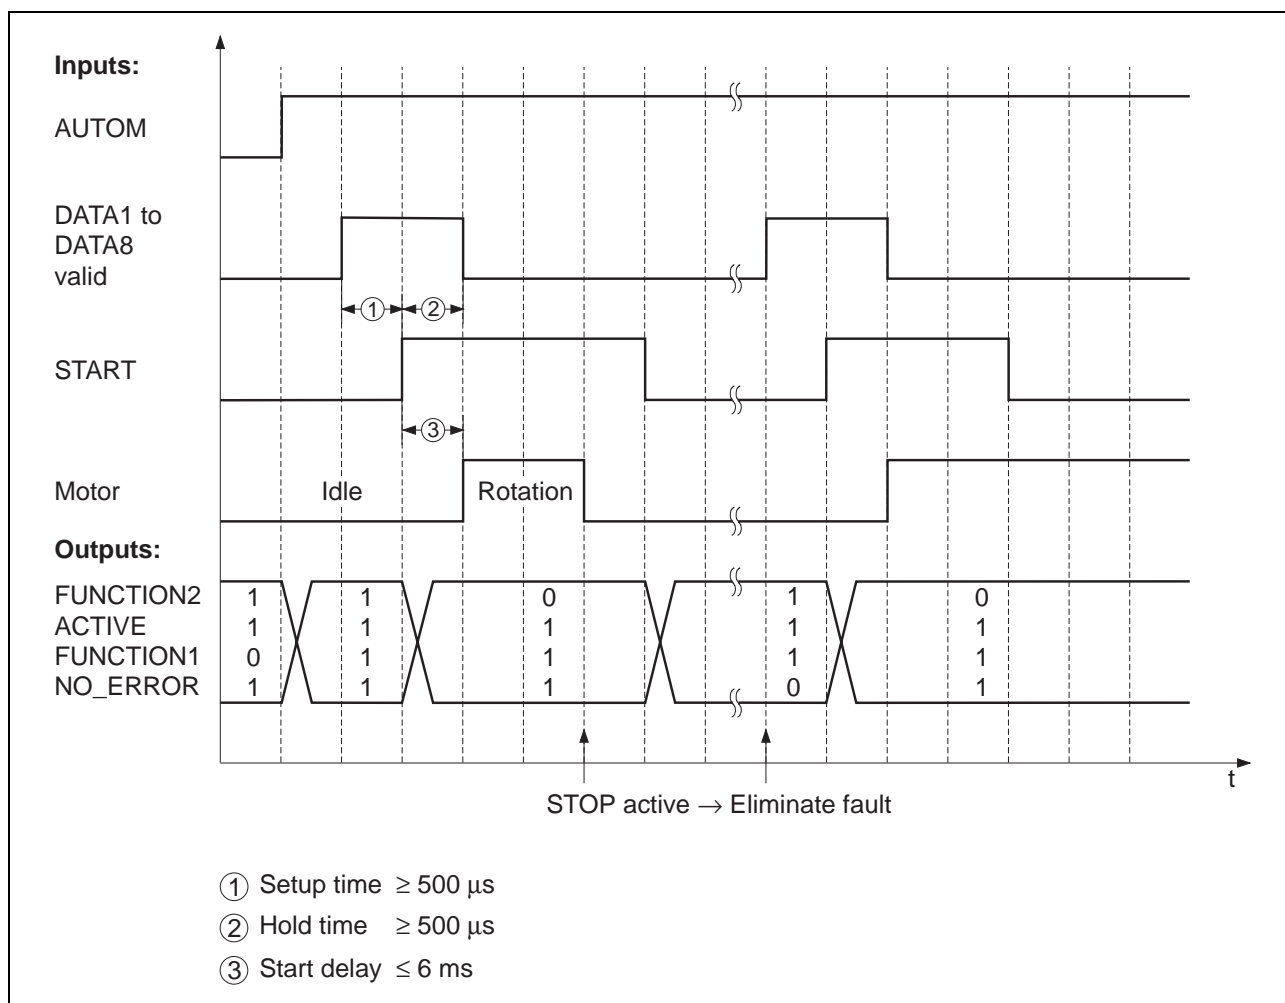


Fig. 3-7 Position processing interrupt timing diagram



**NOTE**  
 The output states and the rectification of malfunctions are described in chapter 4.

## 3.7 Upload/download via serial interface

Only available for some unit variants; see chapter 3.1.

The format for data transmission is 7-bit ASCII with even parity bit and one stop bit. The transmission rate can be set to 1.2 kbauds, 9.6 kbauds, 19.2 kbauds or 38.4 kbauds.


The RS 485 interface can be used for networking up to 31 units.

Parameters and data records are read from/loaded into the controller.



### NOTE

The ten position sets can be stored in the controller memory. This memory area can be accessed directly by  
Position sets via front panel,  
Upload/download via serial interface,  
Teach-in via front panel or  
Teach-in via inputs/outputs.

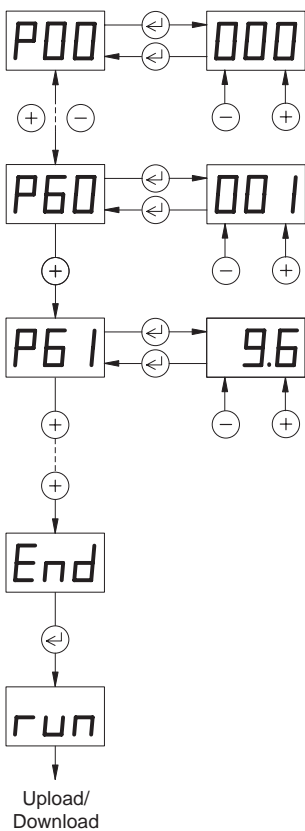

### Prerequisites:

- Front panel operation inactive.
- Motor at standstill.
- No error active.



### NOTE

The following parameters must have been set (see chapter 3.3.1):  
- Operating mode with parameter P00 = 0 or P00 = 3 (for electronic gear)  
- Network address with parameter P60 (for RS 232 always 1)  
- Baud rate with parameter P61

1. Deactivate the AUTOM input.
2. If "run" is displayed in the status display, upload/download of parameters and positions is enabled.



### NOTE

The transmitted values are retained after switching off.

### Reference documentation


Uploading and downloading is described in the separate On-line Command Processing and Upload/Download via Serial Interface documentation.

### 3.8 On-line command processing via serial or field bus interface

Only available for some unit variants; see chapter 3.1.

This mode is available if the unit has a serial interface RS 232 or RS 485 or a field bus interface (e.g. Interbus-S or Profibus-DP) installed in adapter slot OPT.1.

In this mode, single movement commands and other commands are transmitted to the controller and executed immediately. A comprehensive command set is available for this purpose.

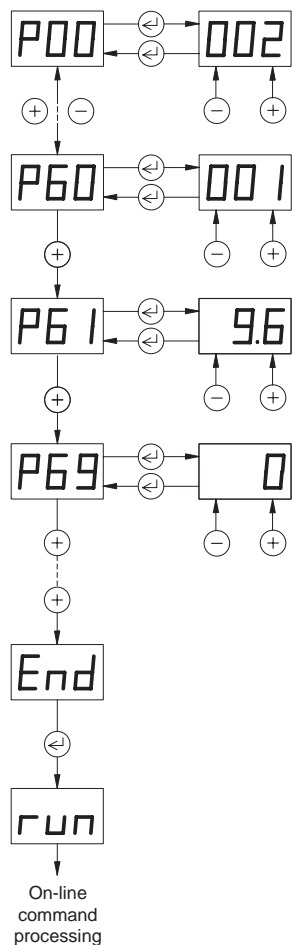

#### NOTE

The following parameters must have been set (see chapter 3.3.1):

- For serial interface, operating mode with parameter P00 = 2
- For CAN-Bus, operating mode with parameter P62
- Network address with parameter P60 (only for RS 485, Profibus-DP, CAN-Bus and SUCONET)
- Baud rate with parameter P61 (only for serial interface, Interbus-S and CAN-Bus)

If "run" is displayed in the status display, on-line command processing is enabled.

Start by activating the power controller with the INITDRIVE command before executing any movement commands.



#### ATTENTION

The parameters set via the front panel are used for the basic settings of the unit. Some of these settings can be changed by on-line command processing.

The transmitted values will be lost when switching off.

#### Reference documentation

On-line command processing mode is described in the following documentations:

- On-line Command Processing and Upload/Download via Serial Interface
- On-line Command Processing via CAN-Bus
- On-line Command Processing via Interbus-S
- On-line Command Processing via Profibus-DP
- On-line Command Processing via SUCONET

#### Description of the P69 parameter

If the parameter P69 = 1, a manual movement via I/O (see chapter 3.4) and status output via outputs (see chapter 4.1) is possible.

During a manual movement (signal AUTOM = 0), only read commands can be processed.

### Summary of read and write commands


| Write command    | Meaning                                                               |
|------------------|-----------------------------------------------------------------------|
| BRAKE            | Define output for brake                                               |
| CLRERROR         | Clear error information                                               |
| CLRSIG_SR        | Clear temporarily stored axis signals                                 |
| CONT             | Continue interrupted shaft movement                                   |
| ENSIG            | Enable or disable axis signals                                        |
| INITDRIVE        | Initialize axis                                                       |
| MOVE             | Incremental (relative) positioning operation                          |
| POS              | Absolute positioning operation                                        |
| RAMP_EXP         | Set exponential ramp                                                  |
| RAMP_LIN         | Set linear ramp                                                       |
| RAMP_SIN         | Set sine square ramp                                                  |
| REF_OUT_DISTANCE | Set maximum allowed distance from limit switch for reference movement |
| REFPOS_LIMN      | Reference movement towards CCW limit switch                           |
| REFPOS_LIMP      | Reference movement towards CW limit switch                            |
| REFPOS_REF       | Reference movement towards reference switch                           |
| ROTMON_DISABLE   | Disable rotation monitoring                                           |
| ROTMON_ENABLE    | Enable rotation monitoring                                            |
| ROTMON_RESET     | Reset rotation monitoring                                             |
| SETCURRENT       | Set motor current                                                     |
| SETENCODER       | Set encoder signal type                                               |
| SETHARDWARE      | Set hardware settings                                                 |
| SETMODE          | Set operating mode                                                    |
| SETNORM_GEAR_DEN | Set gear ratio denominator                                            |
| SETNORM_GEAR_NUM | Set gear ratio numerator                                              |
| SETOFFSET        | Set reference variable offset                                         |
| SETPOS           | Set current position                                                  |
| SETSIG_ACTIV_H   | Set active state of axis signals                                      |
| SETVEL_START     | Set start/stop speed                                                  |
| SETVEL_SYS       | Set maximum system speed                                              |
| STOP_AXIS        | Stop shaft movement                                                   |
| TIMEOUT*         | Set or disable timeout monitoring                                     |
| VEL              | Set the set speed                                                     |
| WRITE_OUTPUT     | Set outputs directly                                                  |

\* Only for units with serial interface.

| <b>Read command</b> | <b>Meaning</b>                        |
|---------------------|---------------------------------------|
| GETCURRENT          | Read electrical current values        |
| GETENSIG            | Read enabled or disabled axis signals |
| GETERROR            | Read error                            |
| GETMODE             | Read operating mode                   |
| GETPOS              | Read position values                  |
| GETSIG              | Read current axis signal states       |
| GETSIG_ACTIV_H      | Read active state of axis signals     |
| GETSIG_SR           | Read temporarily stored axis signals  |
| GETSTATE            | Read error status of an axis          |
| GETVEL              | Read speed value                      |
| READ_INPUT          | Read inputs directly                  |

## 3.9 Electronic gear

Available for units:  
 – with encoder interface  
 if P00 = 3

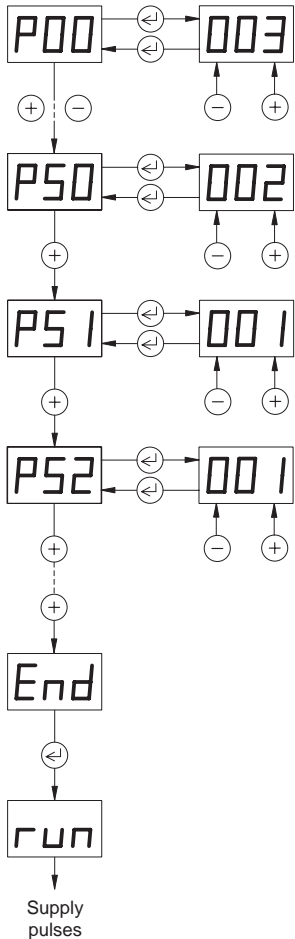

In this mode, an external signal and a gear ratio combine to determine the shaft movement. The externally supplied pulses (fig. 3-8) are counted as A/B encoder signals or pulse/direction signals and multiplied with a gear ratio (numerator by denominator). These pulses are used as the reference variable for the stepping motor position.

The pulse memory is cleared whenever an error occurs or when input AUTOM changes from 1 to 0.

The electronic gear parameters can be set using on-line command processing (see chapter 3.8) or via the front panel. The following paragraphs describe parameter setting via the front panel.

**NOTE**

The following parameters must have been set (see chapter 3.3.1):

- Operating mode with parameter P00 = 3
- Encoder signal type with parameter P50
- Gear ratios with parameters P51 and P52

1. Activate the AUTOM input.



**NOTE**

The motor accelerates using the parameter value P02 if the ramp of the supplied pulses multiplied with the gear ratio exceeds this value. If the ramp is less than the parameter value, the motor accelerates precisely according to the supplied pulses.

2. If the status display shows “run”, pulses can be supplied via the encoder interface.

The limit switches and the  $\overline{\text{STOP}}$  input are not monitored.



**NOTE**

Any supplied pulses are ignored while the AUTOM input is inactive. Also, they are not traced back when the AUTOM input is reactivated.

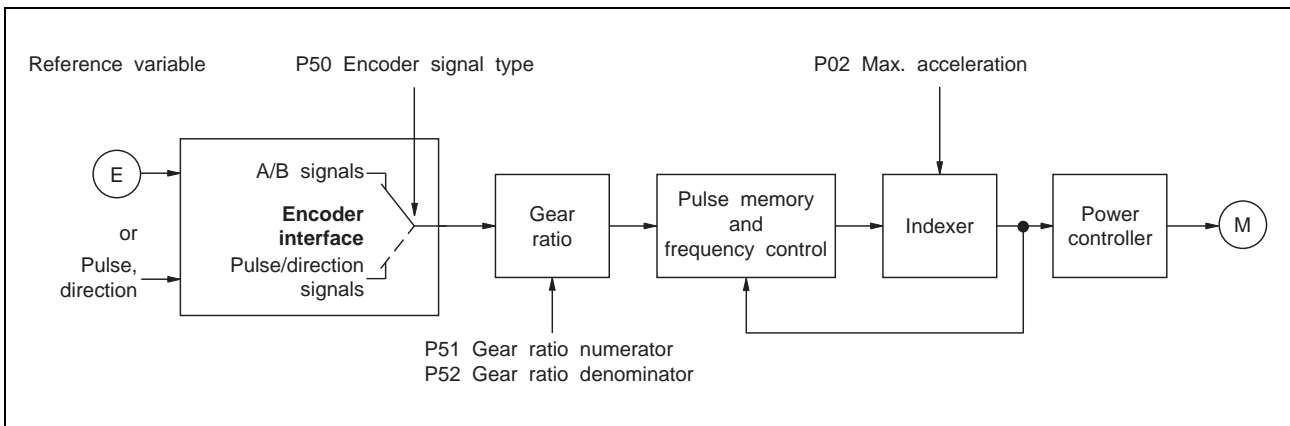


Fig. 3-8 Electronic gear block diagram

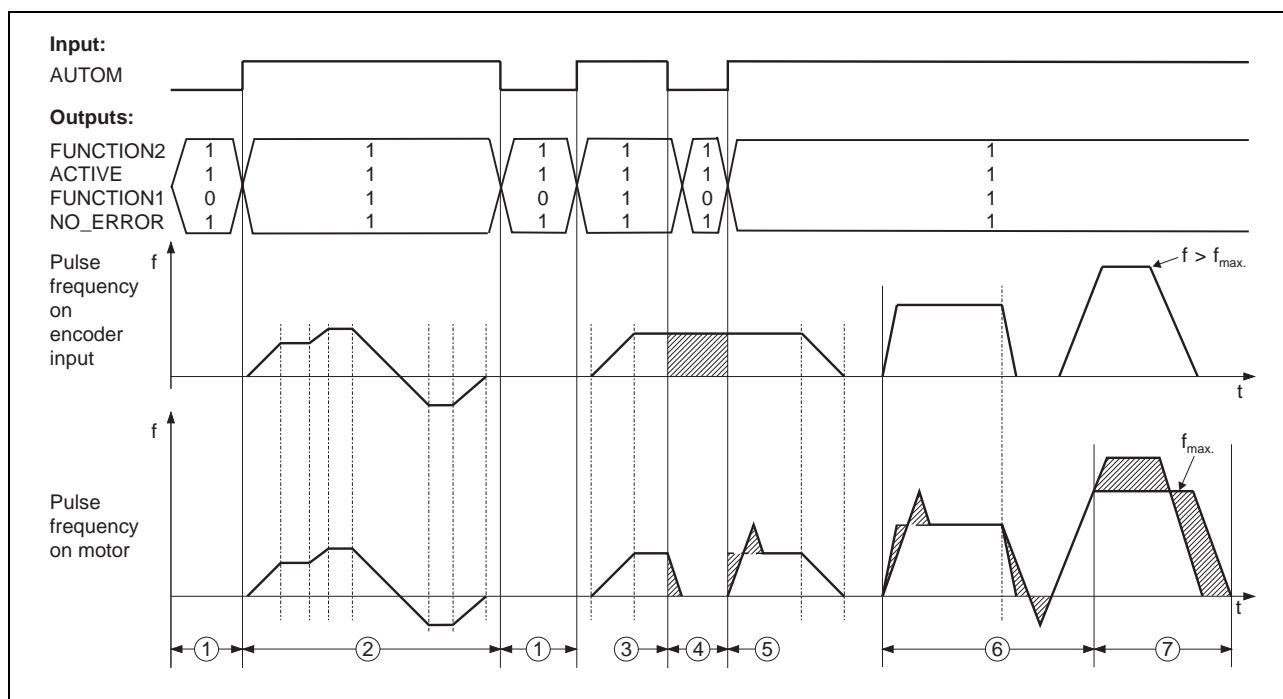


Fig. 3-9 Electronic gear timing diagram with gear ratio 1:1

- ① Manual mode
- ② The ramp of the supplied pulses is less than the acceleration set in parameter P02.  
The frequency of the supplied pulses is less than 40 kHz.  
→ The motor accelerates and moves precisely according to the supplied pulses.
- ③ The AUTOM input is not activated although pulses continue to be supplied.  
→ The motor decelerates at parameter value P02 down to standstill. The combination of states does not change before standstill.
- ④ The pulses hatched in the drawing are ignored.
- ⑤ Pulses are already supplied at the time the AUTOM input is activated.  
→ As a result, an excessive motor speed occurs.
- ⑥ The increase in frequency of the supplied pulses is greater than the acceleration set in parameter P02.  
→ The motor accelerates and decelerates at parameter value P02.  
→ As a result, an excessive motor speed occurs.
- ⑦ The frequency of the supplied pulses exceeds 40 kHz.  
→ As soon as the frequency of the supplied pulses drops below 40 kHz, the pulses are re-traced.

### 3.10 Oscillator mode via inputs/outputs

- Available for units:*  
– without interface in OPT.1,  
if P00 = 1

In oscillator mode, the two movement frequencies  $f_H$  and  $f_L$  can be set via the front panel and activated by the input FH/ $\overline{FL}$ .

Prerequisites:

- Manual mode via inputs/outputs inactive.
- Front panel operation inactive.



#### NOTE

The following parameters must have been set (see chapter 3.3.1):

- Oscillator mode with parameter P00 = 1
- Higher oscillator frequency  $f_H$  with parameter P04
- Lower oscillator frequency  $f_L$  with parameter P73

1. Activate the AUTOM input.



#### ATTENTION

**The lower oscillator frequency  $f_L$  must be less than the starting limit frequency  $f_{AM}$  of the stepping motor; see stepping motor sales documentation.**

2. Set the higher and lower oscillator frequency via input FH/ $\overline{FL}$ .  
Input high: Accelerate to higher oscillator frequency  $f_H$ .  
Input low: Accelerate or decelerate to lower oscillator frequency  $f_L$ .



#### NOTE

The INV\_DIR input can be used for inverting the motor's sense of rotation.

3. Activate the START input.  
→ The motor rotates at the set movement frequency.
4. Deactivate the START input or activate the  $\overline{STOP}$  input.  
→ The motor stops.



#### NOTE

For accurate stopping at the desired position, the  $\overline{STOP}$  input should be used.



#### NOTE

The motor can be deenergized with the CURRENT\_OFF signal. In this state, it does not have any holding torque. The CURRENT\_OFF signal is always evaluated.



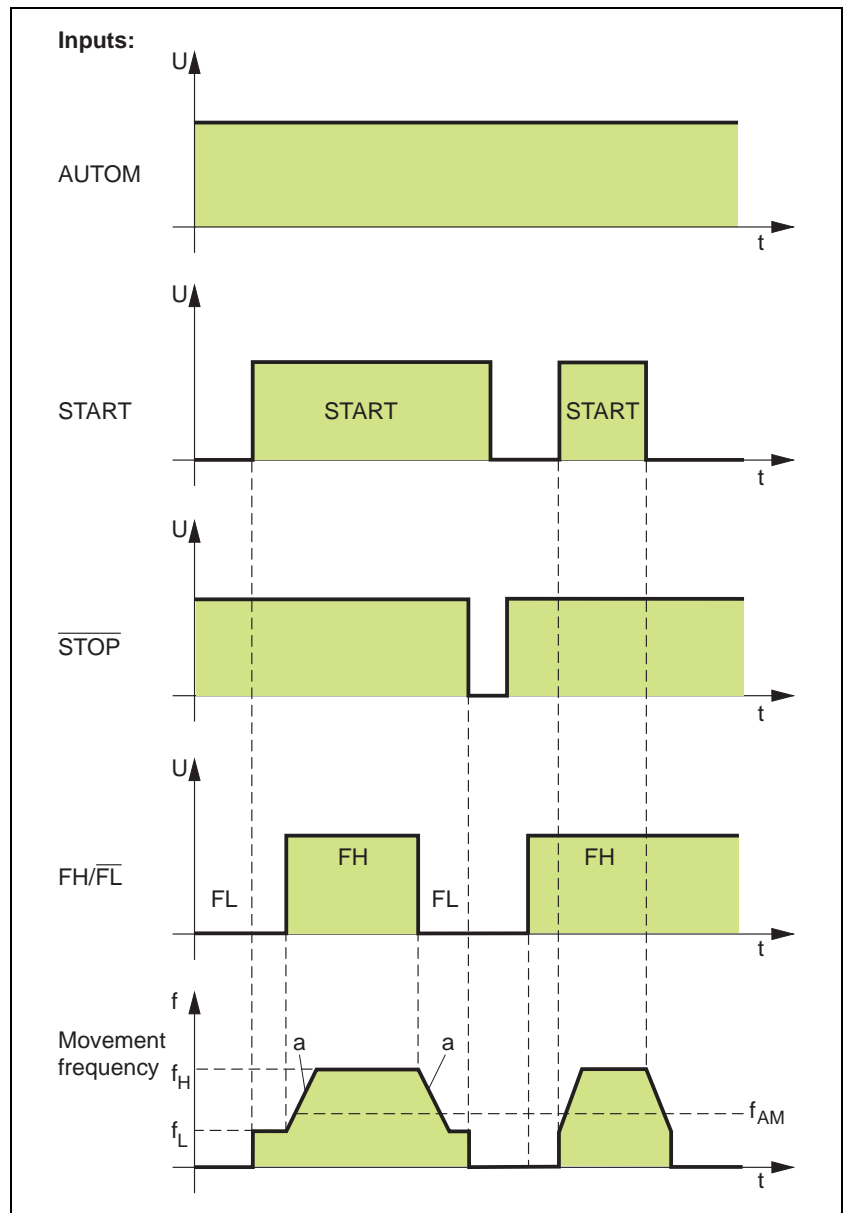



Fig. 3-10 Timing diagram for oscillator mode via inputs/outputs

- a Acceleration (can be set by parameter P02)
- $f_{AM}$  Starting limit frequency of stepping motor
- $f_H$  Higher oscillator frequency (can be set by parameter P04)
- $f_L$  Lower oscillator frequency (can be set by parameter P73)

## 3.11 Oscillator mode via analog interface

Available for units:  
– with analog interface

In oscillator mode, the speed of the stepping motor can be set via an analog voltage on the ANA\_IN input. The voltage range can be set on the front panel from -10 V to +10 V.

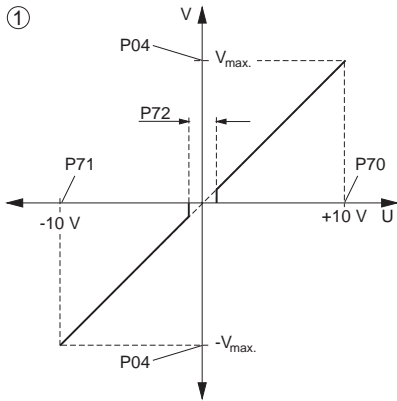

Prerequisites:

- Manual mode via inputs/outputs inactive.


The following parameters must have been set (see chapter 3.3.1):

P02 Acceleration

P04 Maximum speed in CW and CCW sense of rotation.

P70 Voltage ( $\pm 10$  V) at maximum speed in CW sense of rotation. P70 can be used to define the ANA\_IN input voltage at which the motor is to move at maximum speed in CW sense of rotation.

P71 Voltage ( $\pm 10$  V) at maximum speed in CCW sense of rotation. P71 can be used to define the ANA\_IN input voltage at which the motor is to move at maximum speed in CCW sense of rotation.

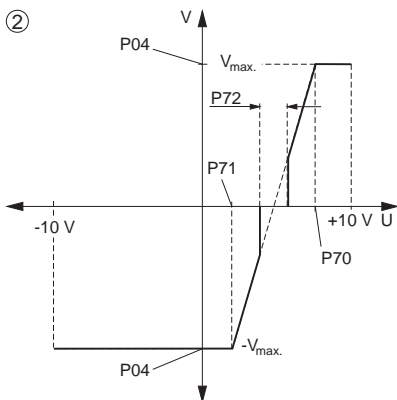

The two graphics show:

- ① Normal case:  $\pm 10$  V input voltage (maximum resolution)
- ② Special case: Limited working range (reduced resolution)



### NOTE

With the actions A70 and A71, the working range can be defined by applying two voltages on the analog input; see chapter 3.3.5. The two voltages are stored in the parameters P70 and P71.

P72 Zero window.

If the voltage on the ANA\_IN input is within the range of the window specified with P72, the motor is decelerated.

P74 Braking ramp with analog interface ANOZ.

P74 can be used for setting the deceleration at which the motor comes to a standstill, if

- the AUTOM input is inactive;
- the  $\overline{\text{STOP}}$  input is activated.



### NOTE

If P74 = 0, the motor is decelerated at the value of P02.

1. Activate the AUTOM input.
2. Apply a voltage to the ANA\_IN input.  
→ The motor rotates at the speed which is proportional to this voltage.



**NOTE**  
The *INV\_DIR* input can be used for inverting the motor's sense of rotation.

3. Deactivate the AUTOM input.  
→ The motor is decelerated.



**NOTE**  
The motor can be deenergized with the *CURRENT\_OFF* signal. In this state, it does not have any holding torque.  
To quickly stop and resume a motor movement, use the *STOP* input.

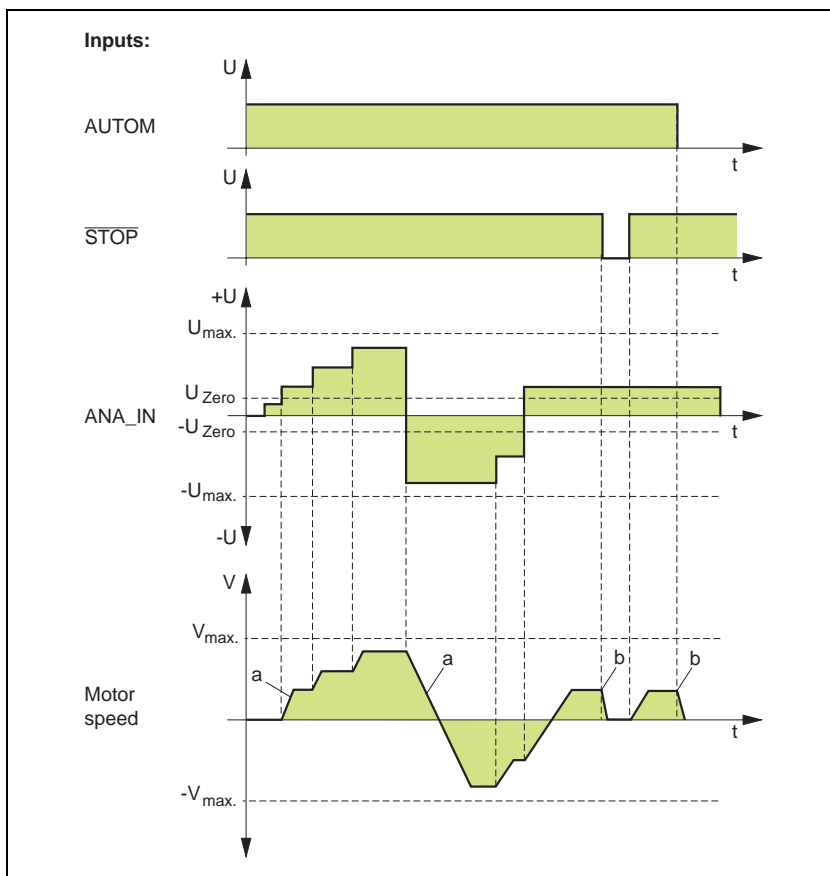


Fig. 3-11 Timing diagram for oscillator mode via analog interface


- a Acceleration (can be set by parameter P02)
- b Braking ramp (can be set by parameter P74)
- $U_{max}$ . Voltage at maximum speed with CW sense of rotation (can be set by parameter P70)
- $-U_{max}$ . Voltage at maximum speed with CCW sense of rotation (can be set by parameter P71)
- $U_{Zero}$  Zero window (can be set by parameter P72)
- $V_{max}$ . Maximum speed (can be set by parameter P04)

## 3.12 Rotation monitoring

Available for units:  
 – with encoder interface,  
 if  $P00 \neq 3$  and  $P20 = 2$

The rotation monitoring function is available if the controller has an encoder interface and the motor a type 1000 encoder installed.

The rotation monitoring feature signals a contouring error if the difference between set and actual position of the motor is more than 18 steps.

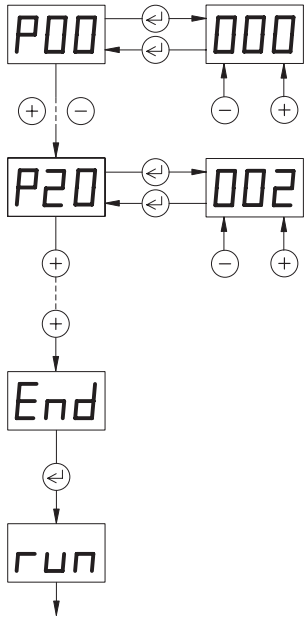

### NOTE

The following parameters must have been set (see chapter 3.3.1):

- Operating mode with parameter  $P00 \neq 3$
- Rotation monitoring with parameter  $P20 = 2$


In on-line command processing mode, rotation monitoring can be enabled with the `ROTMON_ENABLE` command or disabled with the `ROTMON_DISABLE` command.

Rotation monitoring active  
 (power controller ON)

## 4 Malfunctions

### 4.1 Status indicators


The three seven-segment displays (item 20) indicate parameters, input values, operating states and error codes.

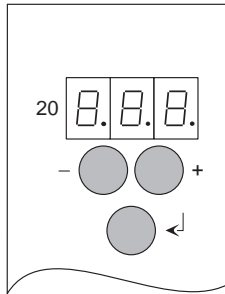

Meanings of runtime messages:

| Display | Meaning                                                                                                                                                                         |
|---------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|         | Controller ready. The power controller has been switched on (with the INITDRIVE command in on-line command processing mode).<br>The individual functions can be activated.      |
|         | Exit the selection menu for front panel operation.<br>Pressing  changes to "run" mode.                                                                                          |
|         | Flashing error code; see chapter 4.2.<br>Acknowledge with  after eliminating the cause of the error. It is possible that another error is then displayed.                       |
|         | Teach-in mode via inputs/outputs; see chapter 3.5                                                                                                                               |
|         | Position processing via inputs/outputs; see chapter 3.6                                                                                                                         |
|         | For troubleshooting, see chapter 4.2                                                                                                                                            |
|         | For troubleshooting, see chapter 4.2                                                                                                                                            |
|         | Negative values<br>for two-digit values with a minus sign;<br>for values with more digits with three flashing points.<br>Only the last few digits are displayed, e.g. -251.0.0. |
|         |                                                                                                                                                                                 |
|         | Interbus-S diagnostics<br>for testing the Interbus-S interface.                                                                                                                 |

#### Interbus-S diagnostics

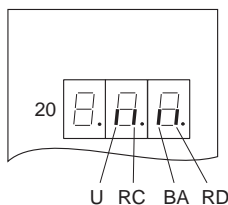

The following four indications are used for diagnostic purposes on units with Interbus-S interface.

- U Operating voltage
- RC Interbus-S link o.k.
- BA Interbus-S transmission active
- RD No other Interbus-S slave available

The diagnostics is activated with the function d99 from the front panel (see chapter 3.3.4).

## Output states

| Output states |        |           |          | Meaning                                                       | Rectification                                                                                     | Acknowledge |
|---------------|--------|-----------|----------|---------------------------------------------------------------|---------------------------------------------------------------------------------------------------|-------------|
| Q0            | Q1     | Q2        | Q3       |                                                               |                                                                                                   |             |
| FUNCTION2     | ACTIVE | FUNCTION1 | NO_ERROR |                                                               |                                                                                                   |             |
| 0             | 0      | 0         | 0        | 24 V supply voltage not available                             | Switch on supply voltage                                                                          |             |
| 1             | 0      | 0         | 0        | Fatal error                                                   | See chapter 4.2                                                                                   | 1           |
|               |        |           |          | Power controller not ready                                    | In on-line command processing mode, use the INITDRIVE command to initialize the power controller. |             |
| 1             | 0      | 1         | 0        | Contouring error detected                                     | See chapter 4.2                                                                                   | 2, 3        |
| 0             | 1      | 0         | 0        | Reference not available                                       | Execute reference movement                                                                        | 2, 4, 5     |
| 1             | 1      | 0         | 0        | Limit switch approached unintentionally                       | Move out of limit switch range by manual control                                                  | 2, 4, 5     |
| 0             | 1      | 1         | 0        | Other error detected                                          | See chapter 4.2                                                                                   | 2, 4, 5     |
| 1             | 1      | 1         | 0        | Stop                                                          | See chapter 4.2                                                                                   | 2, 4, 5     |
| 0             | 1      | 0         | 1        | Manual movement active                                        | –                                                                                                 |             |
| 1             | 1      | 0         | 1        | Manual movement completed                                     | –                                                                                                 |             |
| 0             | 1      | 1         | 1        | Input AUTOM = 1 and motor rotates or dimension setting active | –                                                                                                 |             |
| 1             | 1      | 1         | 1        | Input AUTOM = 1 and motor stops or teach-in acknowledgement   | –                                                                                                 |             |



### NOTE

If on-line command processing is active and P69 = 0, the outputs can be freely used.

Errors are acknowledged in four ways:

- 1 Switch the mains voltage off and on again.
- 2 Press the ⏪ key on the front panel. This does not change the status of the outputs.
- 3 Activate ERR\_RESET input unless on-line command processing mode is active.
- 4 Change the signal level on AUTOM input. This merely clears the error display.
- 5 New action after eliminating the cause of the error.




### ATTENTION


Due to varying signal transmission times on the individual outputs, an output state is only valid if it remains stable for at least 0.5 ms. In addition, the signal transmission times of the master controller must be taken into account for signal evaluation.

**4.2 Troubleshooting tables**

The following table lists the possible malfunctions indicated with an error code in the status display (item 20), their possible causes and methods for rectification.

If several errors occur, the corresponding error codes are stored in the controller.

The error codes can be displayed one after the other by pressing ; see page 4-5.

| Display | Cause                                                                         | Rectification                                                                                                                                                                                                                          |
|---------|-------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 03      | Motor lead short-circuit                                                      | Check the motor wiring; see chapter 2.4.2.                                                                                                                                                                                             |
|         |                                                                               | Install a correct motor; see chapter 6.1.                                                                                                                                                                                              |
| 04      | Combined message for power controller fault                                   | Retrieve details on the cause of the fault by pressing  . It may be necessary to switch off the controller.                                         |
| 05      | Power controller overvoltage (intermediate circuit voltage >395 V)            | Connect an external bleed resistor; see chapter 6.2.5.                                                                                                                                                                                 |
| 07      | Power controller overtemperature                                              | Let the power controller cool down while the motor is at a standstill.                                                                                                                                                                 |
|         |                                                                               | Install a fan; see chapter 6.2.1.                                                                                                                                                                                                      |
| 11      | Power controller undervoltage (<200 V)                                        | Check the voltage supply.<br>If on-line command processing inactive:<br>Activate ERR_RESET input.<br>In on-line command processing mode:<br>Use SETHARDWARE to switch power controller off and on again; set CLRSIG_SR to ampnotready. |
| 12      | Contouring error (rotation monitoring)                                        | Check encoder or wiring of encoder interface; see chapter 2.4.8.                                                                                                                                                                       |
|         |                                                                               | Reduce acceleration; see chapter 3.3.1.                                                                                                                                                                                                |
|         |                                                                               | Check electrical current setting; see chapter 3.3.1.                                                                                                                                                                                   |
|         |                                                                               | Reduce any excessive mechanical load or friction moment.                                                                                                                                                                               |
|         |                                                                               | If on-line command processing inactive:<br>Activate ERR_RESET input.<br>In on-line command processing mode:<br>Enter the ROTMON_RESET command.                                                                                         |
| 14      | Power controller without voltage supply                                       | Check voltage supply.<br>Switch on the voltage supply for the power controller first before switching on the voltage supply for the processor unit.                                                                                    |
|         | Internal power controller defective                                           | If switching on is impossible, call Technical Services department.                                                                                                                                                                     |
| 17      | System without reference                                                      | Perform reference movement or dimension setting; see chapter 3.3.5 or 3.6.                                                                                                                                                             |
| 20      | Incorrect limit switch $\overline{\text{LIMP}}$ , or limit switch malfunction | Check wiring and function of the limit switch or the sense of rotation of the motor; see chapter 2.5.<br>$\overline{\text{LIMP}}$ must be approached with CW rotation of the motor.                                                    |

## Malfunctions

| Display                 | Cause                                                                                  | Rectification                                                                                                                                                                     |
|-------------------------|----------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 21                      | Incorrect limit switch $\overline{\text{LIMN}}$ , or limit switch malfunction          | Check wiring and function of the limit switch or the sense of rotation of the motor; see chapter 2.5. $\overline{\text{LIMN}}$ must be approached with CCW rotation of the motor. |
| 22                      | CW limit switch $\overline{\text{LIMP}}$ actuated                                      | With manual movement:<br>Movement to opposite direction; see chapter 3.3.6 or 3.4.<br>In position processing mode:<br>Perform reference movement; see chapter 3.6.                |
| 23                      | CCW limit switch $\overline{\text{LIMN}}$ actuated                                     | With manual movement:<br>Movement to opposite direction; see chapter 3.3.6 or 3.4.<br>In position processing mode:<br>Perform reference movement; see chapter 3.6.                |
| 29                      | Both limit switches activated or reference switch malfunction                          | Check function, wiring and voltage supply of limit switch or reference switch.                                                                                                    |
| 30                      | Stop via $\overline{\text{STOP}}$ input                                                | Continue interrupted movement or activate a new movement; see chapter 3.6.                                                                                                        |
| 40                      | System error                                                                           | If on-line command processing inactive:<br>Call Technical Services department.                                                                                                    |
|                         |                                                                                        | In on-line command processing mode:<br>Determine the cause of the error using the GETERROR_SR command.                                                                            |
| 51                      | Link via serial interface or field bus interface disrupted (timeout)                   | Check wiring and master function.                                                                                                                                                 |
| 54                      | Only for on-line command processing:<br>Invalid address when accessing inputs/outputs  | Check the command transfer parameters.                                                                                                                                            |
| 57                      | EEPROM write error                                                                     | Call Technical Services department.                                                                                                                                               |
| 81                      | Invalid position number in teach-in mode                                               | Select a valid position number.                                                                                                                                                   |
| 82                      | Basic settings of parameters and data in EEPROM made                                   | Acknowledge by pressing $\leftarrow$ .                                                                                                                                            |
| 83                      | Only for on-line command processing:<br>Manual movement not possible since motor moves | Bring motor to a standstill.                                                                                                                                                      |
| Other error indications | System error                                                                           | Call Technical Services department.                                                                                                                                               |




### **DANGER**




**The mains supply voltage must be disconnected for any check on the mains, motor, or bleed resistor wiring.**



### Clearing an error

The error codes in the status display or error memory can be cleared by pressing .

After clearing the error code, "Err", "OFF" or "run" appears in the status display.

| Display                                                                           | Cause                                           | Rectification                                                                                                                            |
|-----------------------------------------------------------------------------------|-------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------|
|  | The error codes "11", "12" or "14" are cleared. | Eliminate the cause of the error (see troubleshooting table) and activate the ERR_RESET input.                                           |
|  | One or more error codes are cleared.            | Eliminate the cause of the error (see troubleshooting table) and switch the 24 V supply voltage for the processor unit off and on again. |
|  | Controller ready.                               | –                                                                                                                                        |

### Other malfunctions

The following table lists possible malfunctions which are not indicated.

| Malfunction                                     | Cause                                                            | Rectification                               |
|-------------------------------------------------|------------------------------------------------------------------|---------------------------------------------|
| Motor does not move even with current available | Motor is mechanically blocked                                    | Release motor brake, if available.          |
| No motor torque                                 | One or more motor leads interrupted                              | Check motor wiring; see chapter 2.4.        |
| Motor does not move                             |                                                                  |                                             |
| Motor does not follow control                   | Motor leads interchanged, or one or more motor leads interrupted | Use the proper motor type; see chapter 6.1. |
|                                                 | Motor and positioning controller do not match                    |                                             |



**DANGER**

*The mains supply voltage must be disconnected for any check on the mains, motor, or bleed resistor wiring.*

### 4.3 Repair work



#### **ATTENTION**

***Any necessary repair work must not be carried out except by BERGER LAHR!***

Mark all connections when disassembling the unit.

The set parameters and the mounting location number of the old unit must be transferred to the new one when replacing a unit.

### 4.4 Storage, shipment

The following requirements apply when storing units or PC boards:

- The maximum air humidity must not be exceeded (see chapter 1.3).
- The storage temperature specification must be observed (see chapter 1.3).
- Stored parts must be protected against dust and dirt.
- Units or PC boards marked with the symbol



may only be unpacked, stored and installed in an electrostatically protected environment.

- The original packing material should be kept for later use.

The following requirements apply when shipping units or PC boards:

- Units or PC boards must be shipped in their original packing material.
- PC boards without batteries or accumulators must be packed in wrapping which is electrically conductive on both sides (use original wrapping, if possible).
- PC boards with batteries or accumulators must be packed in wrapping which is electrically conductive on the outside and antistatic on the inside (use original wrapping, if possible).
- Units or PC boards marked with the symbol



may only be packed in an electrostatically protected environment.

## **5 Customer service**

The Technical Services department offer the following services under the phone numbers given:

- **Spare part information** by direct line  
**Phone: +49 (0) 7821 - 946 - 606**  
Express spare part shipment from Lahr;  
reaches most destinations in Europe within 24 hours.
  
- **Technical advice in case of failures** by hotline  
**Phone: +49 (0) 7808 - 943 - 226**  
  
**Fax: +49 (0) 7808 - 943 - 499**  
**Internet e-mail: [hotline@berger-lahr.com](mailto:hotline@berger-lahr.com)**

Of course, the Technical Services department also offer the following services:

- **On-site maintenance** and
  
- **direct communication with your service specialist.**



## 6 Appendix

### 6.1 Device variants

The following device variants are available, depending on the 3-phase stepping motors with a motor voltage of 325 V which can be controlled and depending on the interface configuration:

| Unit     | For use with motor type         |
|----------|---------------------------------|
| WDP3-014 | Type size 90 VRDM 39xx/50 LWB   |
| WDP3-018 | Type size 110 VRDM 311xx/50 LWB |

| Interface<br>(adapter slot 21 OPT.1) | Encoder interface<br>(adapter slot 22 OPT.2) |            |
|--------------------------------------|----------------------------------------------|------------|
| Not installed                        | Not installed                                | LRS 422 IN |
| ANOZ                                 | Not installed                                | LRS 422 IN |
| RS 232                               | Not installed                                | LRS 422 IN |
| RS 485 LS                            | Not installed                                | LRS 422 IN |
| CAN-Bus (CAN)                        | Not installed                                | LRS 422 IN |
| Interbus-S (IBS)                     | Not installed                                | LRS 422 IN |
| Profibus-DP (PBDP)                   | Not installed                                | LRS 422 IN |



#### NOTE

The interfaces installed in the unit are indicated on the type plate. The following abbreviations are used:

|            |                                     |
|------------|-------------------------------------|
| ANOZ       | Analog interface                    |
| CAN        | CAN-Bus interface                   |
| IBS        | Interbus-S interface                |
| PBDP       | Profibus-DP interface               |
| RS 232     | Serial interface RS 232             |
| LRS 422 IN | Encoder interface RS 422            |
| RS 485 LS  | Serial interface RS 485             |
| RS 485 HS  | Serial interface RS 485 for SUCONET |

6.2 Description of accessories

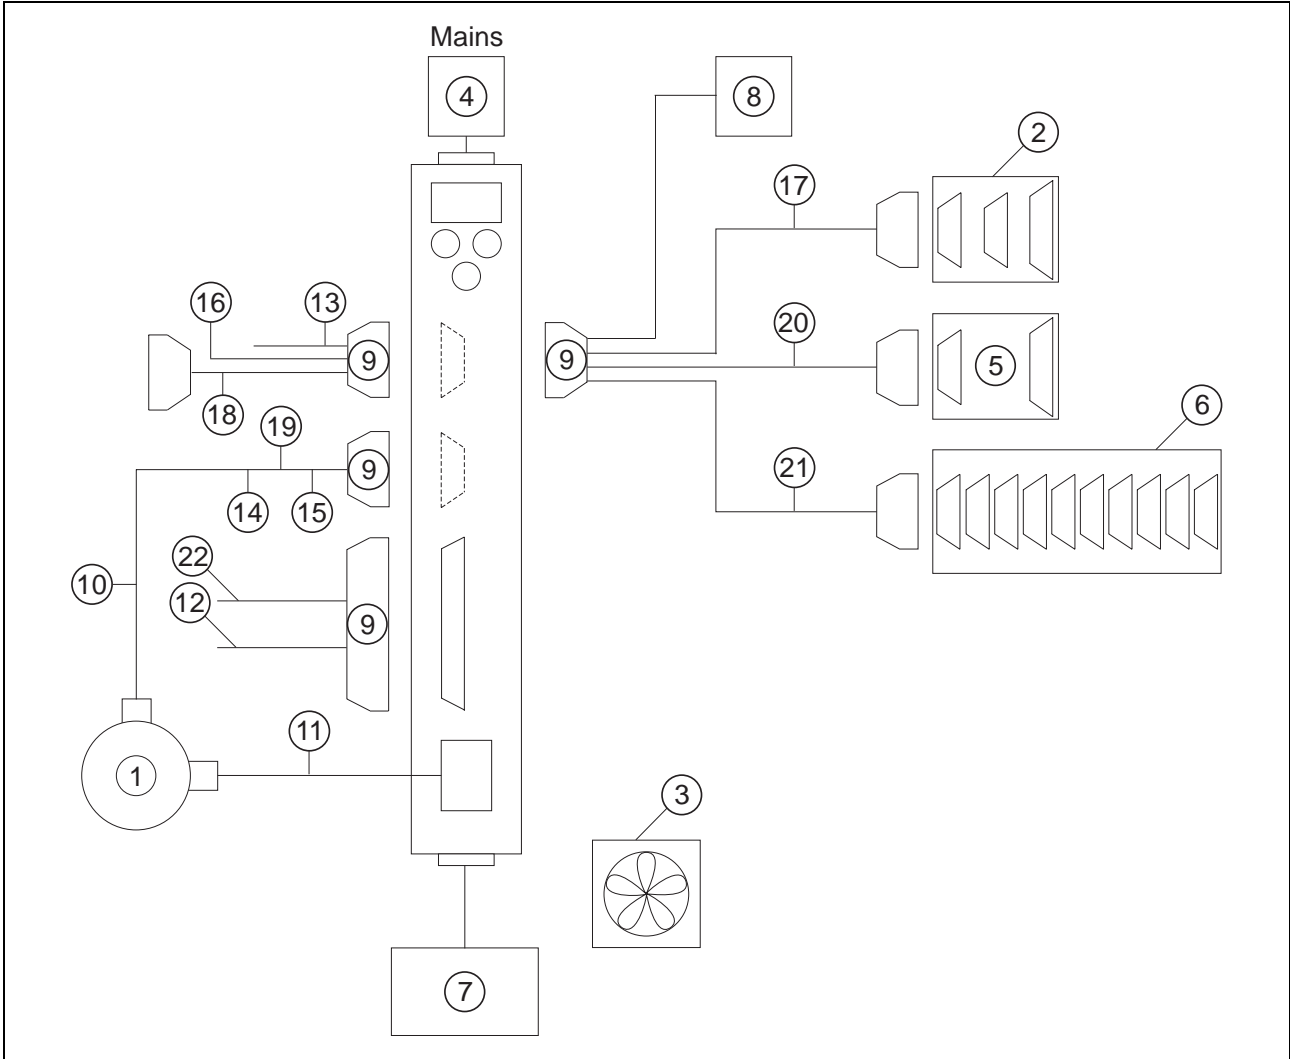


Fig. 6-1 Accessories

The following accessories may be ordered separately (see fig. 6-1):

| Item no. | Designation                                                                    | Reference                                                   |
|----------|--------------------------------------------------------------------------------|-------------------------------------------------------------|
| 1        | 3-phase stepping motor with or without encoder                                 | See chapter 6.1 and 3-phase stepping motor drives catalogue |
| 2        | MP 927 Interbus-S interface adapter                                            | See On-line Command Processing via Interbus-S documentation |
| 3        | Fan for WDP3-014                                                               | See chapter 6.2.1                                           |
| 4        | Mains filter                                                                   | See chapter 6.2.2                                           |
| 5        | MP 923 interface converter RS 232/RS 485                                       | See chapter 6.2.3                                           |
| 6        | MP 924 interface distributor RS 485                                            | See chapter 6.2.4                                           |
| 7        | Additional bleed resistor                                                      | See chapter 6.2.5                                           |
| 8        | Profibus-DP bus terminal or adapter                                            | –                                                           |
| 9        | Set of connectors (all sub-D connectors)                                       | –                                                           |
|          | <b>Non-terminated cables</b>                                                   | See sales documentation                                     |
| 10       | Cable for encoder                                                              |                                                             |
| 11       | Motor cable 3 x 1.5 mm and 2 x 1.0 mm<br>Motor cable 3 x 2.5 mm and 2 x 1.5 mm |                                                             |
| 12       | Signal cable for signal connection                                             |                                                             |
| 13       | Signal cable for adapter slot OPT.1                                            |                                                             |
| 14       | Signal cable (encoder) for adapter slot OPT.2                                  |                                                             |
| 15       | Signal cable (pulse, direction) for adapter slot OPT.2                         |                                                             |
|          | <b>Ready-made cables</b>                                                       |                                                             |
| 16       | ANOZ/customer signal cable, terminated on device end                           |                                                             |
| 17       | Interbus-S/MP 927 signal cable, terminated on both ends                        |                                                             |
| 18       | RS 232/PC signal cable, terminated on both ends                                |                                                             |
| 19       | RS 422 IN/customer signal cable, terminated on device end                      |                                                             |
| 20       | RS 485 LS/MP 923 signal cable, terminated on both ends                         |                                                             |
| 21       | RS 485 LS/MP 924 signal cable, terminated on both ends                         |                                                             |
| 22       | Signal connection/customer signal cable, terminated on device end              |                                                             |

Non-terminated cables are available in the following lengths:

5 m 10 m 15 m 20 m 25 m 30 m 50 m 75 m 100 m 200 m

Ready-made cables are available in the following lengths:

1.5 m 2 m 3 m 5 m



**NOTE**

Refer to the sales documentation of the WDP3-01X positioning controller for the accessory order numbers.

## 6.2.1 Fan

The unit can be provided with a fan in order to improve heat dissipation (see chapter 2.3).

The fan (fig. 6-2) must be mounted at the bottom of the unit. The airstream must pass through the unit from bottom up (see fig. 2-2). The arrow on the fan indicates the direction of the airstream if the fan is connected correctly (red = 24 VDC, black = 24 VGND).

1. Cut out the grille on the unit.
2. Fasten the fan to the bottom of the unit with four screws.
3. Connect the fan to the external 24 VDC voltage supply.



**NOTE**

*Ensure that the airstream in and around the unit is unobstructed.*

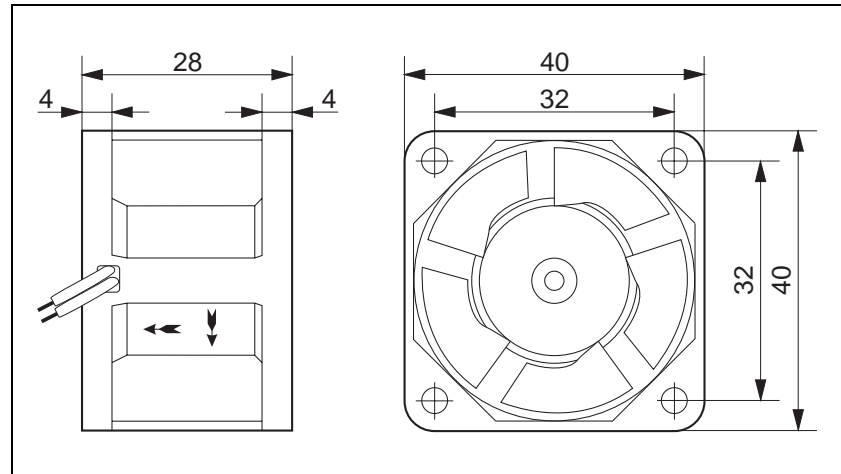


Fig. 6-2 Fan



6.2.2 Mains filter

A mains filter (fig. 6-3) can be inserted into the mains supply line for radio interference suppression.



**NOTE**

When connecting the mains filter, the EMC testing specifications of BERGER LAHR must be observed.

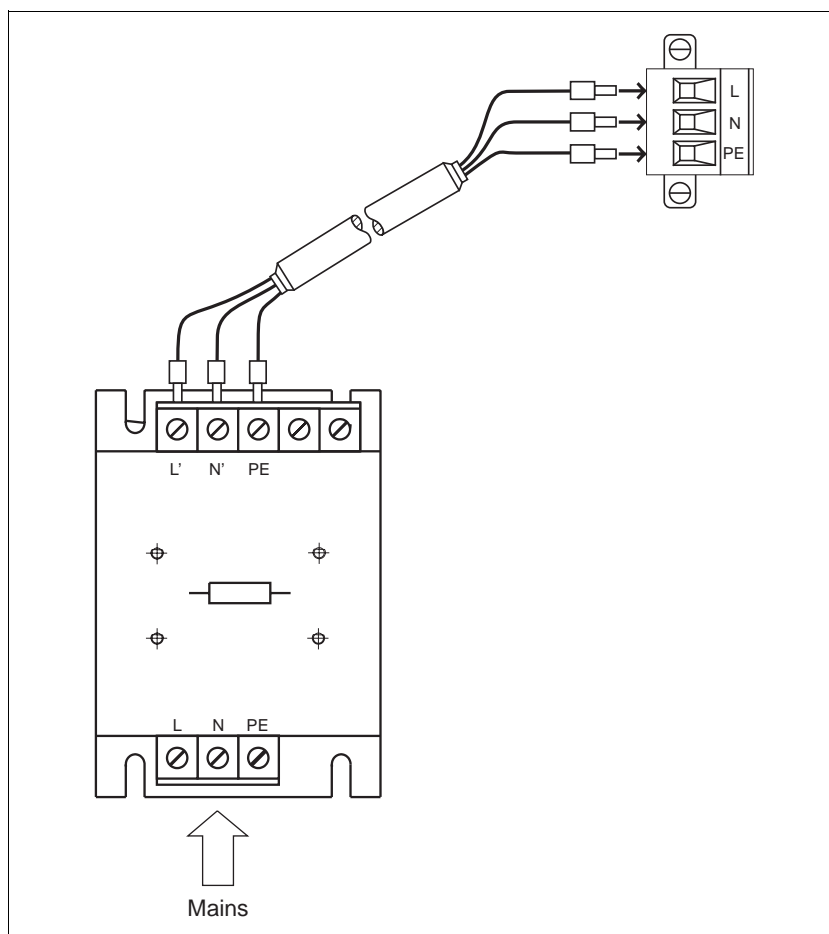


Fig. 6-3 Mains filter

**Ambient conditions**

|                                               |                     |
|-----------------------------------------------|---------------------|
| Storage temperature                           | -25°C to +70°C      |
| Operating temperature                         | 0°C to +55°C        |
| Humidity class                                | F acc. to DIN 40040 |
| Humidity class, tested to IEC 68 part 2-3 at: |                     |
| Air temperature                               | +40°C, +2°C         |
| Relative humidity                             | 93%, +2%, -3%       |
| non-condensing                                |                     |

## 6.2.3 MP 923 interface converter

### 6.2.3.1 General description

The MP 923 interface converter is used for data transmission from an RS 485 LS (RS 422) interface to a V24 (RS 232) interface and vice versa.

The interface converter must be powered either via the power supply unit connection (2-pin female diode connector) or via the RS 485 (RS 422) connector with 12 VDC. With BERGER LAHR positioning units (e.g. WDP3), power is supplied via the RS 485 (RS 422) connection.

### 6.2.3.2 Technical data

#### Electrical data

|                |                                    |
|----------------|------------------------------------|
| Voltage supply | 9.6 to 15 VDC/150 mA               |
| Interfaces     | RS 485 LS (RS 422)<br>V24 (RS 232) |

#### Mechanical data

|            |                 |
|------------|-----------------|
| Dimensions | 97 x 65 x 30 mm |
| Weight     | approx. 130 g   |

#### Ambient conditions

|                                               |                     |
|-----------------------------------------------|---------------------|
| Storage temperature                           | -25°C to +70°C      |
| Operating temperature                         | 0°C to +55°C        |
| Humidity class                                | F acc. to DIN 40040 |
| Humidity class, tested to IEC 68 part 2-3 at: |                     |
| Air temperature                               | +40°C, +2°C         |
| Relative humidity non-condensing              | 93%, +2%, -3%       |

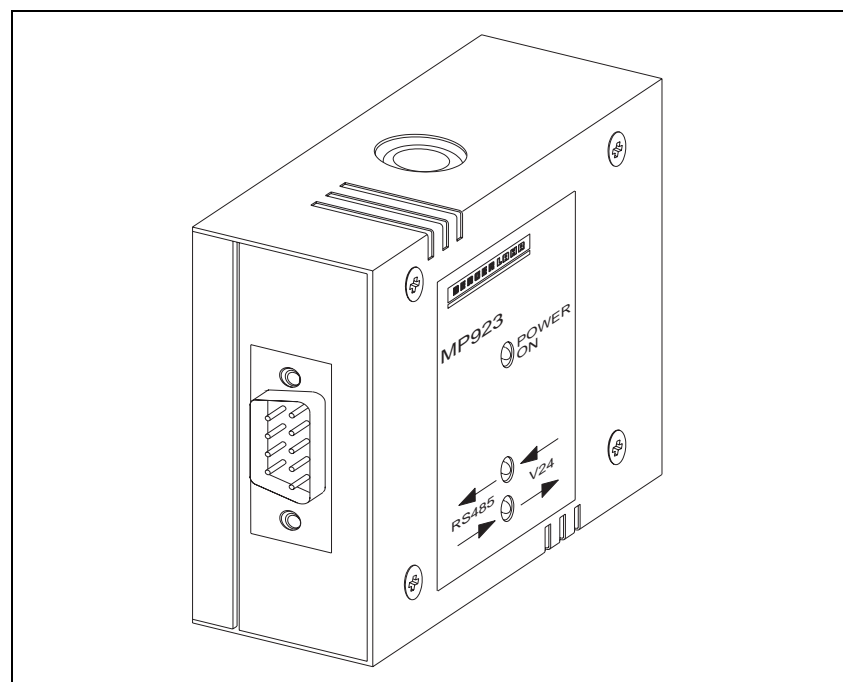


Fig. 6-4 MP 923 interface converter

### 6.2.3.3 Setup

1. Wire the MP 923 interface converter in accordance with fig. 6-5.



**NOTE**

The MP 923 is supplied with 12 VDC power via the RS 485 (RS 422) connector of the BERGER LAHR controller.



**ATTENTION**

The interface cables must be shielded on both ends via the connector shells!



**ATTENTION**

For reasons of noise immunity, the V24 (RS 232) cable should be as short as possible (15 m max.)!

2. Switch on the mains voltage.
  - The LED "POWER ON" lights up. The two other LEDs remain dark.
3. Start data transmission.
  - Depending on the sense of the data transmission, either the LED marked "RS 485 → V24" or the LED marked "RS 485 ← V24" lights up.

### 6.2.3.4 Status indicators

The status indicators show the operating status or any malfunction.

| LED            | Lit                                                                                                   | Not lit                                                   | Flashing                                                       |
|----------------|-------------------------------------------------------------------------------------------------------|-----------------------------------------------------------|----------------------------------------------------------------|
| "POWER ON"     | Supply voltage available                                                                              | Supply voltage not available                              |                                                                |
| "RS 485 → V24" | RS 485 (RS 422) interface incorrectly wired (signal lines Tx $\bar{D}$ and Rx $\bar{D}$ interchanged) | No data transmission from RS 485 (RS 422) to V24 (RS 232) | Data transmission from RS 485 (RS 422) to V24 (RS 232) enabled |
| "RS 485 ← V24" | V24 (RS 232) interface incorrectly wired (pins 2 and 3 interchanged)                                  | No data transmission from V24 (RS 232) to RS 485 (RS 422) | Data transmission from V24 (RS 232) to RS 485 (RS 422) enabled |

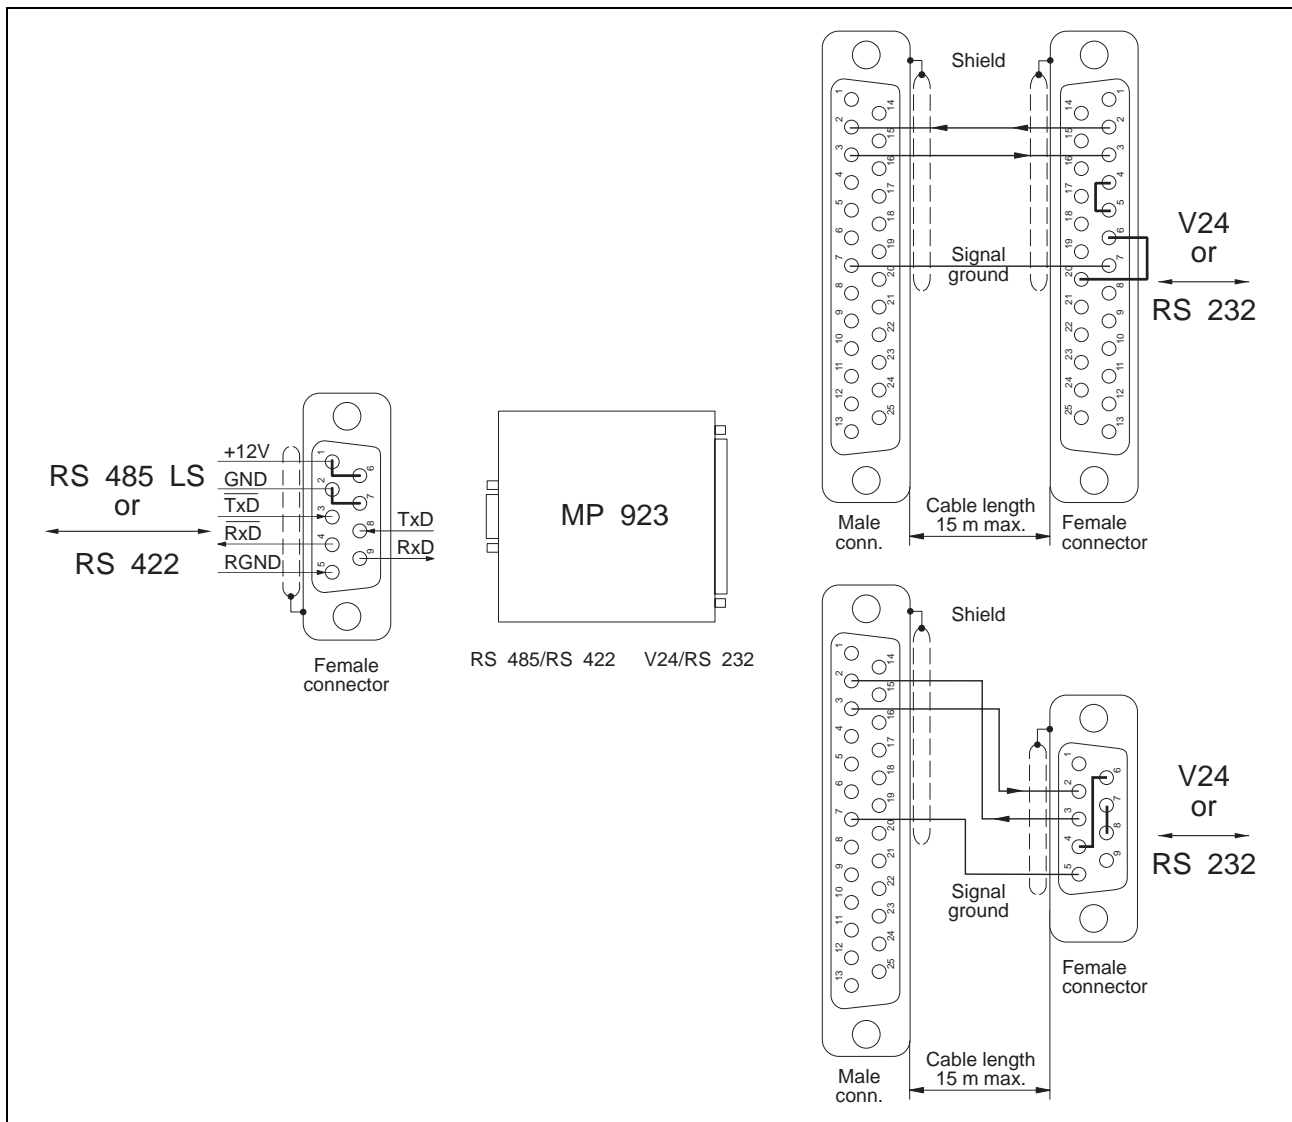


Fig. 6-5 MP 923 interface converter setup

**6.2.4 MP 924 interface distributor**

**6.2.4.1 General description**

Up to nine networkable BERGER LAHR units can be controlled from one PC when using an MP 924 interface distributor. If more than nine units are planned to be used in a network, several MP 924 interface distributors must be combined.

**6.2.4.2 Technical data**

**Electrical data**

10 serial interfaces RS 485 LS (RS 422)

**Mechanical data**

Dimensions approx. 205 x 80 x 32 mm  
Weight approx. 260 g

**Ambient conditions**

Storage temperature -25°C to +70°C  
Operating temperature 0°C to +55°C  
Humidity class F acc. to DIN 40040  
Humidity class, tested to IEC 68 part 2-3 at:  
Air temperature +40°C, +2°C  
Relative humidity 93%, +2%, -3%  
non-condensing

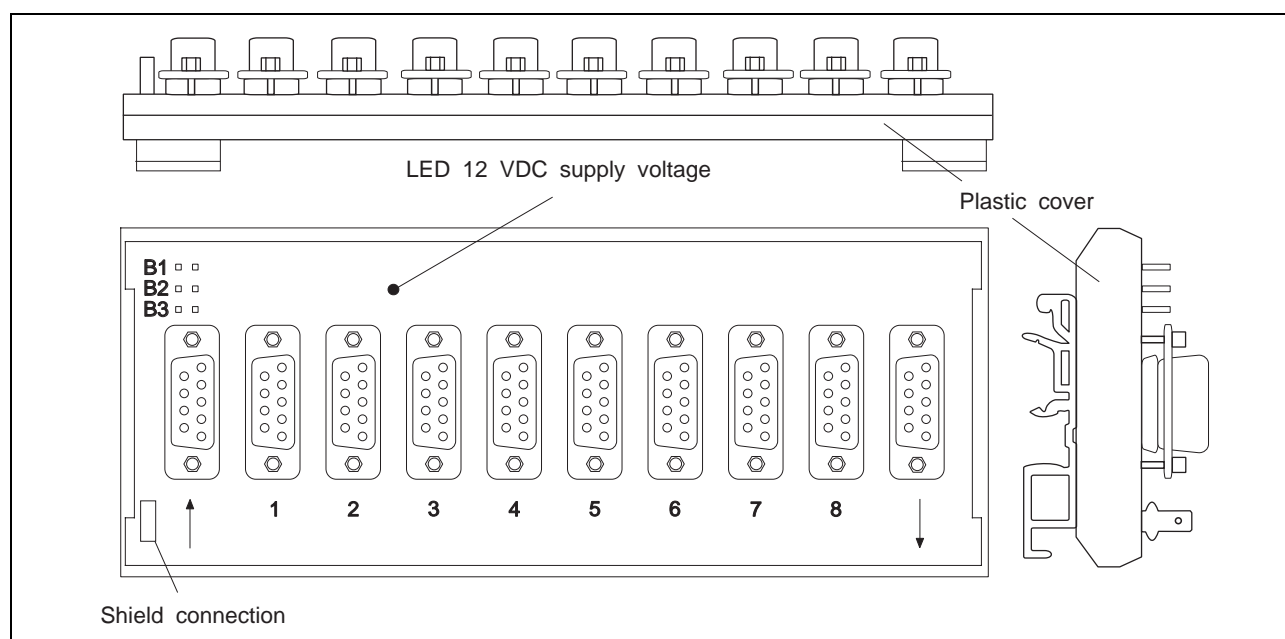


Fig. 6-6 MP 924 interface distributor

## 6.2.4.3 Setup

1. Wire the MP 924 interface distributor in accordance with fig. 6-7.  
For interface conversion RS 232 ↔ RS 485 (RS 422), use the MP 923 interface converter (see chapter 6.2.3).



### ATTENTION

*The interface cables must be shielded on both ends (connect shield on MP 924 to protective ground).*



### ATTENTION

*Never connect a terminator.*

2. If several MP 924 interface distributors are used, combine them as illustrated in fig. 6-7.
3. Set the connected units to network mode and switch them on.



### ATTENTION

*The same baud rate must be set on all units for network mode.*



### ATTENTION

*When using an MP 923 interface converter, at least one unit attached to the first MP 924 interface distributor must be switched on in order to ensure that power is supplied to the MP 923.*

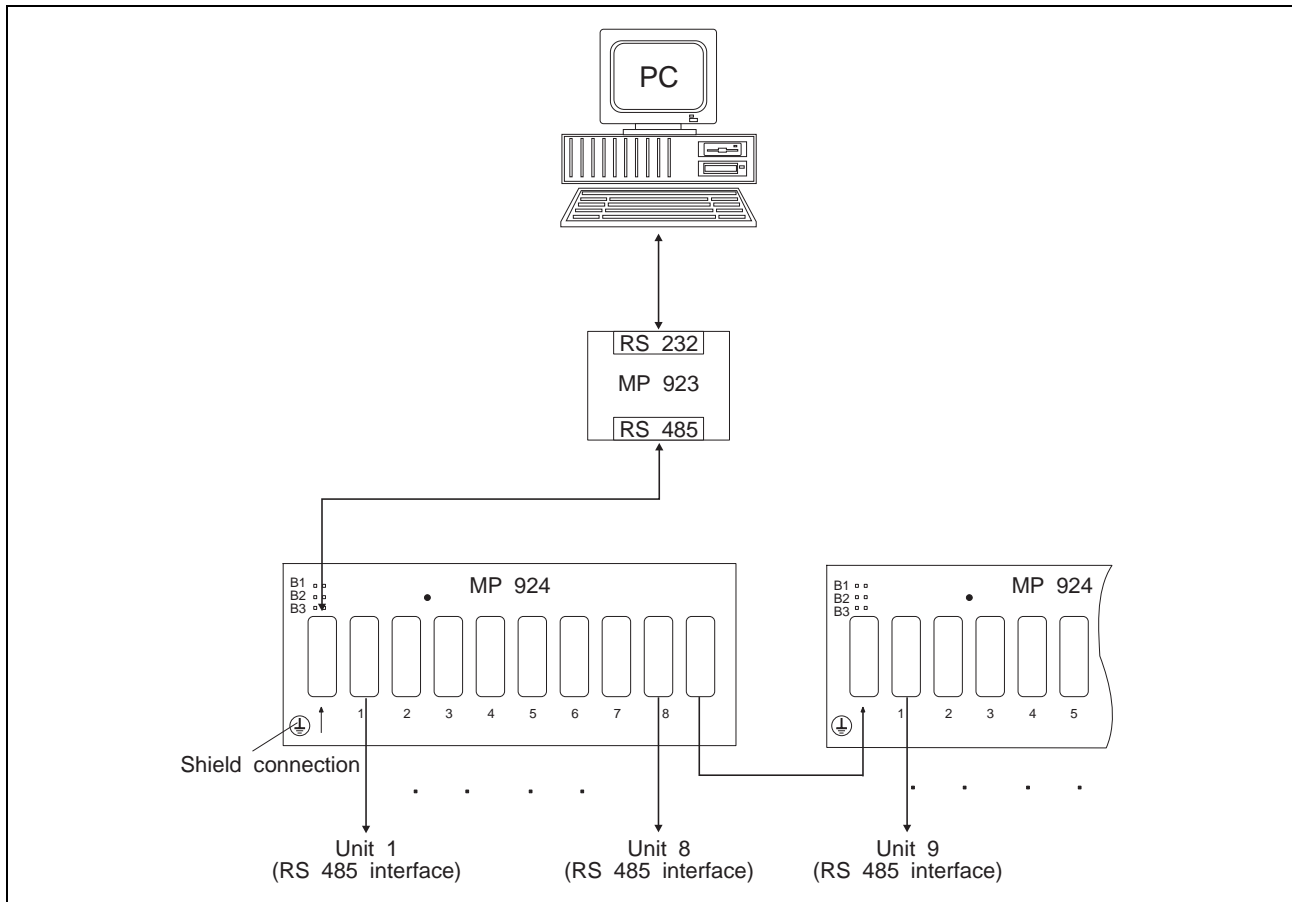


Fig. 6-7 MP 924 interface distributor setup

**6.2.5 Additional bleed resistor (only at units < RS40)**

The additional bleed resistor FZP 200 (180 ohms, 150 W) can be used for dissipating a larger amount of braking energy (fig. 6-8).



**DANGER**  
High voltages are present at the bleed resistor connections (approx. 325 VDC).



**DANGER**  
The bleed resistor heats up when a great amount of braking energy is produced.



**ATTENTION**  
Good heat dissipation must be ensured when installing the bleed resistor.

1. Switch the mains voltage OFF.
2. Provide the two bleed resistor leads with wire end ferrules on the device end.
3. Connect the two litz wires to the terminals at the bottom of the unit.

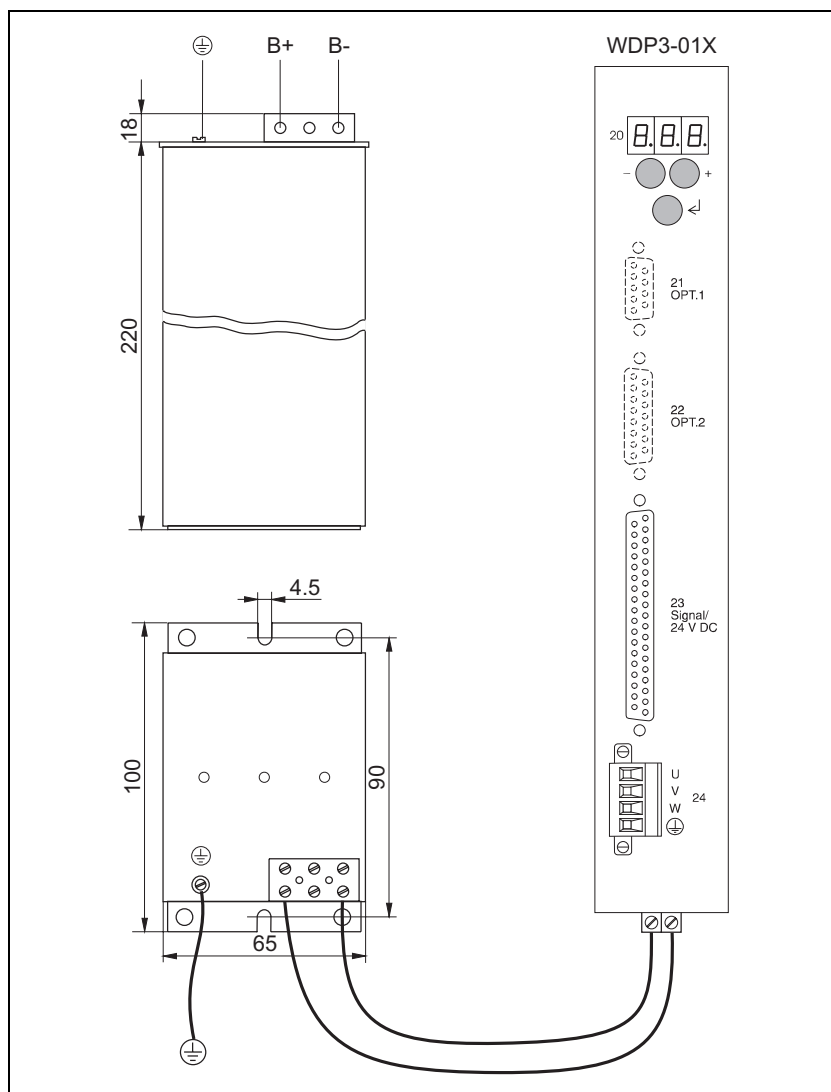


Fig. 6-8 Additional bleed resistor

### 6.3 Glossary

*A/B Encoder signals*

Pulse signals of an encoder. For one motor revolution, a defined number of pulse signals (e.g. 1000) is generated by the encoder. The encoder signals are subjected to single, double or quadruple evaluation.

*Absolute dimensions*

Refers to a system of dimensions for positioning operations. The reference point for positioning is the reference point of the system.

*Absolute positioning*

For absolute positioning, the position value refers to the zero point of the axis.

*CCW rotation*

Sense of rotation of the motor in a counterclockwise direction (as seen from front towards the motor shaft).

*Command*

The functions of a controller are accessed using commands. Commands are sent from the master to a controller (slave). The controller interprets and executes the commands.

*CW rotation*

Sense of rotation of the motor in a clockwise direction (as seen from front towards the motor shaft).

*Download*

With the download function, data are loaded into the controller from a master computer.

*Electronic gear*

Externally supplied pulses are counted as A/B encoder signals or pulse/direction signals and multiplied with a gear ratio. These pulses are used as the reference variable for stepping motor positioning.

*Encoder*

Sensor for motor position detection (actual position detection).

*Error memory*

Runtime errors are written to the controller's error memory and indicated in the controller's status display.

*Gear ratio*

Multiplication factor for positioning operations, which is composed of a numerator and a denominator (step-down gearing or step-up gearing).



### *Incremental (relative) dimensions*

Refers to a system of dimensions for the positioning unit. The reference point for positioning is the current position.

### *Input/output*

The controller is provided with a certain number of inputs and outputs through which sequential operations are controlled.

### *Interbus-S network*

Standardized field bus for data exchange in automation technology. The Interbus-S standard can be used for interconnecting several devices from different manufacturers and with different functionality through one uniform interface.

An Interbus-S network consists of a central master and up to 256 slaves. The slaves are connected to the master by a serial cable in a ring topology. Data exchange is effected by a cyclic transmission method.

### *Limit switch*

Switch for limiting the travel and for reference movements.

### *Master/slave principle*

Principle of communication in a network.

Only the master is permitted to send commands. Slaves only receive and execute commands.

### *Negative limit switch*

Limit switch in CCW (counterclockwise) direction. Motor rotation in a counterclockwise sense as seen from front towards motor shaft.

### *Network mode*

An operating mode used for a network of positioning units. Several units are connected to a host via a physical link. Selection of the units to be addressed is effected by a device polling command.

### *Positive limit switch*

Limit switch in CW (clockwise) direction. Motor rotation in a clockwise sense as seen from front towards motor shaft.

### *Power controller*

A motor is controlled by a power controller. The power controller converts positioning signals from the processor control into signals for motor control.

### *Profibus-DP network*

Standardized field bus for data exchange in automation technology. The Profibus-S standard can be used for interconnecting several devices from different manufacturers and with different functionality through one uniform interface.

A Profibus-DP network may consist of several masters and several slaves. Data exchange is effected by a cyclic transmission method.

### *Pulse/direction signals*

Signals for reference variable input for an electronic gear.

### *Reference movement*

Motor movement towards the CCW or CW limit switch or a reference switch for setting a reference point for the system of dimensions.

### *Reference point*

Position value after a reference movement or after setting the reference point.

### *Reference speed*

The reference speed is the speed at which the axis moves away from a limit switch.

### *Reference switch*

A switch which can be approached from either direction for a reference movement.

### *Relative (incremental) positioning*

For incremental positioning, the position value refers to the current position of the axis.

### *Rotation monitoring*

Rotation monitoring is used for detecting positional deviations of motor movements. The actual position is detected by an encoder and then compared with the setpoint. If the difference between actual and set position exceeds a preset value, a contouring error is reported and the motor is decelerated.

### *RS 485 interface*

Serial interface for a network configuration.

### *Teach-in*

The teach-in function is used for storing positions which have been approached by manual control.

### *Upload*

The upload function is used for reading data from the controller.

**6.4 Abbreviations**

|       |                                                    |
|-------|----------------------------------------------------|
| AC    | Alternating Current                                |
| ANOZ  | Analog interface                                   |
| ASCII | American Standard Code for Information Interchange |
| CAL   | CAN Application Layer                              |
| CAN   | CAN-Bus interface                                  |
| CMOS  | Complementary Metal-Oxide Semiconductor            |
| DC    | Direct Current                                     |
| DP    | Decentralized peripheral equipment                 |
| E     | Encoder                                            |
| FI    | Fault current                                      |
| HU    | Height unit                                        |
| I     | Input                                              |
| IBS   | Interbus-S interface                               |
| I/O   | Input/output                                       |
| LED   | Light Emitting Diode                               |
| M     | Motor                                              |
| PBDP  | Profibus-DP interface                              |
| PC    | Personal Computer                                  |
| PELV  | Protected Extra Low Voltage                        |
| PLC   | Programmable Logic Controller                      |
| Q     | Output                                             |



**7 Index**

|                         |            |
|-------------------------|------------|
| <b>A</b>                |            |
| Acceleration            | 3-8        |
| Accessories             | 2-2, 6-2   |
| AUTOM input             | 1-10       |
| <b>B</b>                |            |
| Baud rate               | 3-8        |
| Braking ramp with ANOZ  | 3-9        |
| <b>C</b>                |            |
| Command summary         | 3-24       |
| Connections             |            |
| Analog interface        | 1-14, 2-14 |
| CAN-Bus interface       | 1-14       |
| Encoder interface       | 1-15, 2-21 |
| Field bus interface     | 1-5, 2-20  |
| Interbus-S interface    | 1-14       |
| Mains connection        | 1-12, 2-7  |
| Motor connection        | 1-12, 2-8  |
| Profibus-DP interface   | 1-14       |
| RS 232 serial interface | 1-13, 2-16 |
| RS 485 serial interface | 1-13, 2-18 |
| Signal interface        | 1-13, 2-9  |
| <b>D</b>                |            |
| Device functions        | 1-2        |
| <b>E</b>                |            |
| Electronic gear         | 1-9, 3-26  |
| Encoder signal type     | 3-8        |
| A/B signals             | 1-9, 2-22  |
| Pulse/direction         | 1-9, 2-23  |
| Error code              | 4-3        |

## F

|             |     |
|-------------|-----|
| Front panel | 1-1 |
| Operation   | 3-4 |
| Functions   | 3-1 |

## G

|            |     |
|------------|-----|
| Gear ratio | 3-8 |
|------------|-----|

## I

|                         |           |
|-------------------------|-----------|
| Interbus-S diagnostics  | 3-12, 4-1 |
| Interface configuration | 1-2, 3-1  |

## M

|                                            |           |
|--------------------------------------------|-----------|
| Malfunctions                               | 4-3       |
| Manual mode via inputs/outputs             | 1-6, 3-15 |
| Manual movement via front panel            | 3-14      |
| Manual speed, fast                         | 3-9       |
| Manual speed, slow                         | 3-9       |
| Maximum allowed distance from limit switch | 3-8       |
| Maximum speed                              | 3-8       |
| Mode selection                             | 1-10      |
| Motor phase current                        | 3-8       |

## N

|                 |     |
|-----------------|-----|
| Network         |     |
| Field bus       | 1-7 |
| RS 485          | 1-7 |
| Network address | 3-8 |

## O

|                            |           |
|----------------------------|-----------|
| On-line command processing | 1-7, 3-23 |
| Operating mode             | 3-8       |
| Operation with brake       | 3-3       |

---

|                                      |           |
|--------------------------------------|-----------|
| Oscillator frequency                 | 3-8       |
| Oscillator mode via analog interface | 1-8, 3-30 |
| Oscillator mode via inputs/outputs   | 1-8, 3-28 |
| Output states                        | 4-2       |

**P**

|                                            |           |
|--------------------------------------------|-----------|
| Parameter menu                             | 3-9       |
| Parameter setting                          | 3-7       |
| Acceleration                               | 3-8       |
| Baud rate                                  | 3-8       |
| Braking ramp with ANOZ                     | 3-9       |
| Encoder signal type                        | 3-8       |
| Gear ratio                                 | 3-8       |
| Higher oscillator frequency                | 3-8       |
| Lower oscillator frequency                 | 3-9       |
| Manual speed, fast                         | 3-9       |
| Manual speed, slow                         | 3-9       |
| Maximum allowed distance from limit switch | 3-8       |
| Maximum speed                              | 3-8       |
| Motor phase current                        | 3-8       |
| Network address                            | 3-8       |
| Operating mode                             | 3-8       |
| Parameter menu                             | 3-9       |
| Reference speed                            | 3-8       |
| Rotation monitoring                        | 3-8       |
| Standstill current                         | 3-8       |
| System of dimensions                       | 3-8       |
| Voltage at maximum speed                   | 3-9       |
| Zero window                                | 3-9       |
| Position processing                        | 1-6, 3-19 |
| Position set input                         | 3-10      |
| Principle of a reference movement          | 1-11      |

**R**

|                     |                 |
|---------------------|-----------------|
| Reference movement  | 3-13, 3-19      |
| Reference speed     | 3-8             |
| Rotation monitoring | 1-10, 3-8, 3-32 |

## S

|                                           |            |
|-------------------------------------------|------------|
| Setting dimensions                        | 3-13, 3-19 |
| Standstill current                        | 3-8        |
| Starting positioning and other operations | 3-13       |
| Status display                            | 3-5, 4-1   |
| System of dimensions                      | 3-8        |

## T

|                                      |           |
|--------------------------------------|-----------|
| Teach-in mode via inputs/outputs     | 1-6, 3-17 |
| Teach-in via front panel             | 3-11      |
| Timing diagram                       |           |
| Electronic gear                      | 3-27      |
| Encoder signals A/B                  | 2-22      |
| Manual mode                          | 3-15      |
| Operation with brake                 | 3-3       |
| Oscillator mode via analog interface | 3-31      |
| Oscillator mode via inputs/outputs   | 3-29      |
| Position processing                  | 3-20      |
| Pulse/direction                      | 2-23      |
| Teach-in                             | 3-18      |

## U

|                 |           |
|-----------------|-----------|
| Upload/download | 1-6, 3-22 |
|-----------------|-----------|

## V

|                          |      |
|--------------------------|------|
| Value display            | 3-12 |
| Ventilation              | 2-4  |
| Voltage at maximum speed | 3-9  |

## W

|               |     |
|---------------|-----|
| Wiring layout | 2-6 |
|---------------|-----|

## Z

|             |     |
|-------------|-----|
| Zero window | 3-9 |
|-------------|-----|



## **8 Corrections and additions**

At present there are no corrections or additions.

## ***Corrections and additions***

---